



BOSCH

Cordless Orbital Sander

EasySander 12 | 3 603 J76 980

Table of Content


Spare parts list.....	2
Illustration - Type.....	3

Spare parts list

Item	Part Number	Description
1	1 605 806 5VN	Housing
4	2 609 005 281	Electronic Assembly
9	1 601 11C 2RM	Manufacturer's nameplate EasySander 12
18	2 603 490 022	Screw 4x16
19	2 603 490 017	Torx Oval-Head Screw 3x10
21	2 609 005 282	Lens
23	2 609 001 421	Oscillation Insert
24	2 609 005 283	Vibration Foot
26	2 609 005 284	Slider
30	2 609 005 286	Rubber Plug
91	1 607 A35 07N	Battery Pack PBA 12V, 2,0Ah O-A
681	2 609 005 888	Fitting
802	2 609 005 287	DC motor 10,8V
808	1 601 11A 6GF	Nameplate
820	2 609 001 937	Sander Plate

Illustration - Type - E

3 603 J76 980
 Issue | 18-07-11
 Stand | **Fig./Abb. 1**

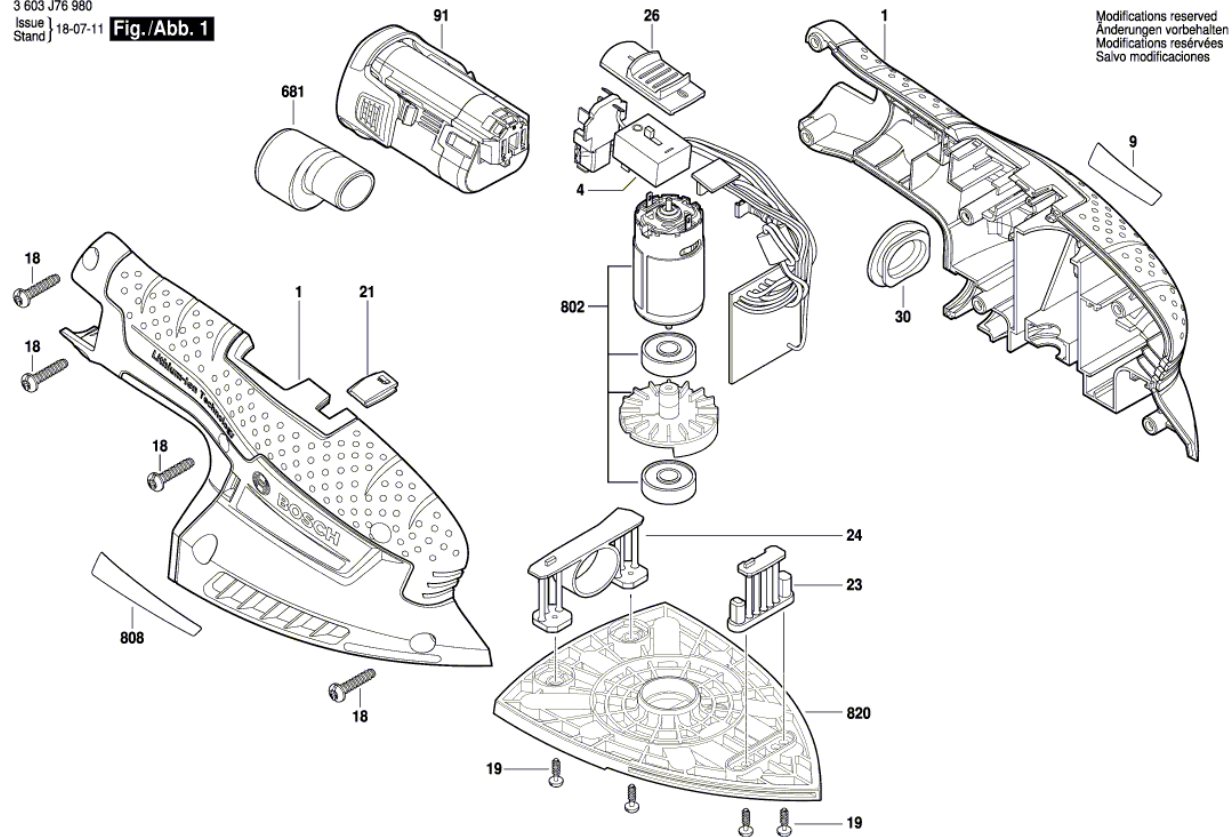

Modifications reserved
 Änderungen vorbehalten
 Modifications réservées
 Salvo modificaciones