



## Parts List for FS1200RP Type 1

Item Number	Part Number	Description	Qty Required
1	5140035-01	EXTRACTOR	1
2	000000-00	No Longer Available	1
3	5140035-03	SCREW	4
3	5140035-03	SCREW	8
4	5140035-04	CAP	1
5	5140035-05	SCREW	1
5	5140035-05	SCREW	4
6	5140035-06	MODULE	1
7	5140035-07	BRACKET	1
8	5140035-08	SHEATH	1
9	5140035-09	BELLOWS	1
10	5140035-10	JOINT	1
11	5140035-11	RING	1
12	5140035-12	SCREW	2
13	5140035-13	CLAMP	2
14	5140035-14	MOTOR HOUSING	1
15	5140035-15	BRUSH COVER	2
16	5140035-16	BRUSH	2
17	5140035-17	BRUSH HOLDER	2
18	5140035-18	BEARING	1
19	5140035-19	FIELD	1
20	5140035-20	WASHER	2
21	5140035-21	SPRING WASHER	4
21	5140035-21	SPRING WASHER	6
22	5140035-22	SCREW	2
23	5140035-23	ARMATURE	1
24	5140035-24	CIRCLIP	1

## Parts List for FS1200RP Type 1

Item Number	Part Number	Description	Qty Required
25	5140037-25	COLLET	1
25	5140035-25	COLLET	1
26	5140035-26	COLUMN	1
26	5140035-26	COLUMN	2
27	5140035-27	COLLET NUT	1
28	5140035-28	SUPPORT	1
29	5140037-18	PAD,SOFT	1
30	5140035-30	HANDLE COVER	1
31	5140035-31	SCREW	2
32	5140035-32	CORD PROTECTOR	1
33	5140035-33	SWITCH	1
34	5140035-34	CORD CLAMP	1
35	5140035-35	SCREW	4
36	5140035-36	COVER	1
37	5140035-37	WAVE WASHER	1
38	5140035-38	SCREW	2
38	5140035-38	SCREW	4
39	5140035-39	RIGHT HANDLE	1
40	5140035-40	SCREW	3
41	5140035-41	BEARING COVER	1
42	5140035-42	BALL BEARING	1
43	5140035-43	SPRING	1
44	5140035-44	RING	1
45	5140035-45	SUPPORT	1
46	5140035-46	NUT	1
47	5140035-47	SCREW	1
48	5140035-48	LEVER	1

## Parts List for FS1200RP Type 1

Item Number	Part Number	Description	Qty Required
49	5140035-49	SET SCREW	1
50	5140035-50	COVER	1
51	5140035-51	SCREW	1
51	5140035-51	SCREW	4
52	5140035-52	COVER	1
53	5140035-53	SCREW	4
53	5140035-53	SCREW	6
54	5140035-54	SPRING	1
55	5140035-55	SPINDLE LOCK	1
56	5140035-56	LEFT HANDLE	1
57	5140035-57	WASHER	4
58	5140037-19	O-RING	1
59	5140037-20	WASHER	1
60	5140035-60	HANDLE COVER	1
61	5140035-61	WING BOLT	1
62	5140035-96	NUT	2
63	5140035-63	KNOB	1
64	5140035-64	SCALE RING	1
65	5140035-65	RUBBER PLUG	1
66	5140035-97	BOLT	1
67	5140035-67	BRACKET	1
68	5140035-68	GEAR	1
69	5140037-21	CIRCLIP	1
70	5140035-70	ADJUSTING ROD	1
71	5140035-71	BUSHING	1
72	5140035-72	ADJUSTMENT KNOB	1
73	5140035-73	SCREW	1

## Parts List for FS1200RP Type 1

Item Number	Part Number	Description	Qty Required
74	5140035-74	RING	1
75	5140035-75	JOINT	1
76	5140035-76	EXTENSION SPRING	1
77	5140035-95	SCREW	1
78	5140035-78	WASHER	1
79	5140035-79	CHIP GUARD	1
80	5140035-80	SHIELD	1
81	5140035-61	WING BOLT	2
82	5140035-82	SPRING	2
83	5140035-83	COLUMN	1
84	5140037-36	PLUNGE ROD	1
85	5140035-85	BASE	1
86	5140037-23	WASHER	1
87	5140035-87	SUB-BASE	1
88	5140035-69	ADJUSTER	1
89	5140035-98	BOLT	1
90	5140035-86	NUT	2
91	5140037-22	CORD	1
92	5140035-92	SPRING	1
93	5140035-93	STEEL BALL	1
94	5140035-94	TURRET STOP	1
95	5140037-24	O-RING	1
96	5140035-88	SCREW	2
97	5140035-90	GUIDE BUSHING	1
99	5140037-10	ROD	2
100	5140037-11	FENCE	1
101	5140037-12	WASHER	2

## Parts List for FS1200RP Type 1

Item Number	Part Number	Description	Qty Required
102	5140037-13	SPRING WASHER	2
103	5140037-14	SCREW	2
104	5140037-15	WRENCH	1
105	5140037-16	SCREW	1
106	5140037-17	ROD	1
107	5140037-29	BRAND LABEL	1
108	5140037-30	NAMEPLATE	1