



862

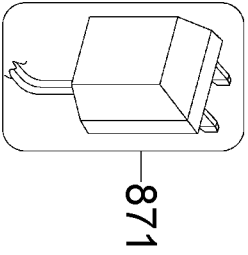


871

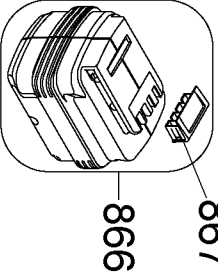


866

867

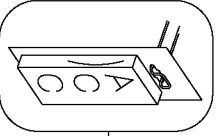

856

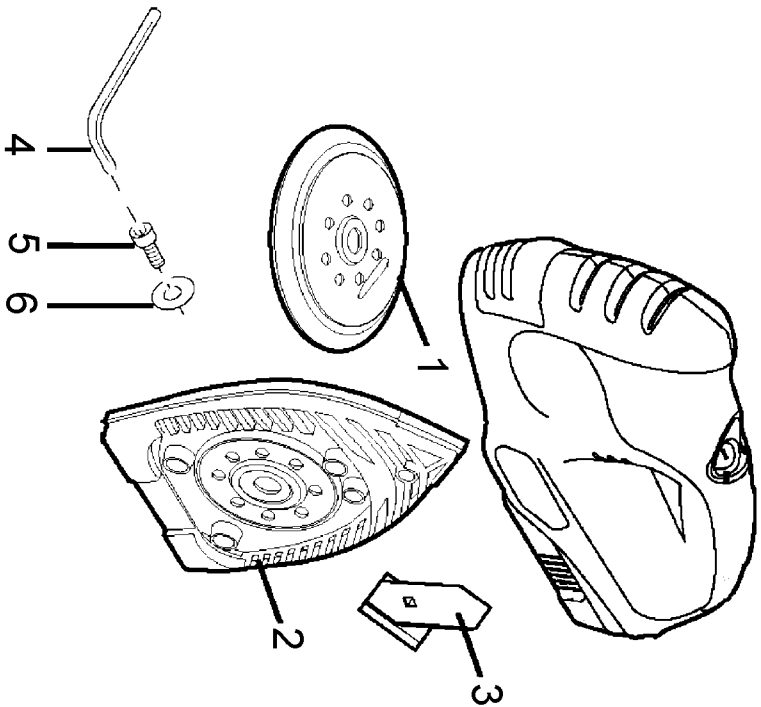

4

5

6

1

2

3

## Parts List for FS18S Type 1

Item Number	Part Number	Description	Qty Required
1	581103-00	PLATEN	1
2	5106579-00	PLATEN ASSY.	1
3	579112-00S	FINGER PLATEN	1
4	5106602-00	ALLEN WRENCH	1
5	5106605-00	SCREW	1
6	5106603-00	WASHER	1
856	000000-00	No Longer Available	1
856	5106600-00	VACUUM ADAPTER	1
856	579193-00	ACCY PACK	1
862	5106625-00	CARRY BAG	1
866	90503508	BATTERY PACK	1
867	5102026-00	BATTERY CAP	1
871	5103069-12	CHARGER	1