



## Parts List for FSD182RC2 Type 1

Item Number	Part Number	Description	Qty Required
2	5101752-00	WASHER	1
3	419626-00	BEARING WASHER	1
4	311993-00	SCREW	4
5	486562-00	SCREW	1
6	330019-05	SCREW,PLASTITE	2
7	5102349-06	MOTOR & PINION	1
8	5100117-00	SPRING	1
9	5100115-00	BIT RELEASE RING	1
10	497927-02	RETAINING CLIP	1
11	5100776-00	HUB CAP	1
12	000000-00	No Longer Available	1
13	5100199-00	TOP PLATE	1
14	5100139-01	LEVEL	1
15	5100111-00	ACTUATOR FWR/REV	1
16	000000-00	No Longer Available	1
17	5100133-02	CLAMSHELL SET	1
18	5100850-09	TRANSMISSION	1
19	000000-00	No Longer Available	1
20	5100976-00	TERMINAL BLOCK	1
21	5100788-04	NAMEPLATE	1
22	5100101-03	ACTUATOR	1
23	5100153-01	SHIFTER WIRE	1
24	5100035-01	SPRING	2
846	000000-00	No Longer Available	1
866	90503508	BATTERY PACK	2
867	5102026-00	BATTERY CAP	2
871	90507163	RADIO CHARGER	1

## Parts List for FSD182RC2 Type 1

Item Number	Part Number	Description	Qty Required
871	5104533-00	DRAWER	2
871	5104532-00	ANTENNA	1