



Parts List for FSX1800HD Type 1

Item Number	Part Number	Description	Qty Required
1	5145507-04	SCREW	1
4	5145395-01	SIDE COVER	1
5	000000-00	No Longer Available	1
6	5145496-00	SPRING	2
7	5146420-02	SCREW	1
11	5103096-01	SCREW	1
12	5147021-00	KEYLESS CHUCK	1
13	5147404-00	SWITCH VSR	1
15	5147031-00	MOTOR & GEARBOX	1
16	90521058	NAMEPLATE	1
17	5145396-04	SUPPORT	1
18	5146269-00	TOP COVER	1
19	5146268-01	SHIFTER ASSEMBLY	1
20	5145751-01	F/R ACTUATOR	1
21	148354-03	BIT CLIP	2
22	5146250-00	SUPPORT PLATE	1
23	5146249-00	COVER PLATE	1
24	5145507-00	SCREW	1
25	5146420-01	SCREW	4
26	419581-01	BIT	1
28	5146420-00	SCREW	1
29	5147154-01	SIDE HANDLE	1
866	90506197	BATTERY PACK	1
867	5102026-00	BATTERY CAP	2
871	FS240FC	CHARGER	1