



No.	Product Model#	Part Number	Description	Qty
1	FX5141-Z	5610264001	Screw	6
2	FX5141-Z	3133174001	Base	1
3	FX5141-Z	5610241001	Screw	31
4	FX5141-Z	2828969001	Trigger Assembly	1
5	FX5141-Z	3900538001	L R Handle Set	1
6	FX5141-Z	4892444001	USB PCB	1
7	FX5141-Z	3133040001	Switch Cover	1
8	FX5141-Z	2828968001	LED Cover Assembly	1
9	FX5141-Z	3133148001	Switch Button	1
10	FX5141-Z	3133411001	USB Cover	1
11	FX5141-Z	2828993001	Quick Chuck Lever Assembly	2
12	FX5141-Z	2824135001	Side Lamp Assy	2
13	FX5141-Z	2828958001	Gasket Assembly	1
14	FX5141-Z	2828967001	Left and Right Support Assembly	1
15	FX5141-Z	2828963001	Front Housing Assembly	1
16	FX5141-Z	3133115001	Decorative Frame	1
17	FX5141-Z	2831213001	Main Electric Assembly	1
18	FX5141-Z	3133149001	Switch Button	1
19	FX5141-Z	3650206001	Pothook	2
20	FX5141-Z	2828962001	Rear Housing Assembly	1
21	FX5141-Z	3133119001	Rear Cover	1
22	FX5141-Z	3123928004	Rubber Pole	4
23	FX5141-Z	3133150001	Cover Plate	1
24	FX5141-Z	2828966001	Knob Assembly	1
25	FX5141-Z	2828961001	Adjusting Plate Assembly	1
26	FX5141-Z	3650301001	Wire Bracket	1
27	FX5141-Z	2828960001	Connection Block Assembly	3
28	FX5141-Z	3552177001	Connecting Rod	3
29	FX5141-Z	5670641001	Knurled Pin	3
30	FX5141-Z	3133044001	Support Leg	3
31	FX5141-Z	5670640001	Knurled Pin	3
32	FX5141-Z	2828959001	Hoop Assembly	1
33	FX5141-Z	2828974001	Bolt and Nut Assembly	1
34	FX5141-Z	2828957001	Hoop Assembly	1
35	FX5141-Z	2828956001	Button Assembly	1
36	FX5141-Z	2831279001	LED Electric Assembly	1
37	FX5141-Z	2828964001	LED Holder Assembly	1
38	FX5141-Z	5610232003	Tapping Screw	1
39	FX5141-Z	5610222002	Screw	2
40	FX5141-Z	3403370001	Screw Cover	1
41	FX5141-Z	5620150001	Screw	1