



BOSCH

Multipurpose tool

GOP 30-28 | 3 601 B37 080

Table of Content

Spare parts list.....	2
Illustration - Type.....	3

Spare parts list

Item	Part Number	Description
4	2 609 125 028	Electronics Module
5	2 609 120 103	Power supply cord H05VV-F CN 2,65m 2 x 0,75mm
6	2 600 703 012	Grommet Ø6,5-Ø6,9x95 MM
7	2 601 035 001	Cable Clip
10	2 609 100 929	Ball Joint
12	1 607 233 437	Electronics Module
15	1 619 P09 249	Brush Holder
16	2 609 100 914	Switch Slide
17	2 609 100 915	Switch Button
18	2 609 100 911	Brush-Cover
19	2 609 100 912	Brush-Cover
20	2 609 100 909	Housing Cover
21	2 609 101 664	Gear Cover
24	2 609 101 674	Air-Deflector Ring
25	2 609 199 957	Gear Box
31	2 609 170 312	Rubber Gasket
36	2 600 210 056	O-Ring 31,0x2,0 MM
37	2 609 112 154	Screw
38	2 603 490 016	Torx Oval-Head Screw 3x8
39	2 603 490 020	Torx Oval-Head Screw 4x8
40	2 603 490 022	Screw 4x16
41	2 603 490 024	Torx Oval-Head Screw 4x25
43	2 609 136 619	Reference Plate
46	1 619 P02 809	Spiral Spring
59	2 609 101 682	Safety Cover
653	2 609 110 831	Key
801	2 609 199 344	Housing Assembly
803	2 609 199 961	Armature 220-240V
810	1 619 P02 870	Carbon-Brush Set

Illustration - Type - E

3 601 B37 080
Issue
Stand | 16-09-13

Fig./Abb. 1

