


**NOTE: Order parts by Catalog Number only.
DO NOT order by Reference Number.**

Ref. No.	Catalog No.	Description	Ref. No.	Catalog No.	Description
1	17993	Belt Guard Assembly	20	18058	Throttle Control
2	17998	Set Screw	21	18063	Throttle Unloader
3	18003	Belt	22	17878	Gauge, Left
4	18008	Filter Assembly	23	17873	Coupler
5	18013	Filter Element	24	17793	Regulator
6	18018	Screw	25	17773	Gauge, Right
7	18023	3/8" Nylon Tube	26	18068	Pump
8	17868	Elbow Fitting	27	18073	Discharge Tube
9	17798	Safety Valve	28	18078	Flywheel
10	17783	Screw, Torx	29	18083	Pulley
11	18028	Handle Grip	30	18088	Key, 3/16"
12	17913	Drain Valve	31	18093	Set Screw, Square Head
13	17918	Plug	32	18098	Brace Assembly
14	18033	Tank	33	18103	Engine Complete
15	17853	Rubber Foot	34	18108	Screw, Hex Head
16	18038	Screw	35	18113	Washer
17	18043	Axle rod	36	18118	Locknut
18	18048	Plug	37	18123	Wire Retainer
19	18053	Wheel, 10"			

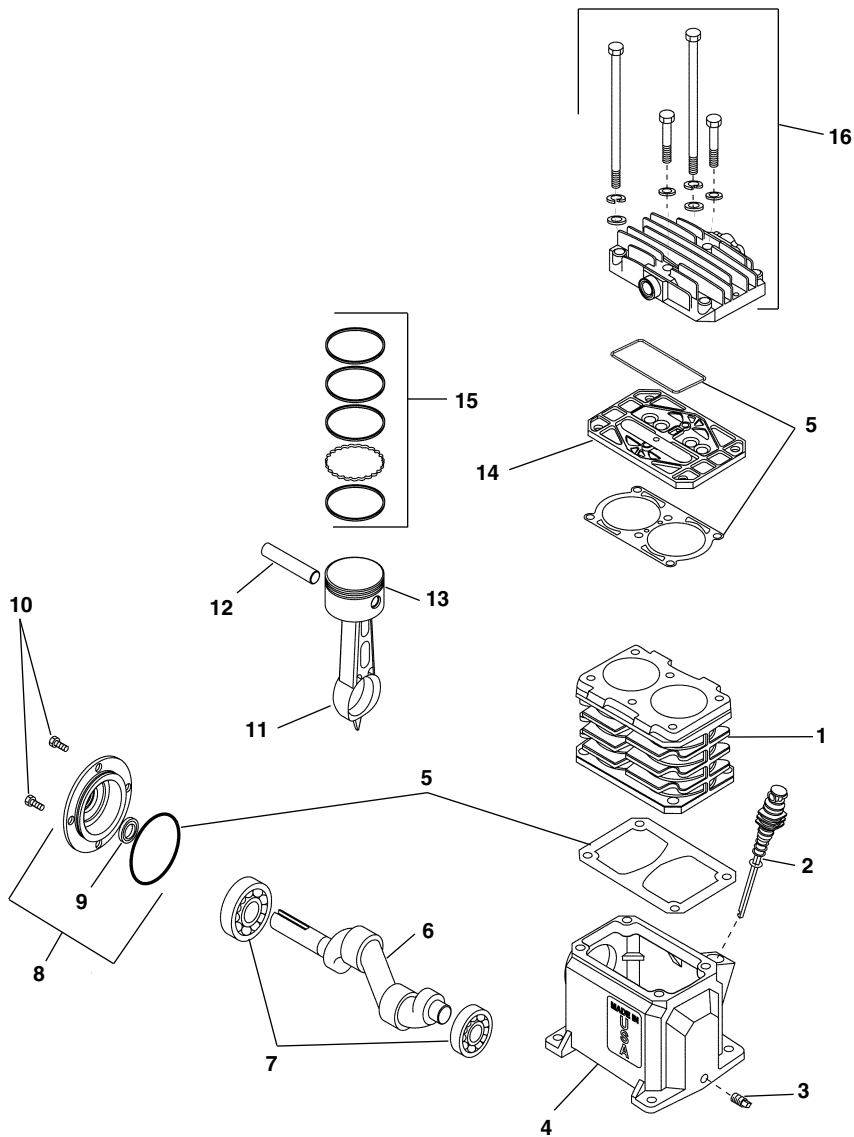

**NOTE: Order parts by Catalog Number only.
DO NOT order by Reference Number.**

Ref. No.	Catalog No.	Description	Ref. No.	Catalog No.	Description
1	18128	Cylinder	9	18178	Oil Seal
2	18133	Dipstick Breather	10	18183	Cap Screw
3	18138	Oil Drain Plug	11	18158	Connecting Rod
4	18143	Crankcase	12	18163	Piston Pin
5	18198	Gasket Kit	13	18168	Piston
6	18153	Crankshaft	14	18188	Valve Plate
7	18148	Ball Bearing	15	18203	Piston Ring Set
8	18173	Bearing Cap	16	18193	Cylinder Head w/bolts