



BOSCH

Cordl Reciprocating Saw

GSA 185-LI | 3 601 FC0 080

Table of Content

Spare parts list.....	2
Illustration - Type.....	4

Spare parts list

Item	Part Number	Description
2	1 619 PB7 516	Stator
4	1 619 PB7 518	Electronics Module
9	1 619 PB9 245	Label
10	1 619 PB9 258	Label
22	1 619 PB7 526	Roller Drum
23	1 619 PB7 527	Needle bearing
24	1 619 PB7 528	Hex Socket Head Cap Screw
25	1 619 PB7 529	Screw
26	1 619 PB7 530	Gear Cover
29	1 619 PB7 533	Compression Spring
38	1 619 PB7 542	Circlip
39	1 619 PB7 543	Seal Ring
40	1 619 PB7 544	Flange
41	1 619 PB7 545	Felt seal ring
42	1 619 PB7 546	Clamping Plate
43	1 619 PB7 547	Screw
44	1 619 PB7 548	Seal Ring
45	1 619 PB7 549	Guide Sleeve
46	1 619 PB7 550	Pin
47	1 619 PB7 551	Aligning plate
48	1 619 PB7 552	Plunger Bar
52	1 619 PB7 556	Holding Sleeve
53	1 619 PB7 557	Base Plate
54	1 619 PB7 558	Clamp block
55	1 619 PB7 559	Spring Washer
56	1 619 PB7 560	Hex Socket Head Cap Screw
57	1 619 PB7 561	Cover
58	1 619 PB7 562	groove ball bearing
59	1 619 PB7 563	Plain Washer
60	1 619 PB7 564	Hex Socket Head Cap Screw
61	1 619 PB7 565	Countersunk-Head Screw
62	1 619 PB7 566	Support
63	1 619 PB7 567	Tapping Screw
64	1 619 PB7 568	Circlip
65	1 619 PB7 569	O-Ring

Spare parts list

Item	Part Number	Description	
66	1 619 PB7 570	Cap	
67	1 619 PB7 571	Spring	
68	1 619 PB7 572	Hexagon Socket Screw Key	
69	1 619 PB7 573	Indicator Plate	
70	1 619 PB7 574	Tapping Screw	
71	1 619 PB7 575	Motor cover	
72	1 619 PB7 576	Spring	
73	1 619 PB7 577	Tapping Screw	
74	1 619 PB7 578	Rubber Bar	
75	1 619 PB7 579	Piston Pin	
76	1 619 PB7 580	Connecting Plate	
77	1 619 PB7 581	Locking Level	
84	1 619 PB7 588	Cross Recessed-Head Screw	
85	1 619 PB7 589	Base Plate	
86	1 619 PB7 590	Control Knob	
91	1 607 A35 0AT	Battery Pack	GBA 18V 8.0Ah ProCore SCM
91	1 607 A35 0LR	Battery Pack SCM	GBA 18V 5.5 Ah XL ProCore
95	1 619 PB7 599	Plain Washer	
100	1 619 PB7 604	Balance Weights	
102	1 619 PB7 606	Plain Washer	
105	1 619 PB8 776	Rubber Plug	
653	2 607 225 937	Charger	CN GAL 1880 CV 220V/14,4-18V
801	1 619 PB7 609	Housing Assembly	
803	1 619 PB7 610	Armature assembly	
808	1 619 PB9 260	Nameplate	
828	1 619 PB7 611	Pendulum assembly	
832	1 619 PB7 612	Toolholder	
851	1 619 PB7 613	Bearing set	
879	1 619 PB7 614	Assembly Hook	
892	1 619 PB7 615	Gear Housing	
897	1 619 PB7 616	Bevel Gear Set	
899	1 619 PB7 617	Eccentric Unit	

