



BOSCH

Percussion Drill

GSB 16 | 3 601 B28 080

Table of Content

Spare parts list.....	2
Illustration - Type.....	3

Spare parts list

Item	Part Number	Description
1	2 609 100 959	Housing
2	2 609 120 591	Stator 230V
4	1 607 200 508	On-Off Switch BLACK
5	2 604 460 245	Power supply cord CN 220V 2,65m 2 x 0,75mm H05 VV-F
6	2 600 707 059	Grommet Ø6,9 MM
7	2 601 035 001	Cable Clip
13	2 609 110 153	Ball Bearing 8x22x7
14	2 609 110 491	Ball Bearing
16	2 609 199 416	Brush Plate
19	2 603 490 022	Screw 4x16
24	2 609 110 537	Clip
26	2 600 590 006	Ratchet Cap
30	2 609 110 922	Pressure Plate
31	2 609 100 728	Shift Lever
32	1 903 230 010	Ball DIN 5401-5,5MM-III-ST
33	2 600 905 068	groove ball bearing 15x32x9
34	2 609 199 228	Bearing Bracket
39	2 608 571 076	Chuck
41	2 604 616 006	Compression Spring
654	2 609 199 582	Auxiliary Handle
655	2 609 005 615	Depth-Gauge
803	2 609 199 668	Armature set 230V
810	2 610 391 290	Carbon-Brush Set
835	2 609 199 665	Gear Housing
836	2 609 199 666	Spindle Assembly
839	2 607 950 007	Chuck Wrench SG2

Illustration - Type - E

3 601 B28 180
 Stand } 14-82
 Issue } 16-01-12

Fig./Abb. 1

