



**BOSCH**

# Percussion Drill

GSB 570 | 3 601 AA1 084

---

## Table of Content

Spare parts list.....	2
Illustration - Type.....	3

## Spare parts list

Item	Part Number	Description	Illu
1	1 619 PB4 746	Housing	
2	1 619 PA0 678	Field 220-240V	
4	1 619 PA0 679	On-Off Switch	
5	1 619 PA8 071	Power supply cord	
6	1 619 PB2 058	Grommet Ø 9 mm	
12	1 619 PA0 702	Suppression Capacitor	
13	1 619 PA0 681	groove ball bearing	
14	1 619 PA0 680	groove ball bearing	
16	1 619 PA1 407	Carbon-Brush Set	
19	1 619 PA0 683	Torx Oval-Head Screw	
25	1 619 PA0 684	Lever	
31	1 619 PA0 701	Change-Over Switch	
32	F 000 615 033	Ball	
34	1 619 PA0 685	Bearing Bracket	
41	1 619 PA6 599	Cable	
43	1 619 PA0 703	Suppressor Box	
56	1 619 PA0 690	Woodruff Key	
70	F 000 616 083	Tapping Screw	
71	F 000 616 084	Fastening Clamp	
803	1 619 PA0 697	Armature 220-240V	
836	1 619 PA1 858	Drilling Spindle	
839	1 619 PA1 689	Key Chuck	
839/7	1 619 PA0 694	Chuck Wrench	
651	1 619 PB4 323	Auxiliary Handle	
698	2 603 001 009	Depth-Gauge	

Illustration - Type - E

3 601 AA1 080  
 Stand } 19-10-11  
 Issue } 19-10-16

Fig. /Abb. 1



