



BOSCH

Cordless Drill Driver

GSR 10,8V-EC HX | 3 601 JD4 180

Table of Content

Spare parts list.....	2
Illustration - Type.....	3

Spare parts list

Item	Part Number	Description	
1	2 609 101 216	Housing	
4	1 607 233 5A0	Electronic Module	
5	2 609 101 213	Changeover Lever	
20	2 609 101 035	Lens	
32	2 609 199 279	Switchover Unit	
41	2 609 134 053	Sticker	
45	2 609 199 444	Gear Box	
70	2 609 110 537	Clip	
91	1 607 A35 0C5	Battery Pack	GBA 12V 2.0Ah Li SCM
101	2 609 110 883	Screw	
102	2 609 111 575	Cap Nut	
105	2 609 101 368	Color clip	
653	2 607 225 303	Fast Charger	CN 220/10,8V, 30 MIN.
656	2 609 199 669	Color clip	
657	2 609 199 670	Clip	
658	2 609 199 748	Bit holder	
802	2 609 199 654	Brushless DC motor	10,8V

Illustration - Type - E

3 601 JD4 180
 Stand } 13-09
 Issue } 13-10-09

Fig./Abb. 1

