



BOSCH

Cordless Drill Driver

GSR 14,4-2 | 3 601 J18 G80

Table of Content

Spare parts list.....	2
Illustration - Type.....	3

Spare parts list

Item	Part Number	Description	
1	2 609 100 626	Housing	
4	2 609 199 070	On-Off Switch	
5	2 609 100 744	Button	
9	2 609 130 867	Manufacturer's nameplate	GSR 14,4-2
25	2 609 110 495	Keyless Chuck	Ø1,0-10 MM, 3/8
32	2 609 120 202	Regulator	
45	2 609 110 493	Gear Box	
91	1 617 S00 04W	Accumulator Battery	14,4V, 1,5Ah, NiCd
101	2 609 110 201	Torx Flat-Head Screw	3x16
107	2 609 110 721	Countersunk-Head Screw	M5x20
108	2 607 001 443	Toolholder	
109	2 609 160 063	Screwdriver Bit	
653	2 607 224 727	Fast Charger	CN 220/7,2-14,4V, 1h
803	2 609 120 204	Motor	14,4V
808	2 609 131 113	Type Label	

Illustration - Type - E

3 601 J18 G00
Stand 05-07-05
Issue 05-07-12

Fig./Abb. 1

