



Parts List for HT022 Type 1

| Item Number | Part Number | Description | Qty Required |
|-------------|-------------|------------------|--------------|
| 1 | 157315-00 | WASHER,SPRING | 1 |
| 2 | 148902-00 | WASHER,PLAIN | 1 |
| 3 | 854978-00 | WASHER,SHIM | 1 |
| 6 | 90541380 | SWITCH | 1 |
| 9 | 90514920-00 | BLADE & GEAR | 1 |
| 10 | 151625-00 | BLADE,POLARIZED | 1 |
| 11 | 98022-20 | SCREW | 2 |
| 12 | 376614-01 | SPACER | 7 |
| 14 | 158495-00 | SCREW,TAPTITE | 4 |
| 15 | 747329 | SCREW | 2 |
| 16 | 90524194 | GUARD | 1 |
| 17 | 90514910 | AUXILIARY HANDLE | 1 |
| 23 | 330019-03 | SCREW | 8 |
| 29 | 90529921-01 | CONTROL KNOB | 1 |
| 30 | 90526635 | KNOB | 1 |
| 31 | 90512304 | BOLT | 1 |
| 36 | 87486-00 | CONTACT,TERM. | 1 |
| 37 | 137646-00 | TERMINAL | 2 |
| 38 | 387542-00 | BRUSH | 2 |
| 39 | 038738-00 | NUT | 1 |