

 
 


33



34

35



36

38

37

Parts List for HT160-B2 Type 1

Item Number	Part Number	Description	Qty Required
1	BD-01	COVER	1
2	BD-02	BEARING	2
3	BD-03	AXLE	1
4	BD-04	RIVET	1
5	BD-05	FLAT WASHER	1
6	BD-06	FLANGE	2
7	BD-07-41	BLADE	1
8	BD-08	SHEET	1
9	BD-09-41	BLADE	1
10	BD-10	GEAR	1
11	BD-11	SCREW	14
12	BD-12	HOUSING,RIGHT	1
13	BD-13	INSERT	1
14	BD-14	CAPACITOR	1
15	BD-15	CORD	1
16	BD-16	CORD CLAMP	1
17	BD-17	CORD PROTECTOR	1
18	BD-18	CONNECTOR	1
19	BD-19	TRIGGER SWITCH	1
20	BD-20	SPRING	1
21	BD-21	CLAMP	1
22	BD-22	TRIGGER	1
23	BD-23	SPRING	1
24	BD-24	HOUSING,LEFT	1
25	BD-25	MICRO SWITCH	2
26	BD400-26HV	MOTOR ASSEMBLY	1
27	BD-27	SCREW	4

Parts List for HT160-B2 Type 1

Item Number	Part Number	Description	Qty Required
28	BD-28	SPRING WASHER	8
29	BD-29	BEARING, ROLLER	1
30	BD-30	COVER	1
31	BD-31	BLADE JACKET	1
32	BD-32	PLASTIC	1
33	BD-33	NUT	5
34	BD-34	BLOCK	1
35	BD-35	CLAMP SHEET	1
36	BD-36	BUSHING	7
37	BD-37	SCREW	5
38	BD-38	SPRING WASHER	7
39	BD-39	SCREW	2
40	BD-40	SCREW	4
41	BD-41	BRUSH ASSY.	2
42	BD-42	LEADWIRE	1
43	BD-43	LEADWIRE	1
44	BD-44	LEADWIRE	1
45	BD-45B2	NAMEPLATE	1
46	BD-46	BRAND LABEL	1
47	BD-47	INSTRUCTION LABEL	1
48	BD400-7	BLADE ASSEMBLY	1