



Parts List for HT190-AR Type 1

Item Number	Part Number	Description	Qty Required
1	BD-01	COVER	1
2	BD-02	BEARING	2
3	BD-03	AXLE	1
4	BD-04	RIVET	1
5	BD-05	FLAT WASHER	1
6	BD-06	FLANGE	2
7	BD-07-51	BLADE	1
8	BD-08	SHEET	1
9	BD-09-51	BLADE	1
10	BD-10	GEAR	1
12	BD-12	HOUSING,RIGHT	1
19	BD-19	TRIGGER SWITCH	1
20	BD-20	SPRING	1
21	BD-21	CLAMP	1
22	BD-22	TRIGGER	1
23	BD-23	SPRING	1
24	BD-24	HOUSING,LEFT	1
25	BD-25	MICRO SWITCH	2
26	BD500-26HV	MOTOR ASSEMBLY	1
29	BD-29	BEARING, ROLLER	1
30	BD-30	COVER	1
31	BD-31	BLADE JACKET	1
32	BD-32	PLASTIC	1
34	BD-34	BLOCK	1
35	BD-35	CLAMP SHEET	1
46	BD-46	BRAND LABEL	1
47	BD500-7	BLADE ASSEMBLY	1