


847

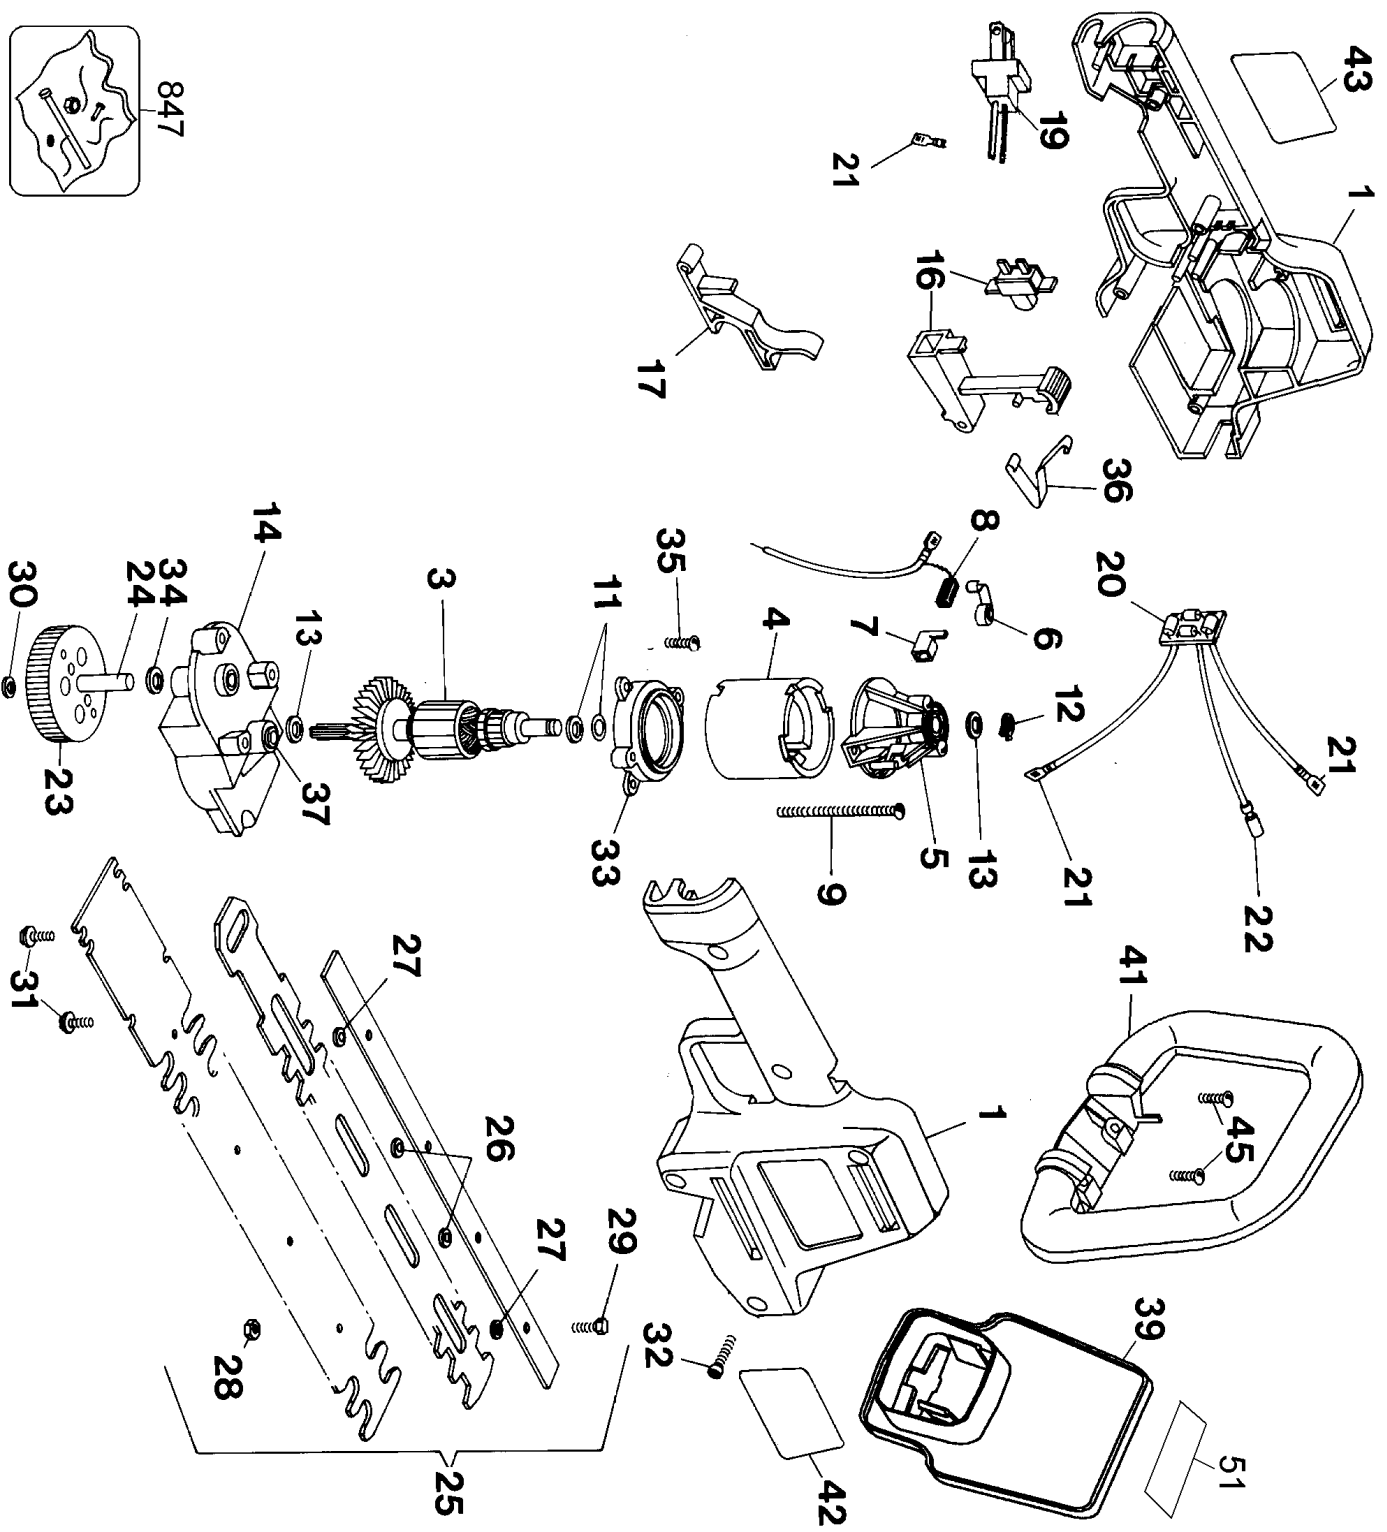

43

1

19

21

16

17

36

20

21

22

12

21

41

45

39

51

42

1

33

9

5

13

7

8

35

4

11

3

14

13

34

24

30

23

27

26

27

29

32

28

25

31

## Parts List for HT300-04 Type 2

Item Number	Part Number	Description	Qty Required
1	000000-00	No Longer Available	1
3	573201-01	ARMATURE & FAN	1
4	000000-00	No Longer Available	1
5	000000-00	No Longer Available	1
6	000000-00	No Longer Available	2
7	000000-00	No Longer Available	2
8	148875-00	BRUSH	2
9	330019-09	SCREW	2
11	157315-00	WASHER,SPRING	2
12	000000-00	No Longer Available	1
13	148902-00	WASHER,PLAIN	1
14	000000-00	No Longer Available	1
14	148991-01	CASE,GEAR	1
16	000000-00	No Longer Available	1
17	148997-00	CLAMP,CORD	1
19	000000-00	No Longer Available	1
20	384920-01	PC BOARD	1
21	136086-02	TERMINAL	3
22	680131-01	RECEPTACLE	1
23	90516433SV	GEAR ASSY	1
24	000000-00	No Longer Available	1
25	603759-01	BLADE ASSEMBLY	1
26	071653-13	SPACER	2
27	071653-13	SPACER	1
28	381980-00	NUT,STOP	5
29	88782-00	SCREW	5
30	397589-00	WASHER	1

## Parts List for HT300-04 Type 2

Item Number	Part Number	Description	Qty Required
31	330045-13	SCREW,TAPTITE	5
32	330019-04	SCREW,PLASTITE	6
33	000000-00	No Longer Available	1
34	133952-00	WASHER	1
35	330045-05	LOCK SCREW	3
36	149333-00	SPRING	1
37	330001-08	BEARING,SLEEVE	1
39	000000-00	No Longer Available	1
41	000000-00	No Longer Available	1
42	000000-00	No Longer Available	1
43	000000-00	No Longer Available	1
45	134157-00	SCREW	2
45	99276-16	SCREW	2
51	000000-00	No Longer Available	1
847	679853-00	BLADE SPACER KT	1