


800

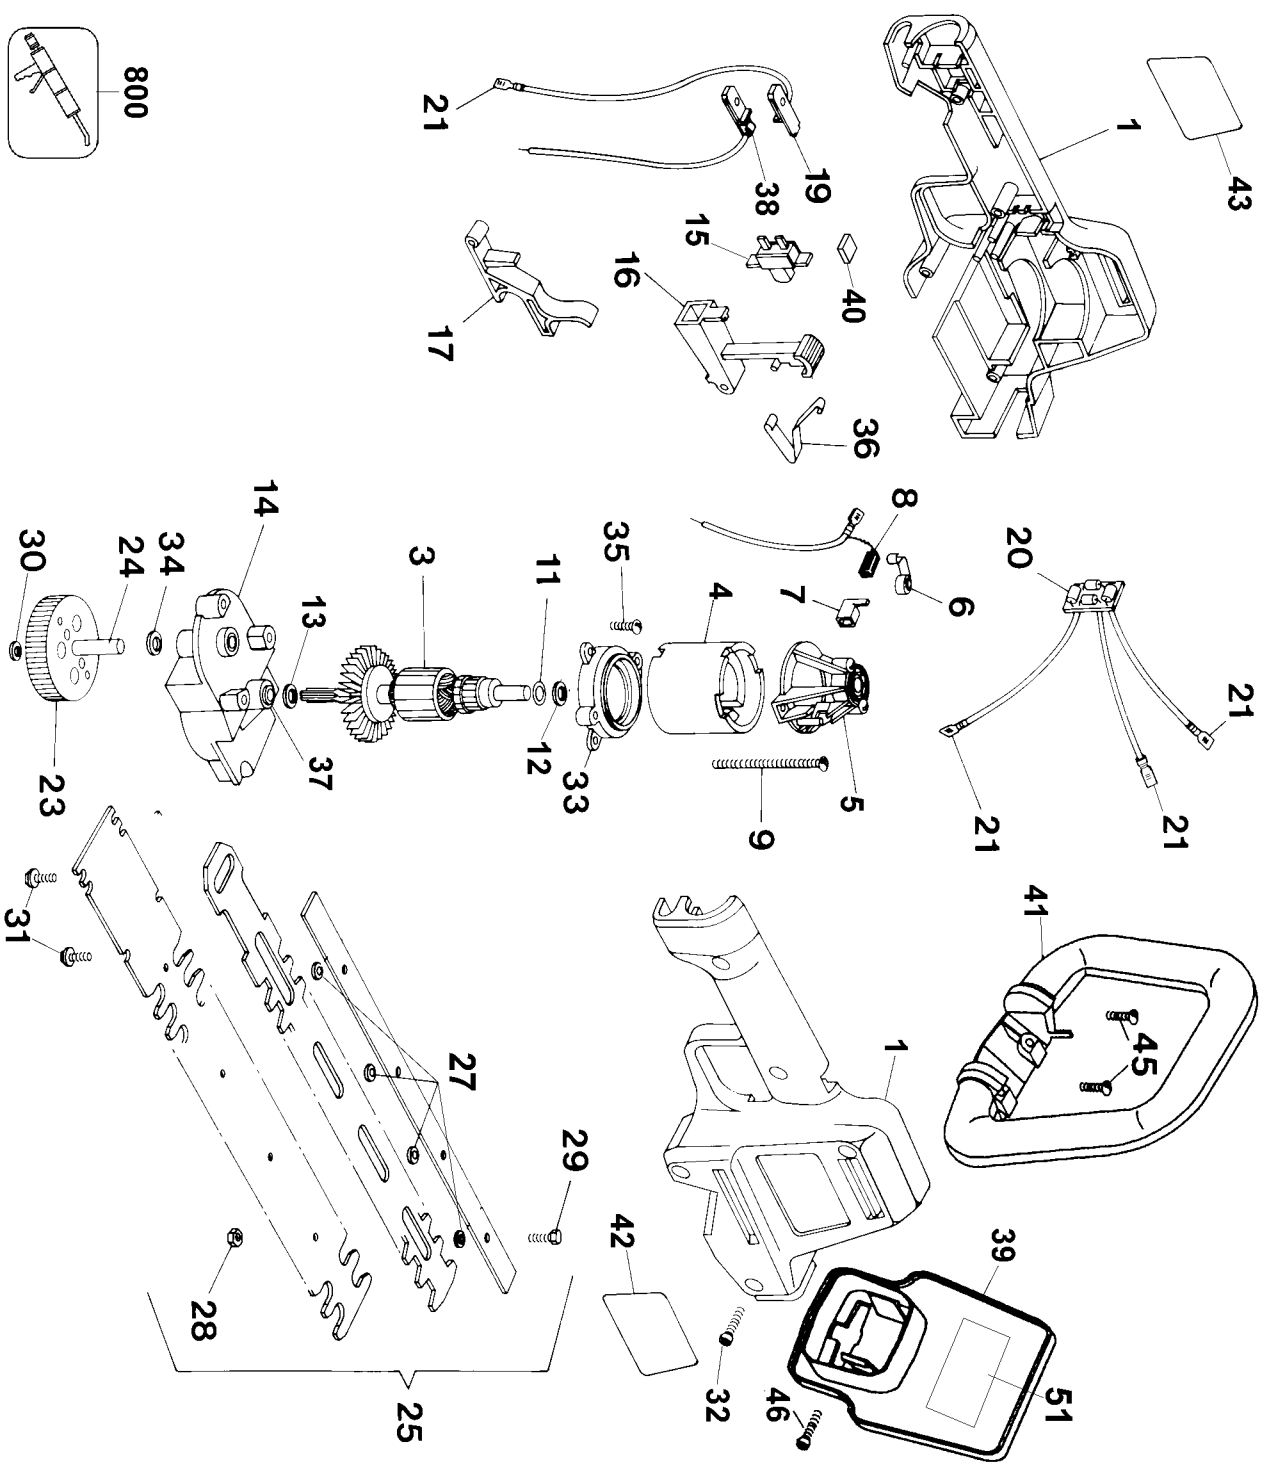

Parts List for HT500 Type 5

Item Number	Part Number	Description	Qty Required
1	000000-00	No Longer Available	1
3	000000-00	No Longer Available	1
4	000000-00	No Longer Available	1
5	000000-00	No Longer Available	1
6	000000-00	No Longer Available	2
7	000000-00	No Longer Available	2
8	148875-00	BRUSH	2
9	330019-09	SCREW	2
11	157315-00	WASHER,SPRING	1
12	51407-00	WASHER	1
13	000000-00	No Longer Available	1
14	000000-00	No Longer Available	1
15	151319-00	SWITCH	1
16	151303-02	TRIGGER	1
17	148997-00	CLAMP,CORD	1
19	87486-00	CONTACT,TERM.	1
20	384920-01	PC BOARD	1
21	136086-02	TERMINAL	6
23	90516433SV	GEAR ASSY	1
24	000000-00	No Longer Available	1
25	000000-00	No Longer Available	1
27	071653-13	SPACER	7
28	381980-00	NUT,STOP	7
29	88782-00	SCREW	7
30	397589-00	WASHER	1
31	158495-00	SCREW,TAPTITE	4
32	330019-04	SCREW,PLASTITE	12

Parts List for HT500 Type 5

Item Number	Part Number	Description	Qty Required
33	000000-00	No Longer Available	1
34	133952-00	WASHER	1
35	330045-05	LOCK SCREW	3
36	149333-00	SPRING	1
37	330001-08	BEARING,SLEEVE	1
38	151625-00	BLADE,POLARIZED	1
39	000000-00	No Longer Available	1
40	382427-00	PAD,PRESSURE	1
41	000000-00	No Longer Available	1
42	000000-00	No Longer Available	1
43	000000-00	No Longer Available	1
45	134157-00	SCREW	2
45	99276-16	SCREW	2
46	330019-01	SCREW,TORX HD	2
51	000000-00	No Longer Available	1
800	429698-00	GREASE:4 LB CAN	1