


REPLACEMENT PARTS - MODEL HT816r/HT818r/HT822r

SINGLE ACTION HEDGE TRIMMERS

(Serial Number 80001-9848 and greater)

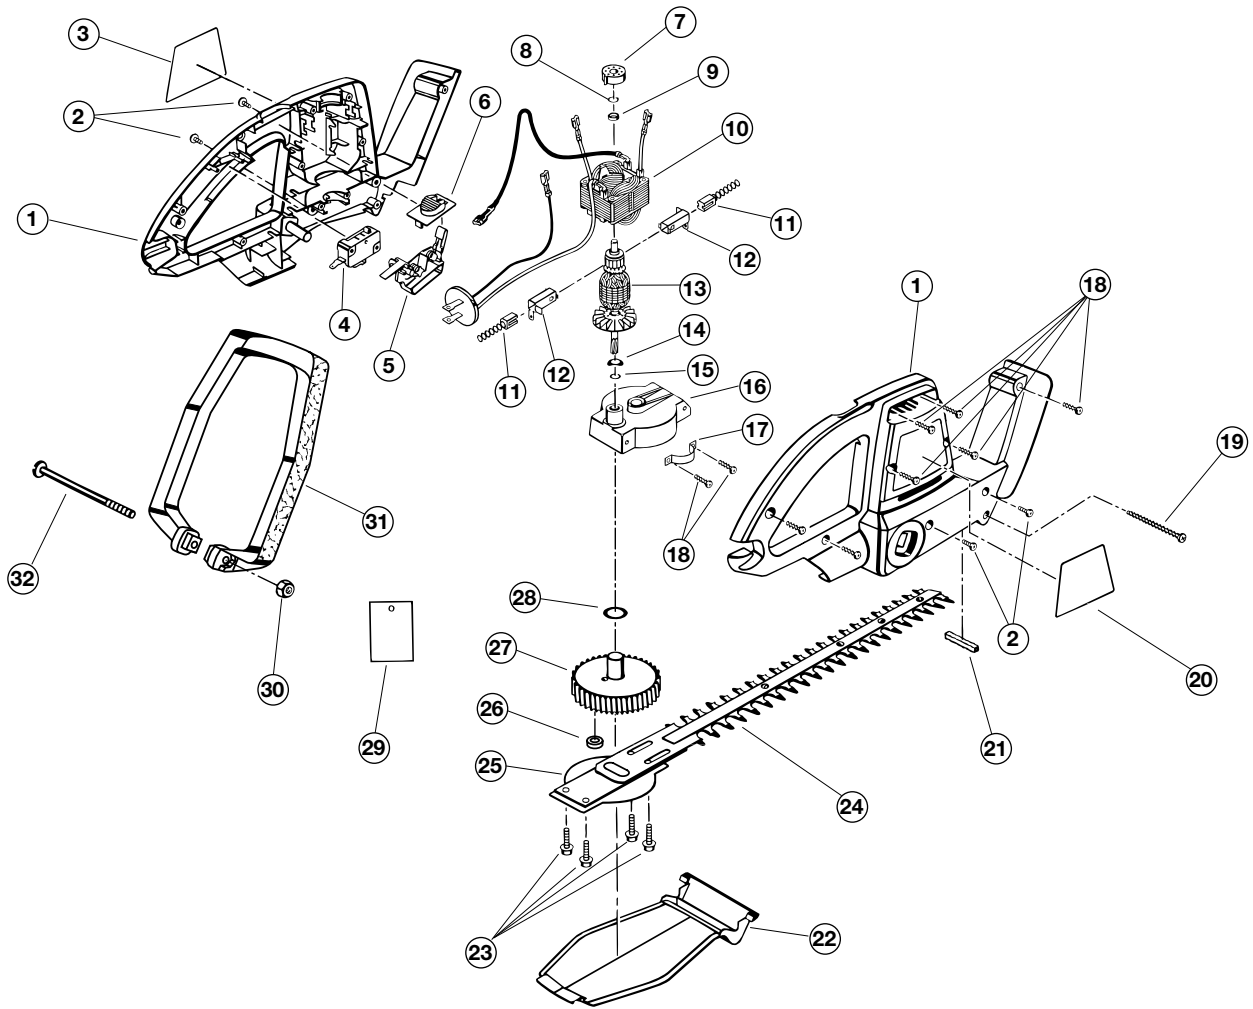

Item	Part No.	Description	Item	Part No.	Description
1	980917-000	Housing Assembly	18	617966-030	Screw (8-10 X 5/8" Pan Hd.)
2	968705-040	Screw (10-24 X 1/2" Pan Hd.)	19	999306-025	Screw (8-19 X 2-3/4" Pan Hd. T.F.)
3	980915-001	Logo Plate (HT816r)	20	980913-001	Data Plate (HT816r)
3	980920-001	Logo Plate (HT818r)	20	980918-001	Data Plate (HT818r)
3	980924-001	Logo Plate (HT822r)	20	980922-001	Data Plate (HT822r)
4	968303-089	Switch	21	617900-002	Blade Seal
5	661127-001	Switch Trigger Assembly	22	967876-006	Blade Cover
6	664129-001	Lock-On Button	23	990427-001	Screw (10-32 X 5/8" Washer Hd. T.F.)
7	611135-001	Sleeve Bearing	24	662961-002	Blade Assembly (HT816r)
8	706382-805	Washer	24	662961-003	Blade Assembly (HT818r)
9	706382-820	Washer	24	662961-010	Blade Assembly (HT822r)
10	974249-003	Field and Disc Assembly	25	990460-001	Grease Cover
11	968304-084	Brush Assembly	26	967506-001	Drive Washer
12	612255-001	Brush Tube	27	968308-019	Gear Assembly (HT816r)
13	968306-104	Armature (HT816r)	27	968308-005	Gear Assembly (HT818r/HT822r)
13	968306-114	Armature (HT818r/HT822r)	28	611764-001	Washer (HT816r)
14	622347-005	Spring Washer	28	990762-001	Washer (HT818r/HT822r)
15	706382-828	Washer	29	662894-001	Inspection Tag
16	968308-023	Gear Housing with Bearings (HT816r)	30	703477-057	Lock Nut (1/4-20)
16	968308-024	Gear Housing with Bearings (HT818r/HT822r)	31	612695-001	Front Handle
17	606808-002	Bearing Strap	32	930517-073	Screw (1/4-20 X 4-1/4" Rd. Hd.)
			*	972000-581	Owner's Manual