

HUSKY GENERATOR - HU3650, HU36511 / GENERADOR DE HUSKY - HU3650, HU36511


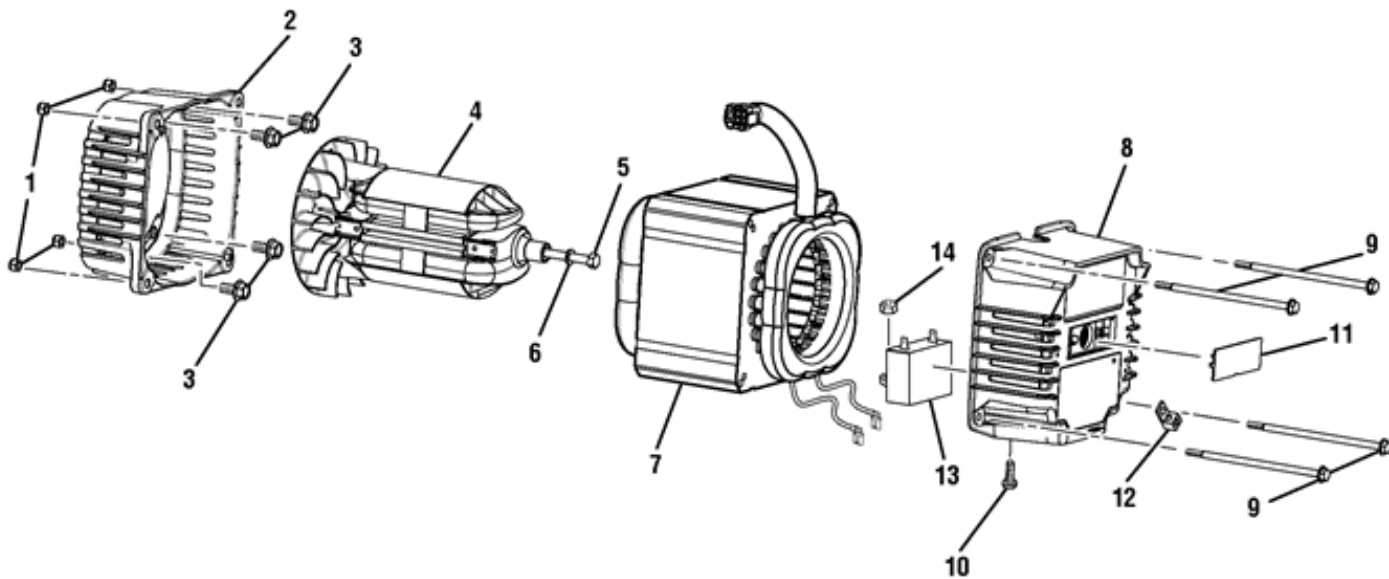


FIGURE A
FIGURA A

Ref #	Part #	Description	Qty	Context Note	Foot Note
1	678016006	Lock Nut (1/4-20)	4		
2	640331004	Engine Adapter	1		
3	660599002	Bolt (5/16-24 x 5/8 in.)	4		
4	310771005	Rotator	1		
5	660599003	Bolt (5/16-24 x 7-3/4 in., Hex Hd.)	1		
6	638678002	Lock Washer (5/16 in.)	1		
7	310227005	Stator	1		
8	310410001	End Bell	1		
9	661302001	Bolt (1/4-20 x 5-1/2 in. Hex Hd.)	4		
10	660976002	Bolt (M5 x 16 mm, Pan Hd.)	1		
11	519785001	Brush Cover	1		
12	638703001	Ground Lug	1		
13	0065134	Capacitor	1		
14	678390001	Hex Nut (M5)	1		

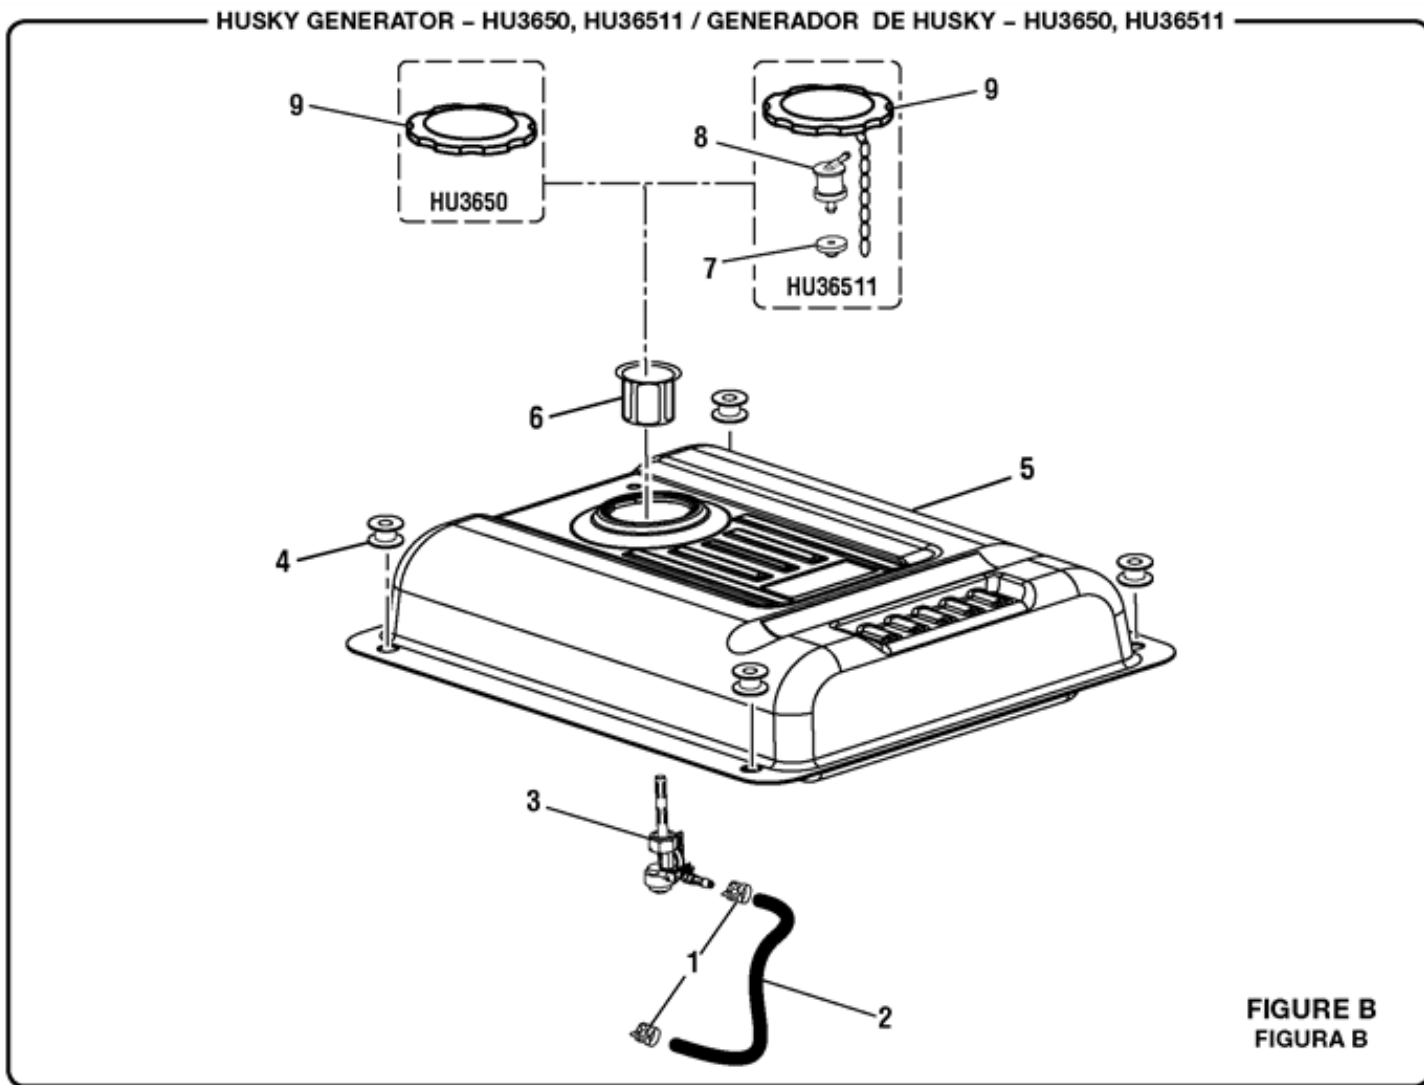

Ref #	Part #	Description	Qty	Context Note	Foot Note
1	678408005	Fuel Line Clamp	2		
2	570358033	Fuel Line	1		
3	519711001	Fuel Shut Off Valve	1		
4	310225001	Bushing w/Insert	4		
5	310711061	Fuel Tank (HU3650)	1		
5	310711027	Fuel Tank (HU36511)	1		
6	519710001	Strainer Basket	1		
7	638711001	Check Valve Bushing (HU36511)	1		
8	638710001	Check Valve (HU36511)	1		
9	519709001	Fuel Cap (HU3650)	1		
	310733001	Fuel Cap (HU36511)	1		
	120306001	Block Off Kit	1	Not Shown	

HUSKY GENERATOR - HU3650 / GENERADOR DE HUSKY - HU3650

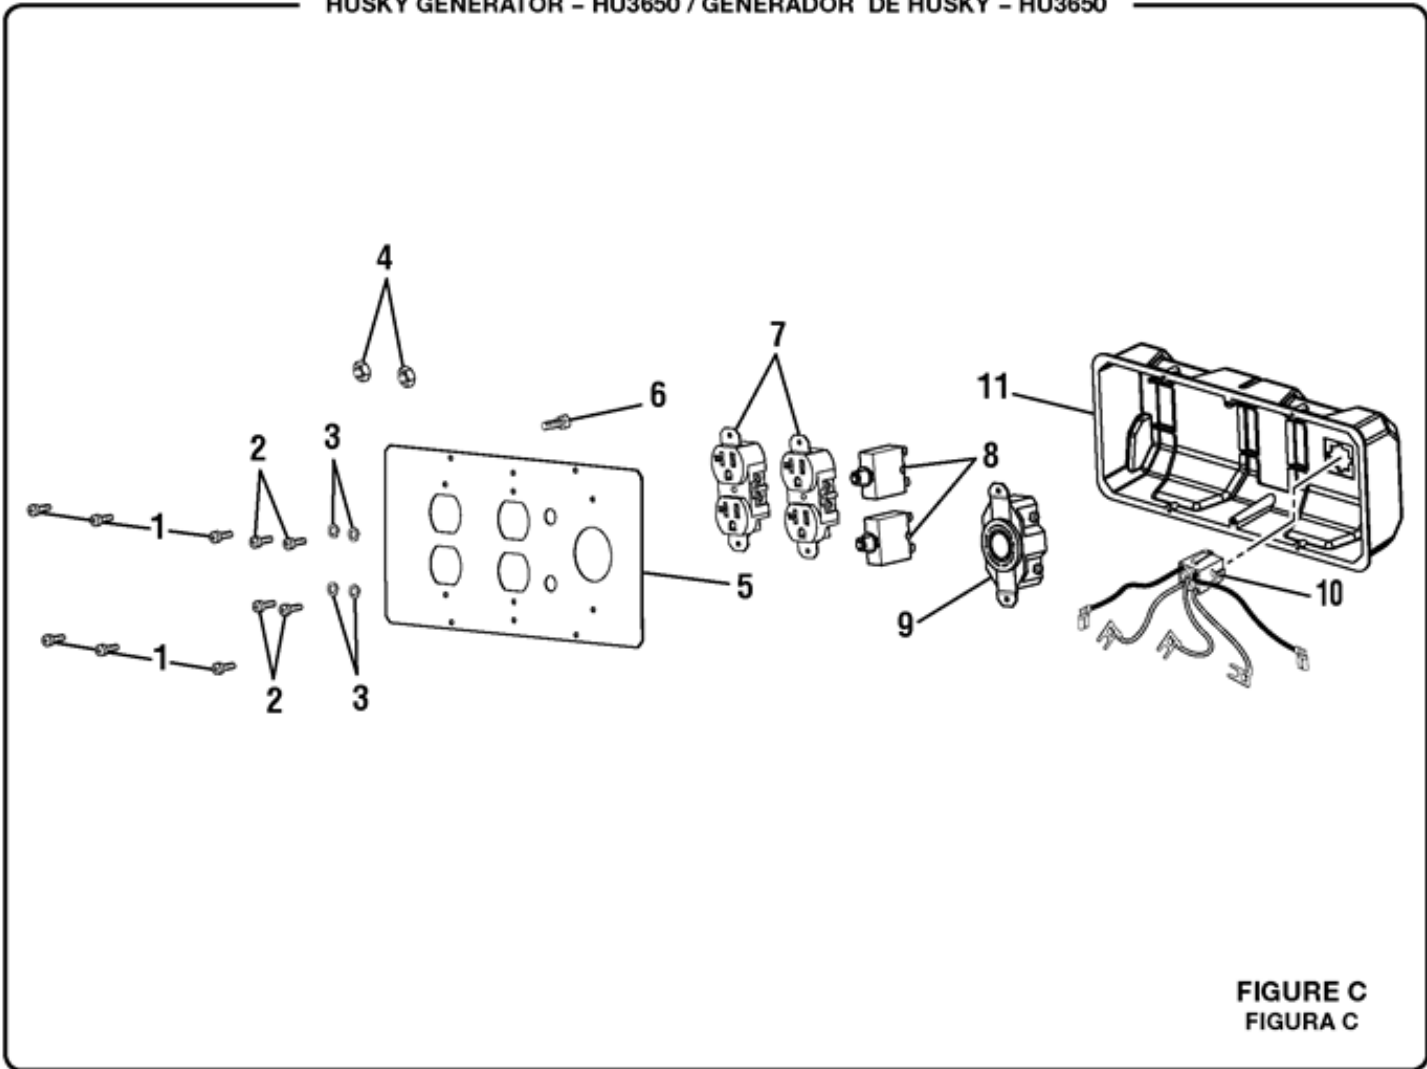


FIGURE C
FIGURA C

Ref #	Part #	Description	Qty	Context Note	Foot Note
1	660598001	Screw (6-20 x 3/8 in.)	6		
2	660914002	Screw (M3 x 6)	4		
3	638678004	Lock Washer	4		
4	661503011	Hex Nut (1/4-20)	2		
5	638700001	Cover Plate	1		
6	661503011	Screw (1/4-20 x 5/8 in., Hex Hd.)	1		
7	290400001	Duplex Receptacle (120 Volt)	1		
8	780350003	Circuit Breaker (15 Amp, 125 Volt, HU3650)	2		
9	290400007	Twist Lock Receptacle (120/240 Volt, 20 Amp)	1		
10	290514001	Connector w/Leads	1		
11	519707001	Rear Control Panel	1		

HUSKY GENERATOR - HU36511 / GENERADOR DE HUSKY - HU36511


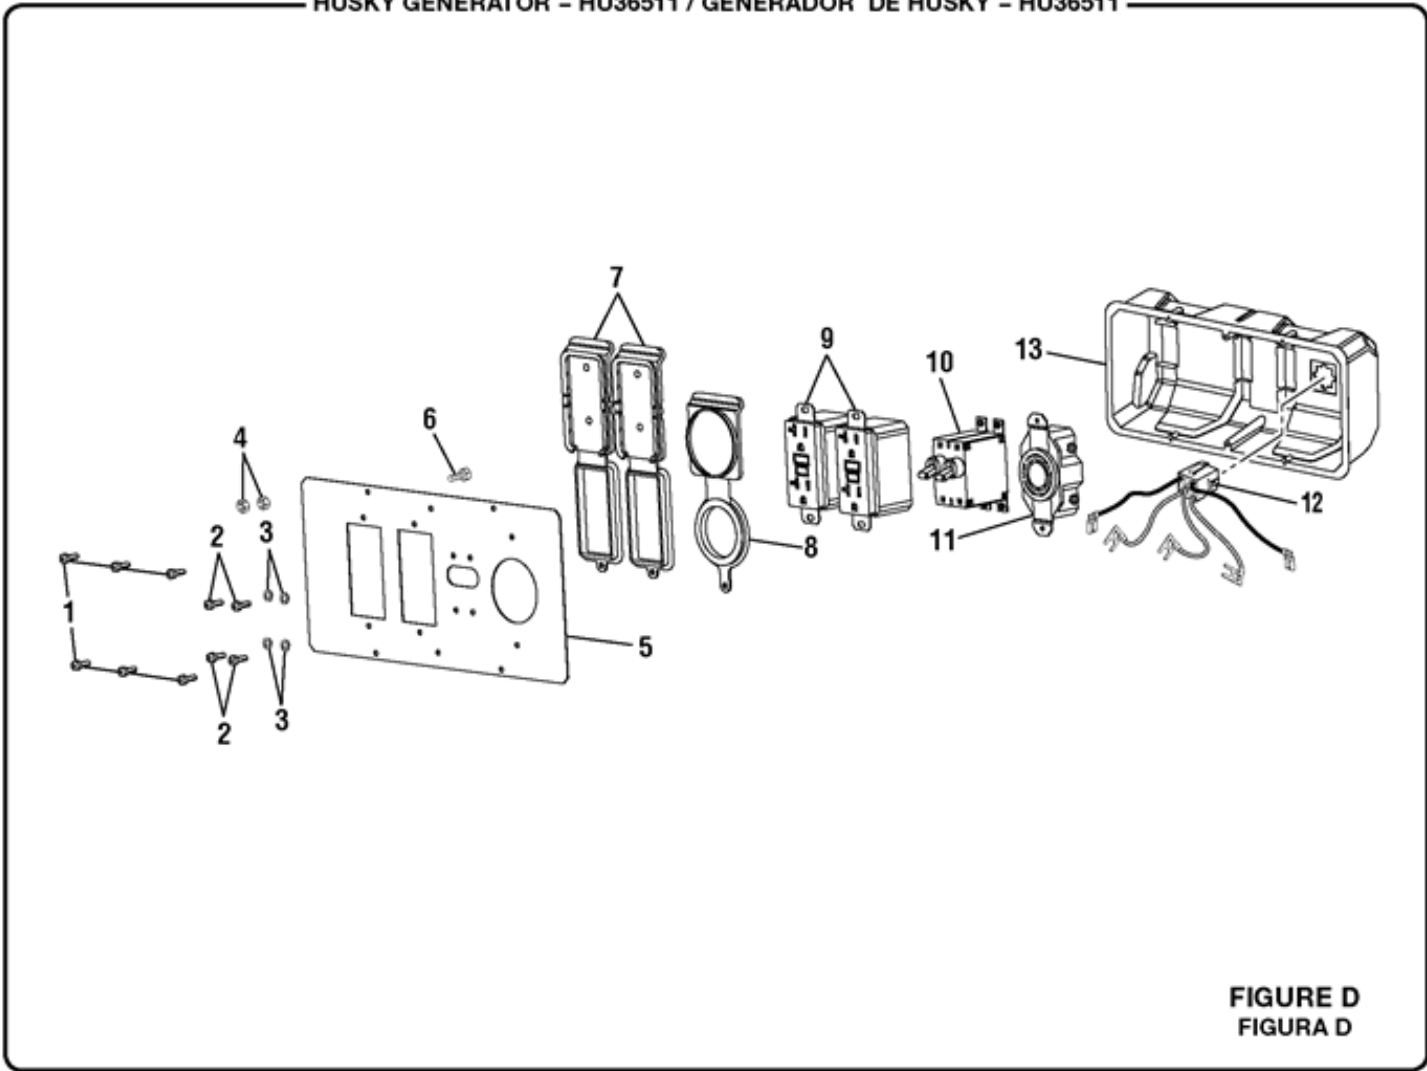


FIGURE D
FIGURA D

Ref #	Part #	Description	Qty	Context Note	Foot Note
1	660598001	Screw (6-20 x 3/8 in.)	6		
2	660914002	Screw (M3 x 6)	4		
3	638678004	Lock Washer	4		
4	661503011	Hex Nut (1/4-20)	2		
5	638496004	Cover Plate	1		
6	661503011	Screw (1/4-20 x 5/8 in., Hex Hd.)	1		
7	570412002	Outlet Cover (120 Volt)	2		
8	570412001	Outlet Cover (240 Volt)	1		
9	290400003	Duplex Receptacle (120 Volt, GFCI)	1		
10	780350004	Circuit Breaker (15 Amp, 125 Volt, HU36511)	1		
11	290400007	Twist Lock Receptacle (120/240 Volt, 20 Amp)	1		
12	290514001	Connector w/Leads	1		
13	519707001	Rear Control Panel	1		

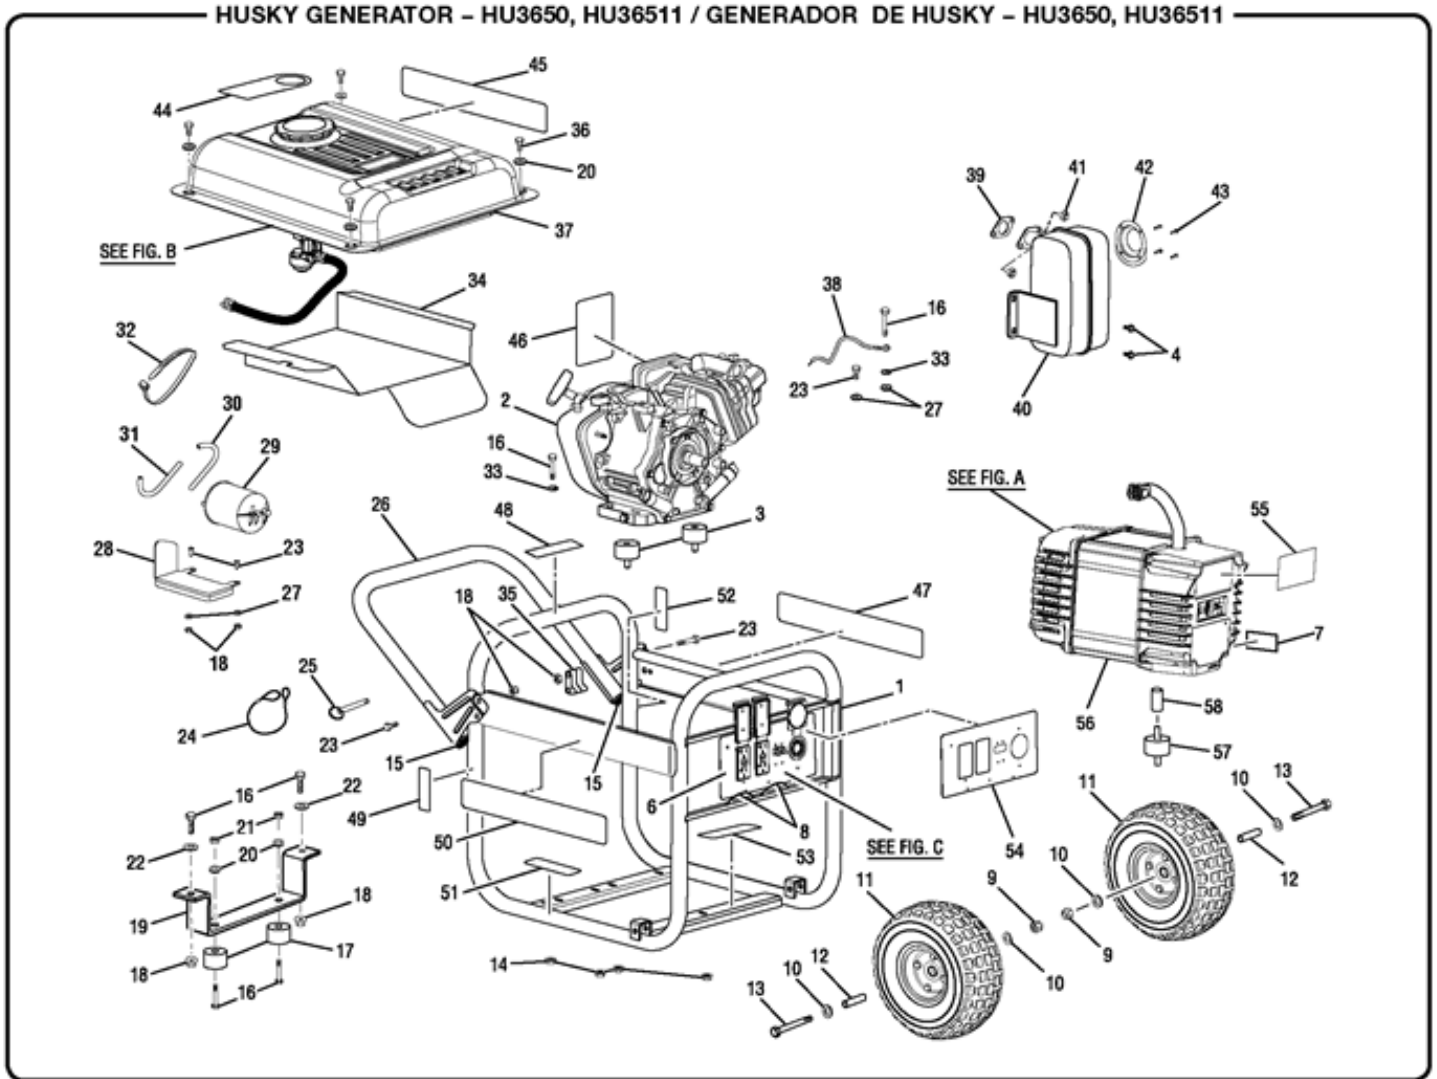

Ref #	Part #	Description	Qty	Context Note	Foot Note
1	310222003	Carrier Assembly	1		
2		Engine (Subaru OHC)	1	Note A: Techtronic Industries North America, Inc., will not provide engines as replacement parts. Engines are covered through the engine manufacturer's warranty. Consult the accompanying engine manual or contact our service department for assistance.	
3	570356001	Isolator	2		
4	660599002	Bolt (5/16-24 x 5/8 in.)	2		
5	660591004	Bolt (5/16-18 x 2-1/4 in., Hex Hd.)	1		
6	290403003	Control Panel (HU3650, See Fig. C)	1		
	290403014	Control Panel (HU36511, See Fig. C)	1		
7	940513005	Ground Label	1		
8	678655001	Cord Retainer	2		
9	678457003	Lock Nut (3/8-16)	2		
10	638386003	Washer (3/8 in.)	4		
11	310223002	Wheel	2		
12	678672002	Spacer (3/8 in. ID)	2		
13	661558002	Bolt (3/8-16 x 4-1/4 in.)	2		
14	678259003	Lock Nut (5/16-18)	4		
15	519712001	End Cap	2		
16	660591006	Bolt (5/16-18 x 1-1/2 in.)	6		
17	570355001	Rubber Foot	2		

18	678145002	Flange Nut (5/16-18)	6
19	638706001	Foot Bracket	1
20	638387002	Washer (1/4 in.)	6
21	678016006	Lock Nut (1/4-20)	2
22	638675004	Washer (5/16 in.)	2
23	661502005	Bolt (5/16- 18 x 3/4 in., Hex Hd.)	5
24	310715001	Lanyard	1
25	310712001	Release Pin	1
26	310224003	Handle	1
27	638704001	External Star Washer (5/16 in.)	4
28	638708004	Bracket (HU36511, Carb Canister)	1
29	310723003	Canister (HU36511)	1
30	570358030	Purge Hose (HU36511)	1
31	638710001	Rollover Hose (HU36511)	1
32	900333012	Cable Tie (18.6 in.) (HU36511)	1
33	638578002	Lock Washer (5/16 in.)	2
34	638497002	Heat Shield	1
35	519728001	Handle Bracket Spacer	1
36	661503005	Bolt (1/4-20 x 1 in.)	4

37	310711028	Fuel Tank Assembly (HU3650, See Fig. B)	1
37	310711029	Fuel Tank Assembly (HU36511, See Fig. B)	1
38	290404001	Ground Wire Assembly	1
39	901687001	Gasket	1
40	309323001	Muffler	1
41	678654001	Hex Nut (8 mm)	2
42	638682002	Spark Screen	1
43	661300001	Screw (#8 x 3/8 in.)	4
44	961030006	Danger Hang Tag	1
45	940617029	Quick Start Label	1
46	940617032	Start Label	1
47	940707007	Danger Label	1
48	940974004	Fire Danger Label	1
49	940514004	Lock Pin Label	1
50	940705043	Logo Label	1
51	940708006	Engine Lubricant Label	1
52	940680020	Hot Surface Label	1
53	940513009	Ground Warning Label	1
54	940780006	Control Panel Label (HU3650)	1

54	940780009	Control Panel Label (HU36511)	1	
55	940678066	Data Label (HU3650)	1	
55	940678067	Data Label (HU36511)	1	
56	310277008	Generator Head Assembly (See Fig. A)	1	
57	570356002	Isolator	1	
58	678672001	Spacer (3/8 in. ID)	1	
	987000807	Operator's Manual (HU3650)	1	Not Shown
	987000715	Operator's Manual (HU36511)	1	Not Shown