

<u>ltem</u>	Part No.	<u>Description</u>	<u>ltem</u>	Part No.	Description	
1	180361	Battery	18	180372	Outer Spool and Eyelet (includes item 19)	
2	180362	Winng Harness Assembly	19	180373	Eyelet	
3	180363	Battery Cushion Set (qty. 5)	20	180374	Spring	
4	180364	Safety Release Switch	21	180375	Screw and Washer	
5	180365	Thermal Overload Switch	22	180292	Inner Reel and .065 Line (15 ft.)	
6	180366	Battery Housing W/Out Decals	23	180376	Reel Cover	
7	180151	Trigger	24	180293	Guard and Blade Assembly (includes item 25)	
8	180150	Switch	25	180377	Blade Assembly	
9	180300	Housing Screw Set (qty. 11)	26	180294	Battery Charger	
10	145819	D-Handle	27	180295	Wall Station Assembly	
11	153523	D-Handle Hardware	28	180378	Wall Station Clamp and Screw	
12	180367	Boom Assembly	•	180379	Battery Housing Decal Set	
13	180368	Motor Housing	•	180117	Monoflail Cutting Line (50 ft.)	
14	180300	Housing Screw Set	•	180327	Cutting Head Assembly (includes items 18-23)	
15	180369	Motor Supports (qty. 3)			,	
16	180370	Anti-Rotation Block	•	not shown		
17	180371	Motor				
			The a	The above part numbers are for serial numbers 203104731 and		

greater.