



Hydraulic Bottle Jacks


JHJ-17-1/2 (stock no. 453317)

JHJ-17-1/2L (stock no. 453318K)

JHJ-22-1/2 (stock no. 453322)

JHJ-22-1/2LP (stock no. 453323K)

JHJ-35 (stock no. 453335K)

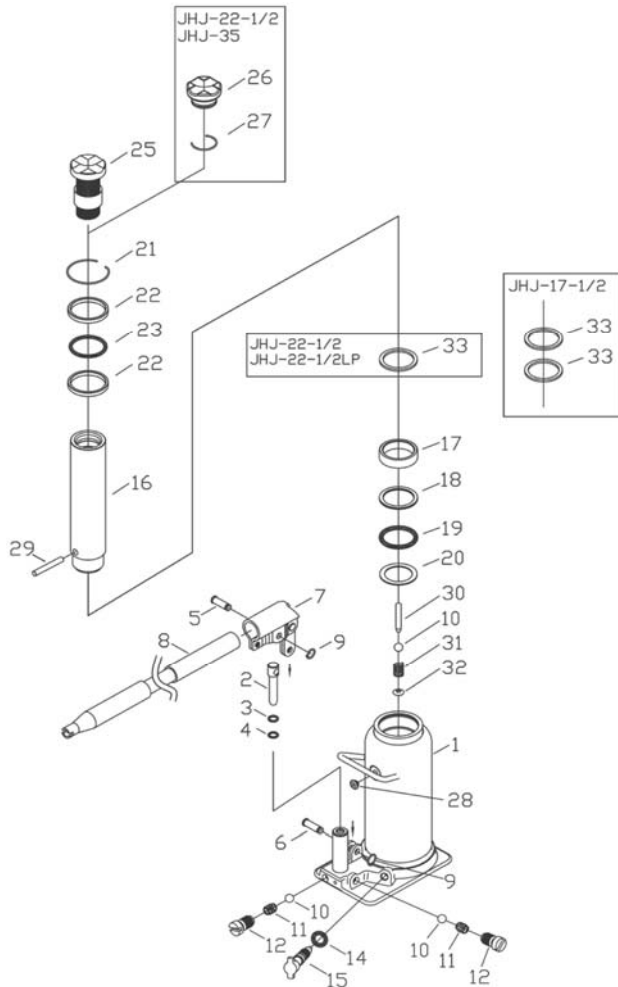

	JHJ-17-1/2	JHJ-17-1/2L	JHJ-22-1/2	JHJ-22-1/2LP	JHJ-35
Rated capacity (ton)	17-1/2	17-1/2	22-1/2	22-1/2	35
Min. height (in.)	10-3/8	6-3/4	10-5/8	7-1/8	11
Piston height (in.)	6-1/2	3-1/2	6-1/4	3-3/8	6-1/4
Head screw (h/in.)	3-1/8	2-3/4	--	1-1/2	--
Max height (in.)	20	13	16-7/8	12	17-1/4
Base size (LxW/in.)	7-1/8 x 4-5/8	7-1/8 x 4-5/8	7-1/8 x 5-1/2	7-1/4 x 5-1/16	8-3/8 x 5-1/2
Weight (lbs)	24	19	28	23	48

Part No. M-453322

Revision H 01/2016

JET

a Division of JPW Industries, Inc.

427 New Sanford Rd.

LaVergne, Tennessee 37086

Ph.: 800-274-6848

www.jettools.com

JHJ-17-1/2 and JHJ-17-1/2L

JHJ017-RK.....	Repair Kit
JHJ017-02.....	Pump Plunger (Ref JHJ008-02)
JHJ017-03.....	Pump Backup Ring (Ref JHJ005-03)
JHJ017-04*.....	Pump Packing (Ref JHJ008-04)
JHJ017-05G*.....	Pump Plunger Pin (Ref JHJ008-05)
JHJ017-06G.....	Pump Stay Pin (Ref JHJ008-05)
JHJ017-07G.....	Handle Socket Assembly (Ref JHJ008-07)
JHJ017-08G.....	Handle 3pc. (Ref JHJ008-08)
JHJ017-08LPG.....	Handle 1pc (Ref JHJ012-08LP)
JHJ017-09G.....	Pin Stopper Ring (Ref JHJ008-09)
JHJ017-10.....	Valve Ball (Ref SB-9/32)
JHJ017-11.....	Valve Spring
JHJ017-12G.....	Valve Plug (Ref JHJ005-12)
JHJ017-14*.....	Release Packing (Ref JHJ001-14)
JHJ017-15.....	Release Assy Old (Ref JHJ001-15)
JHJ017-15AG.....	Release Assy New (Ref JHJ001-15A)
JHJ017-16.....	Ram
JHJ017-16LP.....	Ram
JHJ017-17.....	Ram Packing Seat
JHJ017-18*.....	Ram Backup Ring
JHJ017-19*.....	Ram Packing
JHJ017-20.....	Ram Packing Stopper
JHJ017-21.....	Snap Ring
JHJ017-22.....	Stuffing Ring
JHJ017-22LP.....	Stuffing Ring
JHJ017-23*.....	Cylinder Packing
JHJ017-25G.....	Adjusting Screw Assembly
JHJ017-25LPG.....	Adjusting Screw Assembly
JHJ017-28G*.....	Oil Plug (Ref JHJ001-28)
JHJ017-29G.....	Horizontal Pin
JHJ017-30.....	Vertical Pin
JHJ017-31.....	Ram Spring
JHJ017-32.....	Ram Spring Stopper Ring
JHJ017-33.....	Ring

JHJ-22-1/2 and JHJ-22-1/2LP

JHJ022-RK.....	Repair Kit
JHJ022-02.....	Pump Plunger
JHJ022-03.....	Pump Backup Ring (Ref JHJ005-03)
JHJ022-04*.....	Pump Packing (Ref JHJ008-04)
JHJ022-05G*.....	Pump Plunger Pin
JHJ022-06G.....	Pump Stay Pin (Ref JHJ022-05)
JHJ022-07G.....	Handle Socket Assembly
JHJ022-08G.....	Handle 3pc
JHJ022-08LPG.....	Handle 1pc
JHJ022-09G.....	Pin Stopper Ring
JHJ022-10.....	Valve Ball (Ref SB-9/32)
JHJ022-11.....	Spring (Ref JHJ005-11)
JHJ022-12G.....	Valve Plug (Ref JHJ005-12)
JHJ022-14*.....	Release Packing (JHJ001-14)
JHJ022-15.....	Release Assy Old (JHJ001-15)
JHJ022-15AG.....	Release Assy New (JHJ001-15A)
JHJ022-16.....	Ram
JHJ022-16LP.....	Ram
JHJ022-17.....	Ram Packing Seat
JHJ022-18*.....	Ram Backup Ring
JHJ022-19*.....	Ram Packing
JHJ022-20.....	Ram Packing Stopper
JHJ022-21.....	Snap Ring
JHJ022-22.....	Stuffing Ring
JHJ022-22LP.....	Stuffing Ring
JHJ022-23*.....	Cylinder Packing
JHJ022-25LPG.....	Adjusting Screw Assembly
JHJ035-26G.....	Supporting Plate
JHJ035-27.....	Snap Ring
JHJ022-28G*.....	Oil Plug (Ref JHJ001-28)
JHJ022-29G.....	Horizontal Pin
JHJ022-30.....	Vertical Pin
JHJ022-31.....	Ram Spring
JHJ022-32.....	Ram Spring Stopper Ring
JHJ022-33.....	Ring

JHJ-35

JHJ035-RK.....	Repair Kit
JHJ035-02.....	Pump Plunger (Ref JHJ022-02)
JHJ035-03*.....	Pump Backup Ring
JHJ035-04*.....	Pump Packing (Ref JHJ008-04)
JHJ035-05G.....	Pump Plunger Pin (Ref JHJ022-05)
JHJ035-06G.....	Pump Stay Pin (Ref JHJ022-06)
JHJ035-07G.....	Handle Socket (Ref JHJ022-07)
JHJ035-08G.....	Handle 1pc
JHJ035-09G.....	Pin Stopper Ring (Ref JHJ022-09)
JHJ035-10.....	Valve Ball (Ref SB-9/32)
JHJ035-11.....	Spring (Ref JHJ005-11)
JHJ035-12G.....	Valve Plug (Ref JHJ005-12)
JHJ035-14*.....	Release Packing (Ref JHJ001-14)
JHJ035-15.....	Release Assy Old (Ref JHJ001-15)
JHJ035-15AG.....	Release Assy New (Ref JHJ001-15A)
JHJ035-16.....	Ram
JHJ035-17.....	Ram Packing Seat
JHJ035-18*.....	Ram Backup Ring
JHJ035-19*.....	Ram Packing
JHJ035-20.....	Ram Packing Stopper
JHJ035-21.....	Snap Ring
JHJ035-22.....	Stuffing Ring
JHJ035-23*.....	Cylinder Packing
JHJ035-26G.....	Supporting Plate
JHJ035-27.....	Snap Ring
JHJ035-28*.....	Oil Plug (Ref JHJ001-28)
JHJ035-29.....	Horizontal Pin
JHJ035-30.....	Vertical Pin
JHJ035-31.....	Ram Spring
JHJ035-32.....	Ram Spring Stopper Ring

* denotes part included in repair kit