



## Hydraulic Bottle Jacks


**JHJ-17-1/2** (stock no. 453317)

**JHJ-17-1/2L** (stock no. 453318K)

**JHJ-22-1/2** (stock no. 453322)

**JHJ-22-1/2LP** (stock no. 453323K)

**JHJ-35** (stock no. 453335K)

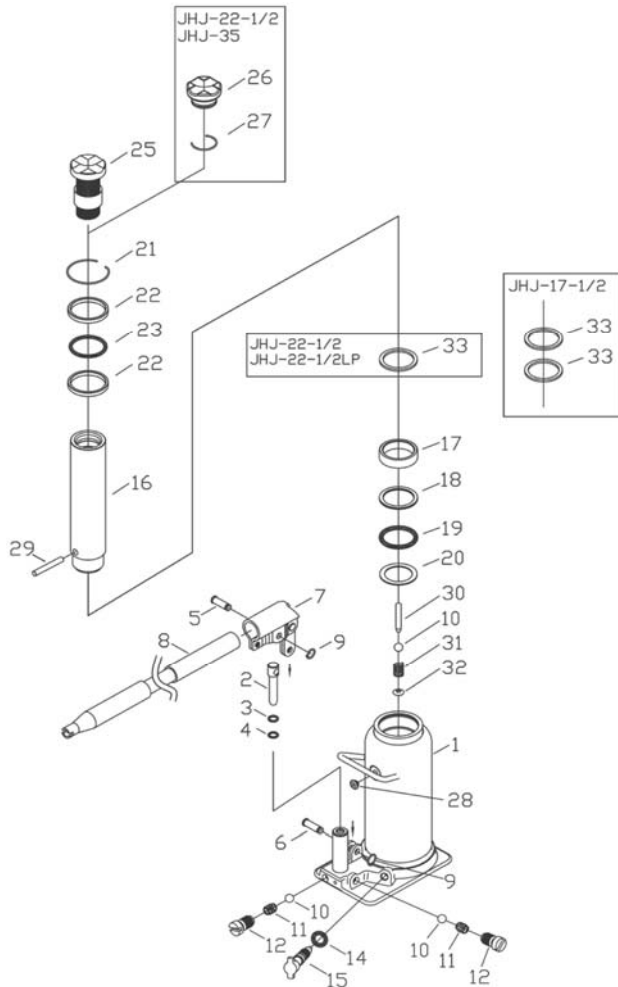

	JHJ-17-1/2	JHJ-17-1/2L	JHJ-22-1/2	JHJ-22-1/2LP	JHJ-35
Rated capacity (ton)	17-1/2	17-1/2	22-1/2	22-1/2	35
Min. height (in.)	10-3/8	6-3/4	10-5/8	7-1/8	11
Piston height (in.)	6-1/2	3-1/2	6-1/4	3-3/8	6-1/4
Head screw (h/in.)	3-1/8	2-3/4	--	1-1/2	--
Max height (in.)	20	13	16-7/8	12	17-1/4
Base size (LxW/in.)	7-1/8 x 4-5/8	7-1/8 x 4-5/8	7-1/8 x 5-1/2	7-1/4 x 5-1/16	8-3/8 x 5-1/2
Weight (lbs)	24	19	28	23	48

### Part No. M-453322

Revision H 01/2016

### JET

a Division of JPW Industries, Inc.  
427 New Sanford Rd.  
LaVergne, Tennessee 37086  
Ph.: 800-274-6848  
www.jettools.com

### JHJ-17-1/2 and JHJ-17-1/2L

JHJ017-RK	Repair Kit
JHJ017-02	Pump Plunger (Ref JHJ008-02)
JHJ017-03	Pump Backup Ring (Ref JHJ005-03)
JHJ017-04*	Pump Packing (Ref JHJ008-04)
JHJ017-05G*	Pump Plunger Pin (Ref JHJ008-05)
JHJ017-06G	Pump Stay Pin (Ref JHJ008-05)
JHJ017-07G	Handle Socket Assembly (Ref JHJ008-07)
JHJ017-08G	Handle 3pc. (Ref JHJ008-08)
JHJ017-08LPG	Handle 1pc (Ref JHJ012-08LP)
JHJ017-09G	Pin Stopper Ring (Ref JHJ008-09)
JHJ017-10	Valve Ball (Ref SB-9/32)
JHJ017-11	Valve Spring
JHJ017-12G	Valve Plug (Ref JHJ005-12)
JHJ017-14*	Release Packing (Ref JHJ001-14)
JHJ017-15	Release Assy Old (Ref JHJ001-15)
JHJ017-15AG	Release Assy New (Ref JHJ001-15A)
JHJ017-16	Ram
JHJ017-16LP	Ram
JHJ017-17	Ram Packing Seat
JHJ017-18*	Ram Backup Ring
JHJ017-19*	Ram Packing
JHJ017-20	Ram Packing Stopper
JHJ017-21	Snap Ring
JHJ017-22	Stuffing Ring
JHJ017-22LP	Stuffing Ring
JHJ017-23*	Cylinder Packing
JHJ017-25G	Adjusting Screw Assembly
JHJ017-25LPG	Adjusting Screw Assembly
JHJ017-28G*	Oil Plug (Ref JHJ001-28)
JHJ017-29G	Horizontal Pin
JHJ017-30	Vertical Pin
JHJ017-31	Ram Spring
JHJ017-32	Ram Spring Stopper Ring
JHJ017-33	Ring

### JHJ-22-1/2 and JHJ-22-1/2LP

JHJ022-RK	Repair Kit
JHJ022-02	Pump Plunger
JHJ022-03	Pump Backup Ring (Ref JHJ005-03)
JHJ022-04*	Pump Packing (Ref JHJ008-04)
JHJ022-05G*	Pump Plunger Pin
JHJ022-06G	Pump Stay Pin (Ref JHJ022-05)
JHJ022-07G	Handle Socket Assembly
JHJ022-08G	Handle 3pc
JHJ022-08LPG	Handle 1pc
JHJ022-09G	Pin Stopper Ring
JHJ022-10	Valve Ball (Ref SB-9/32)
JHJ022-11	Spring (Ref JHJ005-11)
JHJ022-12G	Valve Plug (Ref JHJ005-12)
JHJ022-14*	Release Packing (JHJ001-14)
JHJ022-15	Release Assy Old (JHJ001-15)
JHJ022-15AG	Release Assy New (JHJ001-15A)
JHJ022-16	Ram
JHJ022-16LP	Ram
JHJ022-17	Ram Packing Seat
JHJ022-18*	Ram Backup Ring
JHJ022-19*	Ram Packing
JHJ022-20	Ram Packing Stopper
JHJ022-21	Snap Ring
JHJ022-22	Stuffing Ring
JHJ022-22LP	Stuffing Ring
JHJ022-23*	Cylinder Packing
JHJ022-25LPG	Adjusting Screw Assembly
JHJ035-26G	Supporting Plate
JHJ035-27	Snap Ring
JHJ022-28G*	Oil Plug (Ref JHJ001-28)
JHJ022-29G	Horizontal Pin
JHJ022-30	Vertical Pin
JHJ022-31	Ram Spring
JHJ022-32	Ram Spring Stopper Ring
JHJ022-33	Ring

### JHJ-35

JHJ035-RK	Repair Kit
JHJ035-02	Pump Plunger (Ref JHJ022-02)
JHJ035-03*	Pump Backup Ring
JHJ035-04*	Pump Packing (Ref JHJ008-04)
JHJ035-05G	Pump Plunger Pin (Ref JHJ022-05)
JHJ035-06G	Pump Stay Pin (Ref JHJ022-06)
JHJ035-07G	Handle Socket (Ref JHJ022-07)
JHJ035-08G	Handle 1pc
JHJ035-09G	Pin Stopper Ring (Ref JHJ022-09)
JHJ035-10	Valve Ball (Ref SB-9/32)
JHJ035-11	Spring (Ref JHJ005-11)
JHJ035-12G	Valve Plug (Ref JHJ005-12)
JHJ035-14*	Release Packing (Ref JHJ001-14)
JHJ035-15	Release Assy Old (Ref JHJ001-15)
JHJ035-15AG	Release Assy New (Ref JHJ001-15A)
JHJ035-16	Ram
JHJ035-17	Ram Packing Seat
JHJ035-18*	Ram Backup Ring
JHJ035-19*	Ram Packing
JHJ035-20	Ram Packing Stopper
JHJ035-21	Snap Ring
JHJ035-22	Stuffing Ring
JHJ035-23*	Cylinder Packing
JHJ035-26G	Supporting Plate
JHJ035-27	Snap Ring
JHJ035-28*	Oil Plug (Ref JHJ001-28)
JHJ035-29	Horizontal Pin
JHJ035-30	Vertical Pin
JHJ035-31	Ram Spring
JHJ035-32	Ram Spring Stopper Ring

\* denotes part included in repair kit