


## Parts List for RIDGID 6-1/8" Jointer/Planer Model No. JP06000

RIDGID parts are available on-line at [www.ridgidparts.com](http://www.ridgidparts.com)

Figure 1

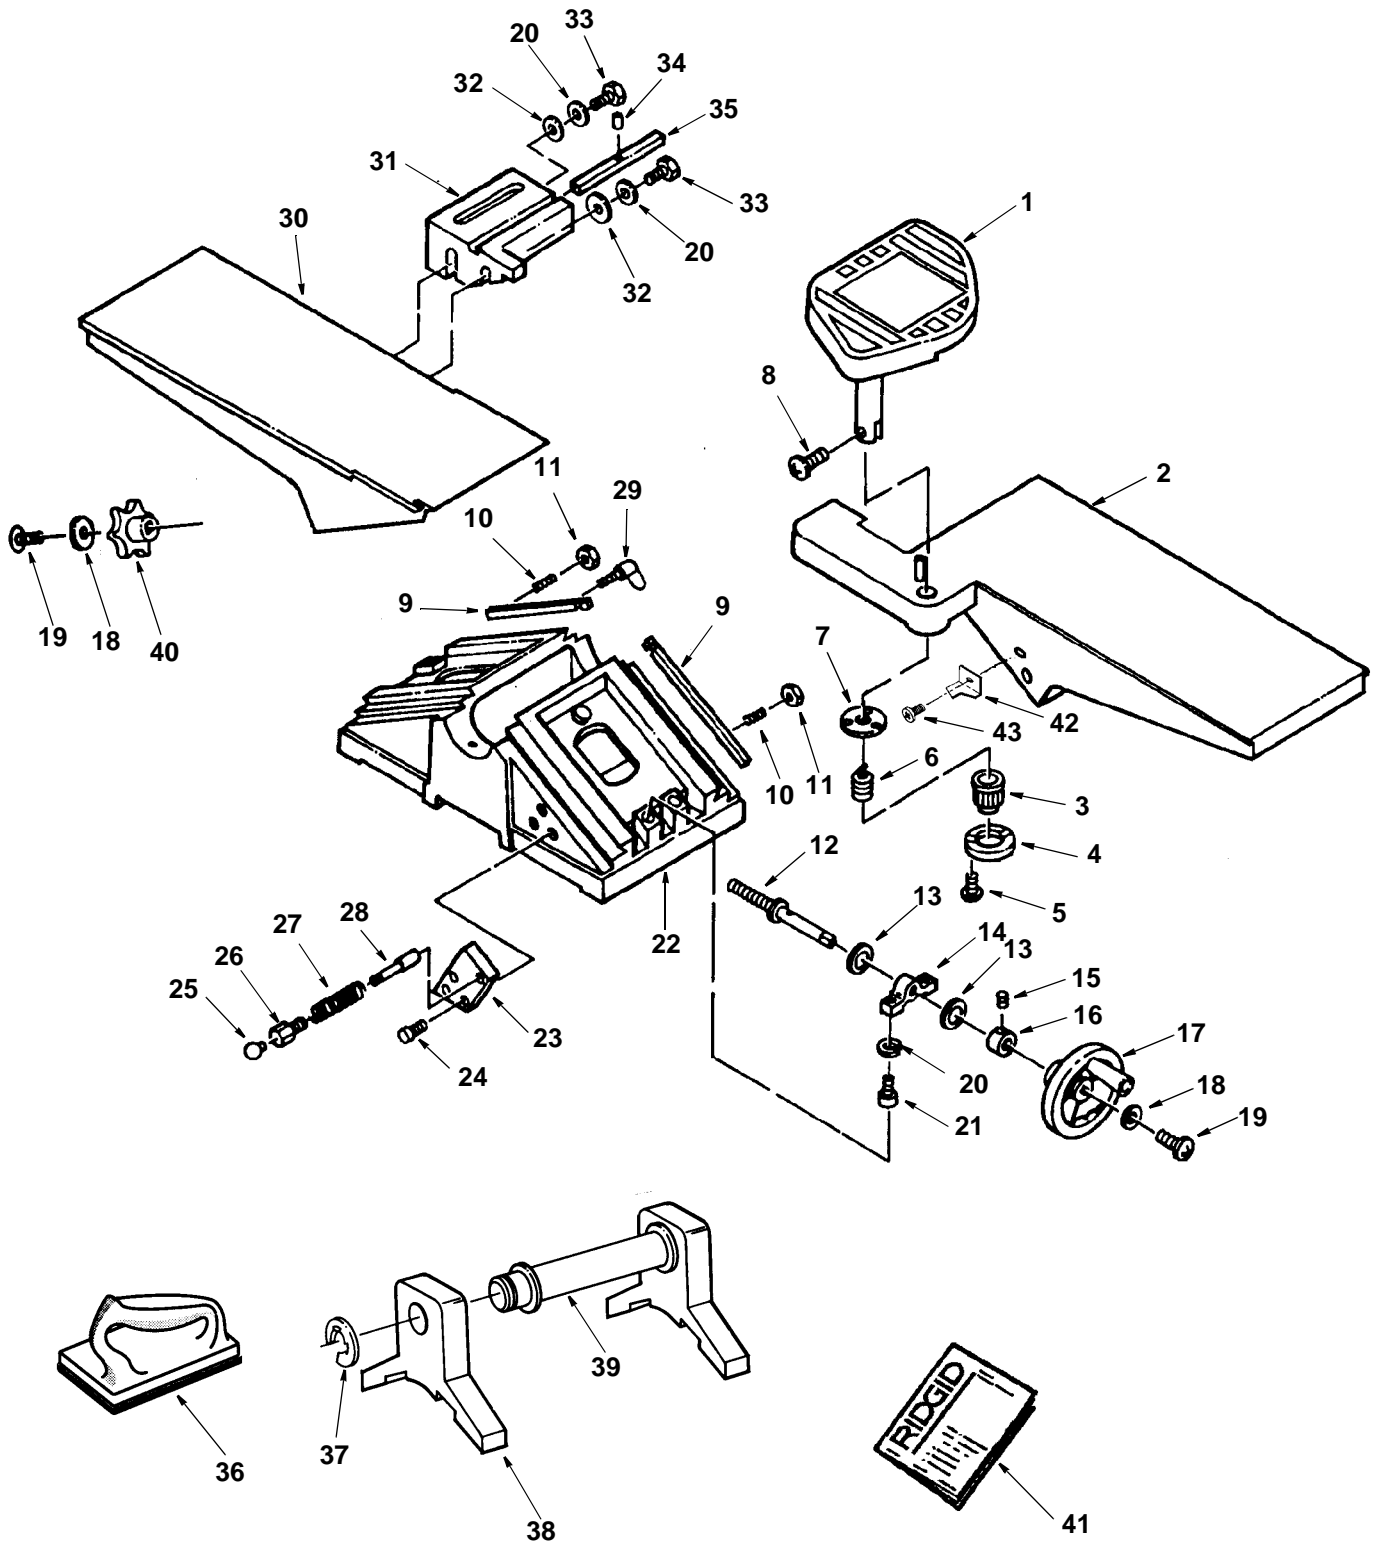

## Parts List for RIDGID 6-1/8" Jointer/Planer

Model No. JP06000

RIDGID parts are available on-line at [www.ridgidparts.com](http://www.ridgidparts.com)

Figure 1

Always order by Part Number - Not by Key Number

Key No.	Part No.	Description
1	826655	Guard Cutter
2	824854-1	Table Infeed
3	824867	Knob
4	824866	Retainer Knob
5	*	Screw Pan Hd 8/32 x 5/8
6	824868	Spring
7	824865	Retainer
8	*	Screw Pan Hd M5 x 0.8-10
9	824856	Gib
10	160033-4	Screw Set 1/4-20 x 1
11	*	Nut Hex 1/4-20
12	824859	Screw Elevation
13	824860	Washer Brass
14	824858	Clamp
15	*	Screw Set 1/4-20 x 3/8
16	824861	Collar
17	826524	Handwheel
18	*	Washer 17/64 x 5/8 x 1/32
19	*	Screw Pan Hd 1/4-20 x 1/2
20	*	Lockwasher 8mm
21	141594-13	Screw Cap 5/16-18 x 1-1/4
22	824853-1	Base

Key No.	Part No.	Description
22	824853-1	Base
23	824871-1	Block Stop Pin
24	*	Screw Cap 5/16-18 x 3/4
25	826529	Knob Plunger
26	824873	Housing Plunger
27	824872	Spring
28	824874	Plunger
29	824857	Screw Wing 1/4-20 x 1
30	824855-1	Table Outfeed
31	824862-1	Holder
32	824863	Washer 3/8 x 20mm x 3mm
33	*	Screw Hex Hd 3/8-16 x 1-1/4
34	813249-106	Pin Roll 4mm x 20mm
35	824864	Key
36	AC8601	† Push Block
37	820632-2	Ring, Retaining
38	824925	Gauge, Knife
39	824926	Rod Knife Gauge
40	826523	Knob Outfeed
41	SP6173	Owners Manual
42	826644	Pointer
43	824082	Screw Pan Hd. 3/16-24 x 1/4

\* Standard hardware item, may be purchased locally


† These replacement parts are available where you purchased your jointer.

## Parts List for RIDGID 6-1/8" Jointer/Planer

Model No. JP06000

RIDGID parts are available on-line at [www.ridgidparts.com](http://www.ridgidparts.com)

Figure 2

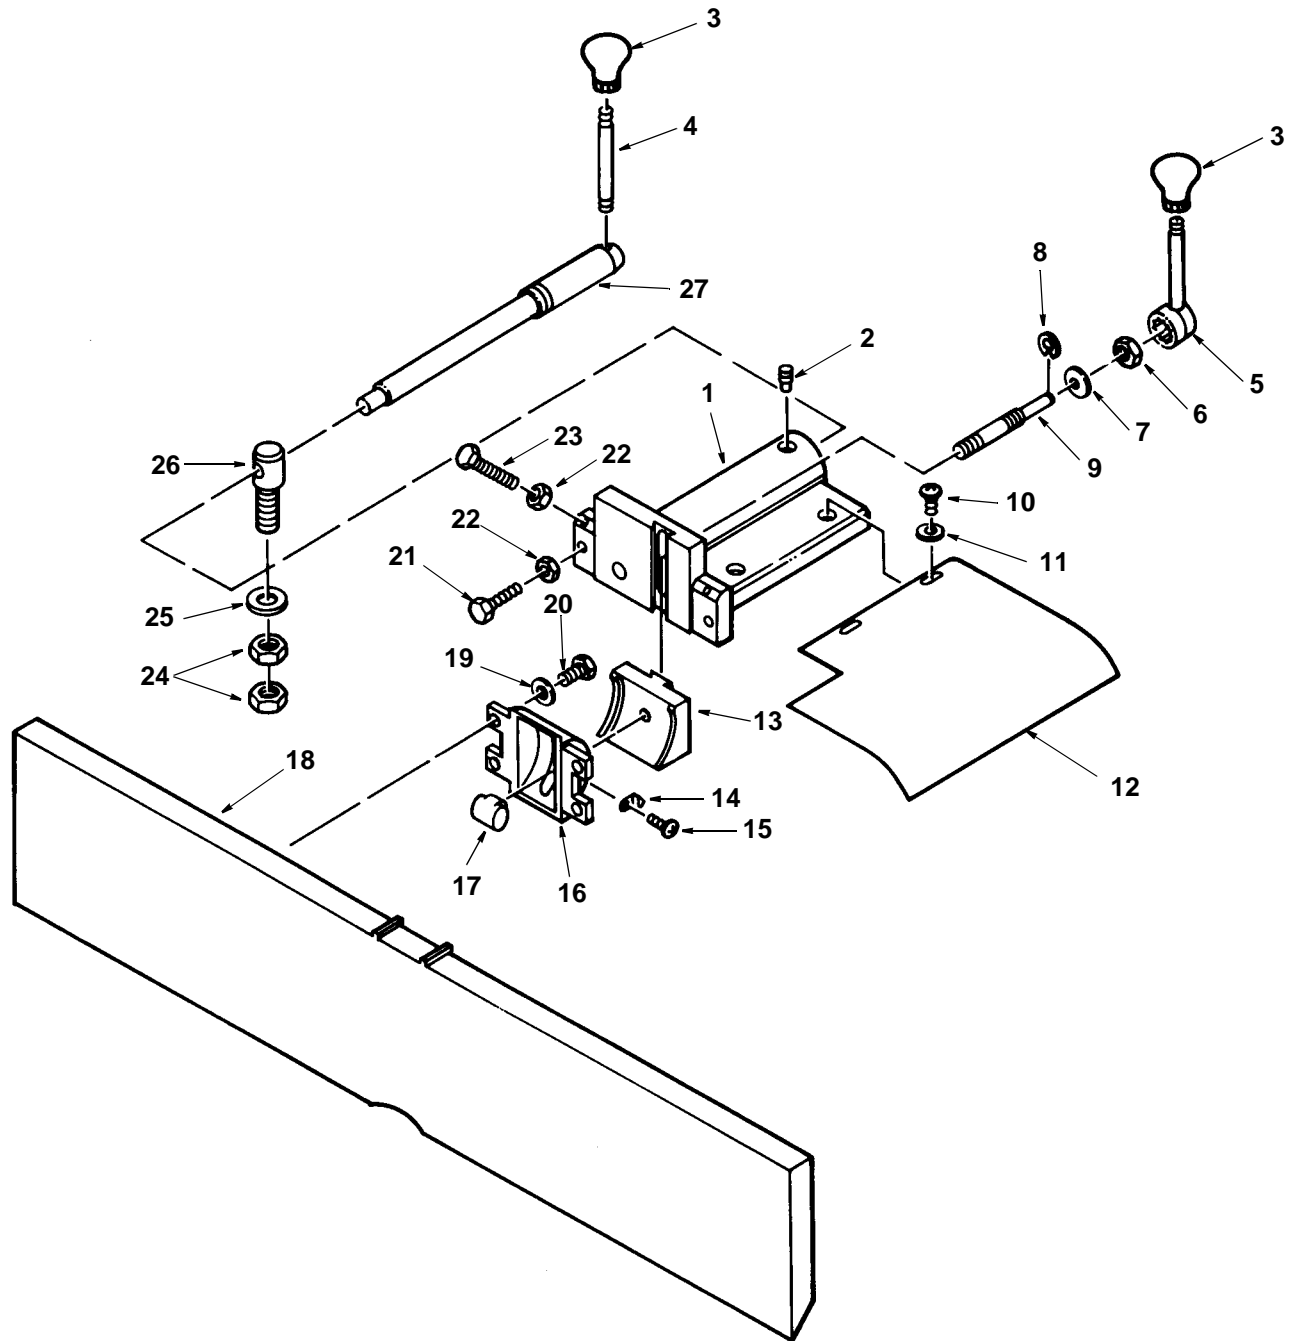

# Repair Parts

## Parts List for RIDGID 6-1/8" Jointer/Planer

Model No. JP06000

RIDGID parts are available on-line at [www.ridgidparts.com](http://www.ridgidparts.com)

### Figure 2

Always order by Part Number - Not by Key Number

Key No.	Part No.	Description
1	824895-1	Slide Fence
2	102817	Screw Set Dog Point 1/4-20 x 1/2
3	826527	Knob
4	824899	Rod Knob
5	824896	Knob, Nut
6	*	Nut Hex 3/8-16
7	*	Washer 3/8 x 3/4 x 3/32
8	820632-3	Ring Retaining 6mm
9	824894	Rod Bevel Lock
10	*	Screw Pan Hd 1/4-20 x 1/2
11	*	Washer 17/64 5/8 x 1/32
12	824921-1	Guard Rear
13	824889	Bracket Trunnion
14	826643	Pointer

Key No.	Part No.	Description
15	824082	Screw Pan Hd 3/16-24 x 1/4
16	824884	Trunnion
17	824893	Nut Bevel Lock
18	824882-1	Fence
19	*	Washer 5/16
20	*	Screw Hex Hd 5/16-18 x 5/8
21	*	Screw Hex Hd 5/16-18 x 1
22	*	Nut Hex 5/16-18
23	*	Screw Hex 5/16-18 x1-3/4
24	*	Nut Hex 1/2-20
25	*	Washer 1/2 x 1-1/8 x 3/32
26	824898	Bolt Clamp
27	824897	Shaft Lock


\* Standard hardware item, may be purchased locally

# Repair Parts

## Parts List for RIDGID 6-1/8" Jointer/Planer Model No. JP06000

RIDGID parts are available on-line at [www.ridgidparts.com](http://www.ridgidparts.com)

Figure 3

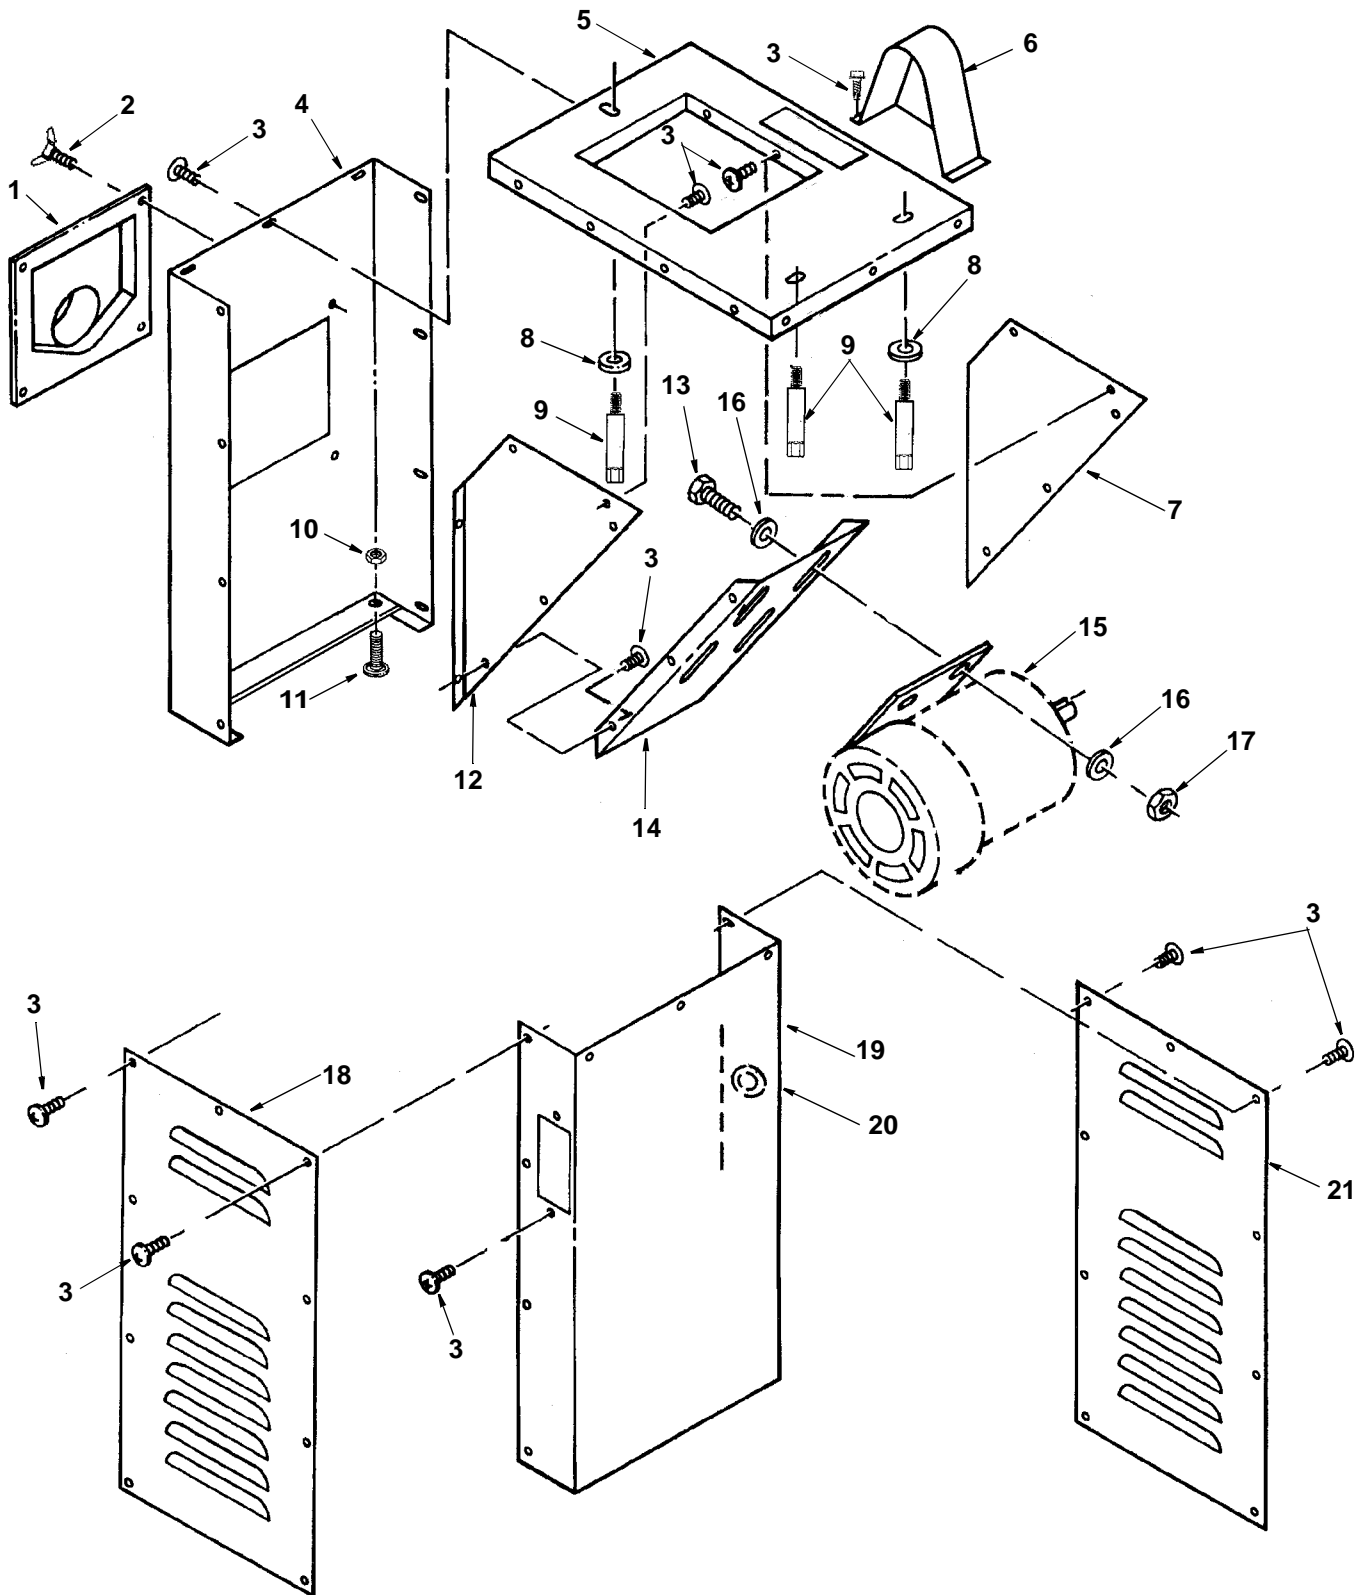

# Repair Parts

## Parts List for RIDGID 6-1/8" Jointer/Planer

Model No. JP06000

RIDGID parts are available on-line at [www.ridgidparts.com](http://www.ridgidparts.com)

### Figure 3

Always order by Part Number - Not by Key Number

Key No.	Part No.	Description
1	826522	Chute Dust
2	*	Screw Wing 1/4-20 x 5/8
3	826658	Screw Pan Cr Serr 3/16-24 x 3/8
4	826639	Panel Left Side
5	826645	Panel Top
6	826659	Guard Pulley
7	826647	Stiffener Rear
8	*	Lockwasher 10mm
9	826680	Stud Mounting
10	*	Nut Hex 3/8
11	803835-1	Foot Leveling

Key No.	Part No.	Description
12	826646	Stiffener Front
13	*	Bolt Hex 5/16-18 x 3/4
14	826648	Bracket Motor
15	See Fig. 5	Motor Asm
16	*	Washer 5/16
17	*	Nut Hex 5/16-18
18	826649	Panel Front
19	826652	Panel Right Side
20	824909	Grommet
21	826650	Panel Rear


\* Standard hardware item, may be purchased locally

## Parts List for RIDGID 6-1/8" Jointer/Planer

Model No. JP06000

RIDGID parts are available on-line at [www.ridgidparts.com](http://www.ridgidparts.com)

Figure 4

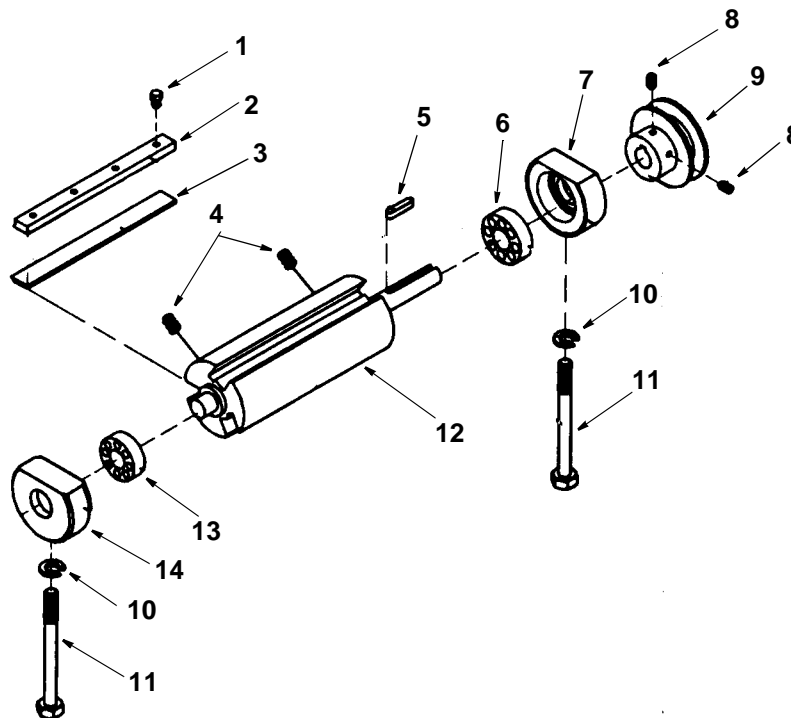

Always order by Part Number - Not by Key Number

Key No.	Part No.	Description
1	824886	Screw 1/4-28 x 7mm
2	824885	Wedge
3	AC8600	† Blade
4	824883	Spring
5	818654-7	Key
6	820722-5	Bearing
7	824881-1	Support Bearing

Key No.	Part No.	Description
8	*	Soc Set Screw 1/4-20 x 3/8
9	824888	Pulley
10	*	Lockwasher M10
11	824890	Screw Hex 3/8-24 x 3-1/2
12	824880	Cutter head
13	820722-6	Bearing
14	824879-1	Support Bearing


† These parts are available where you purchased your jointer.

# Repair Parts

## Parts List for RIDGID 6-1/8" Jointer/Planer Model No. JP06000

RIDGID parts are available on-line at [www.ridgidparts.com](http://www.ridgidparts.com)

Figure 5

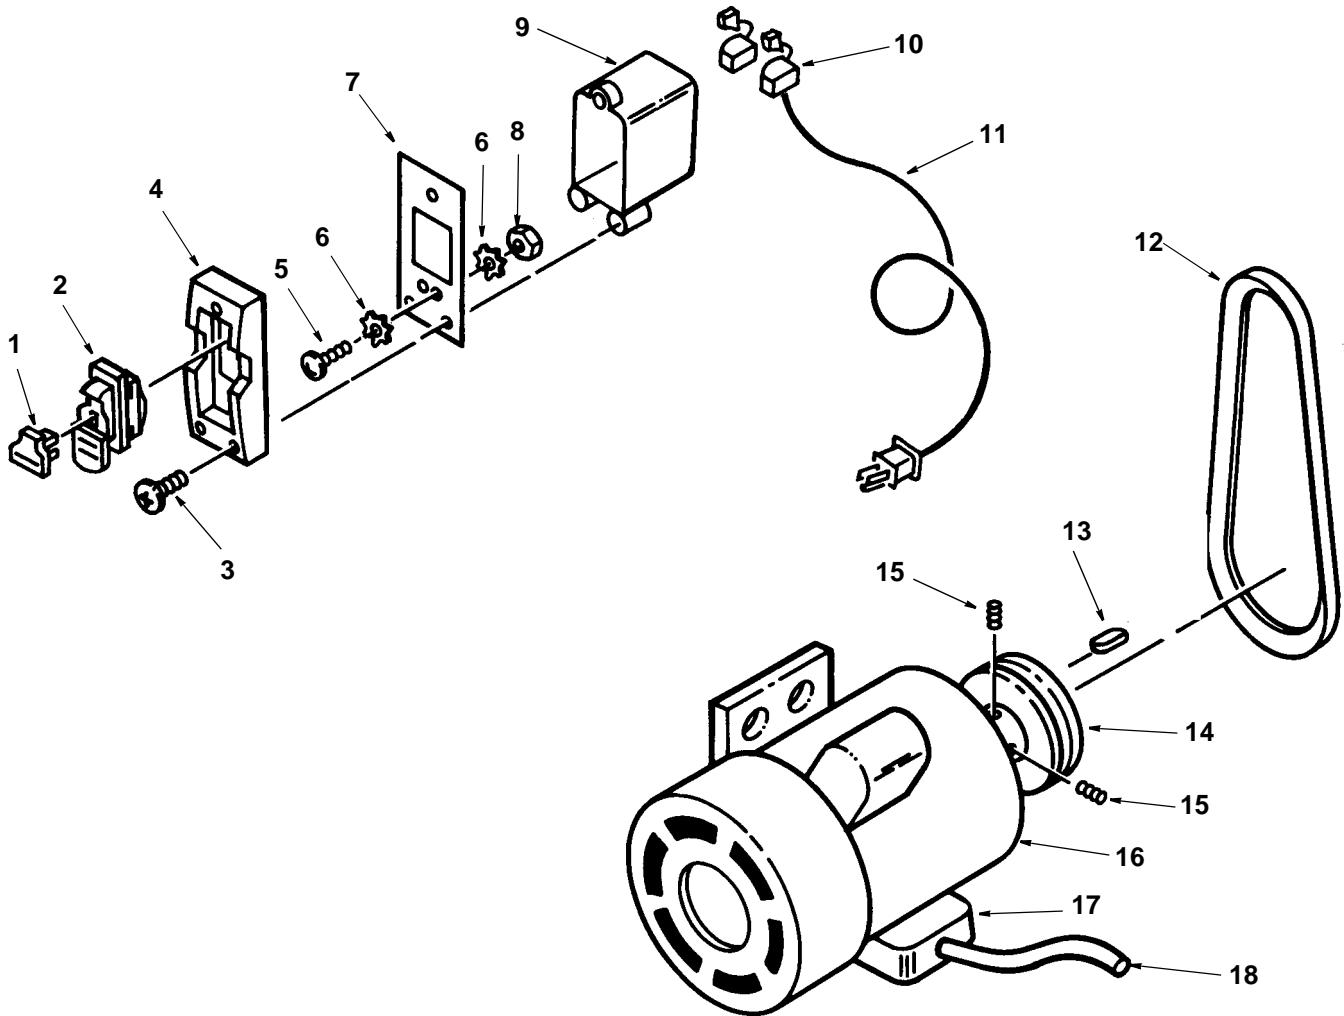

Always order by Part Number - Not by Key Number

Key No.	Part No.	Description
1	826122	Key Switch
2	826123	Switch Locking
3	*	Screw Ty AB M4 x 1.6-18
4	826395	Bezel Switch
5	*	Screw Pan Hd #8-32 x 3/8
6	*	Lockwasher #8
7	826653	Plate Switch Bezel
8	*	Nut #8-32
9	824914	Box Switch

Key No.	Part No.	Description
10	169123-15	Strain Relief 6P3-4
11	824911-1	Cord w/Plug
12	817393-7	V-Belt A-36
13	818654-8	Key
14	824931	Pulley
15	*	Screw Set 1/4-20 x 3/8
16	826660	Motor
17	69164	Strain Relief 6N3-4
18	824915-1	Cord Motor

\* Standard hardware item, may be purchased locally