

Repair Parts

Parts List for RIDGID 6-1/8" Jointer/Planer

Model No. JP06100

RIDGID parts are available on-line at www.ridgidparts.com

Figure 1

Always order by Part Number - Not by Key Number

Key No.	Part No.	Description
1	826655	Guard Cutter
2	824854-1	Table Infeed
3	828397	Pointer Indicator
4	822495	* Screw Pan Hd. 8-32 x 1/4
5	824867	Knob
6	824866	Retainer Knob
7	822495-1	* Screw Pan Hd 8/32 x 5/8
8	824868	Spring
9	824865	Retainer
10	816755-1	* Screw Pan Hd M5 x 0.8-10
11	824856	Gib
12	160033-4	* Screw Set 1/4-20 x 1
13	805478	* Nut Hex 1/4-20
14	824859	Screw Elevation
15	824860	Washer Brass
16	824858	Clamp
17	160033-1	* Screw Set 1/4-20 x 3/8
18	824861	Collar
19	826524	Handwheel
20	828711	Screw Pan Hd 1/4-20 x 5/8
21	818826-7	* Lockwasher 8mm
22	141594-13	* Screw Cap 5/16-18 x 1-1/4
23	824853-1	Base

Key No.	Part No.	Description
24	828649	Block Asm Depth
25	9421622	Screw Cap 5/16-18 x 3/4
26	826529	Knob Plunger
27	824873	Housing Plunger
28	824872	Spring
29	824874	Plunger
30	826523	Knob Outfeed
31	824857	Screw Wing 1/4-20 x 1
32	813249-132	Pin Spring 5 x 30
33	828531	Slide Fence
34	824863	Washer 3/8 x 20mm x 3mm
35	141594-44	* Screw Cap 3/8-16 x 1/2
36	813249-106	Pin Roll 4mm x 20mm
37	828523	Key
38	824855-1	Table Outfeed
39	AC8601	† Push Block
40	828402	Angle Gauge - Part A
41	828403	Angle Gauge - Part B
42	813317-6	* Wrench Hex "L" M3
43	821202	* Wrench Box M8/M10
44	SP6351	Owners Manual - English
45	SP6351S	Owners Manual - Spanish
46	SP6351F	Owners Manual - French


* Standard hardware item, may be purchased locally

† These replacement parts are available where you purchased your jointer.

Repair Parts

Parts List for RIDGID 6-1/8" Jointer/Planer
Model No. JP06100
RIDGID parts are available on-line at www.ridgidparts.com

Figure 2

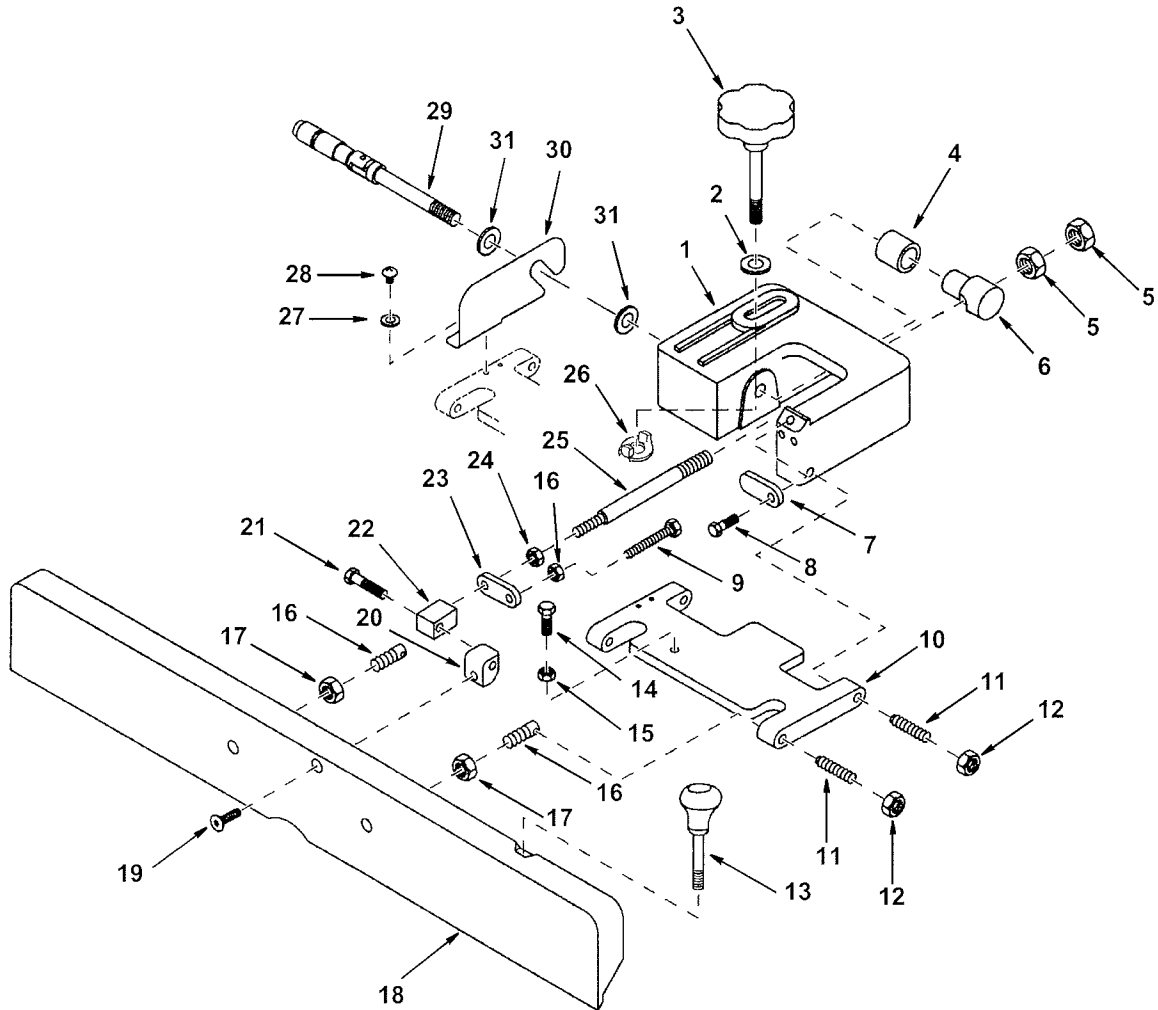

Repair Parts

Parts List for RIDGID 6-1/8" Jointer/Planer Model No. JP06100

RIDGID parts are available on-line at www.ridgidparts.com

Figure 2

Always order by Part Number - Not by Key Number

Key No.	Part No.	Description
1	828689	Holder Fence
2	805563-6	* Washer .515 x 1-1/8 x 3/32
3	828400	Knob Fence
4	828517	Sleeve Fence
5	805488	* Nut Hex Jam 5/8-16
6	828518	Nut Tee Fence
7	828524	Plate Stop
8	828522	Bolt Shoulder 9mm x 19mm
9	805467-11	* Screw Hex hd 5/16-18 x 1-3/4
10	828528	Plate Fence Pivot
11	828516	Screw Pivot
12	118645	Nut Hex Jam 3/8-16
13	828712	Knob Fence Tilt
14	805467-6	* Screw Hex Hd 5/16-18 x 1
15	805482	* Nut Hex Jam 5/16-18
16	828447	Stud Pivot

Key No.	Part No.	Description
17	813640	* Nut Hex Jam 1/2-20
18	828404	Fence
19	805297-8	* Screw Flat Hd Soc 5/16-18 x 1-1/2
20	828520	Nut Handle
21	828525	Bolt Shoulder 10 x 6
22	828521	Nut Pivot
23	828519	Stop Fence
24	805485	* Nut Hex Jam 7/15-14
25	828446	Shaft Lock
26	828526	Collar Lock
27	805551-2	* Washer Flat 1/4 x 1/2 x 1/16
28	809491-5	* Screw Pan Cr 1/4-20 x 1/2
29	828401	Handle Asm
30	828529	Bracket Fence
31	805567-6	Washer .63 I.D. x 1-3/4 x 5/32


* Standard hardware item, may be purchased locally

Repair Parts

Parts List for RIDGID 6-1/8" Jointer/Planer Model No. JP06100

RIDGID parts are available on-line at www.ridgidparts.com

Figure 3

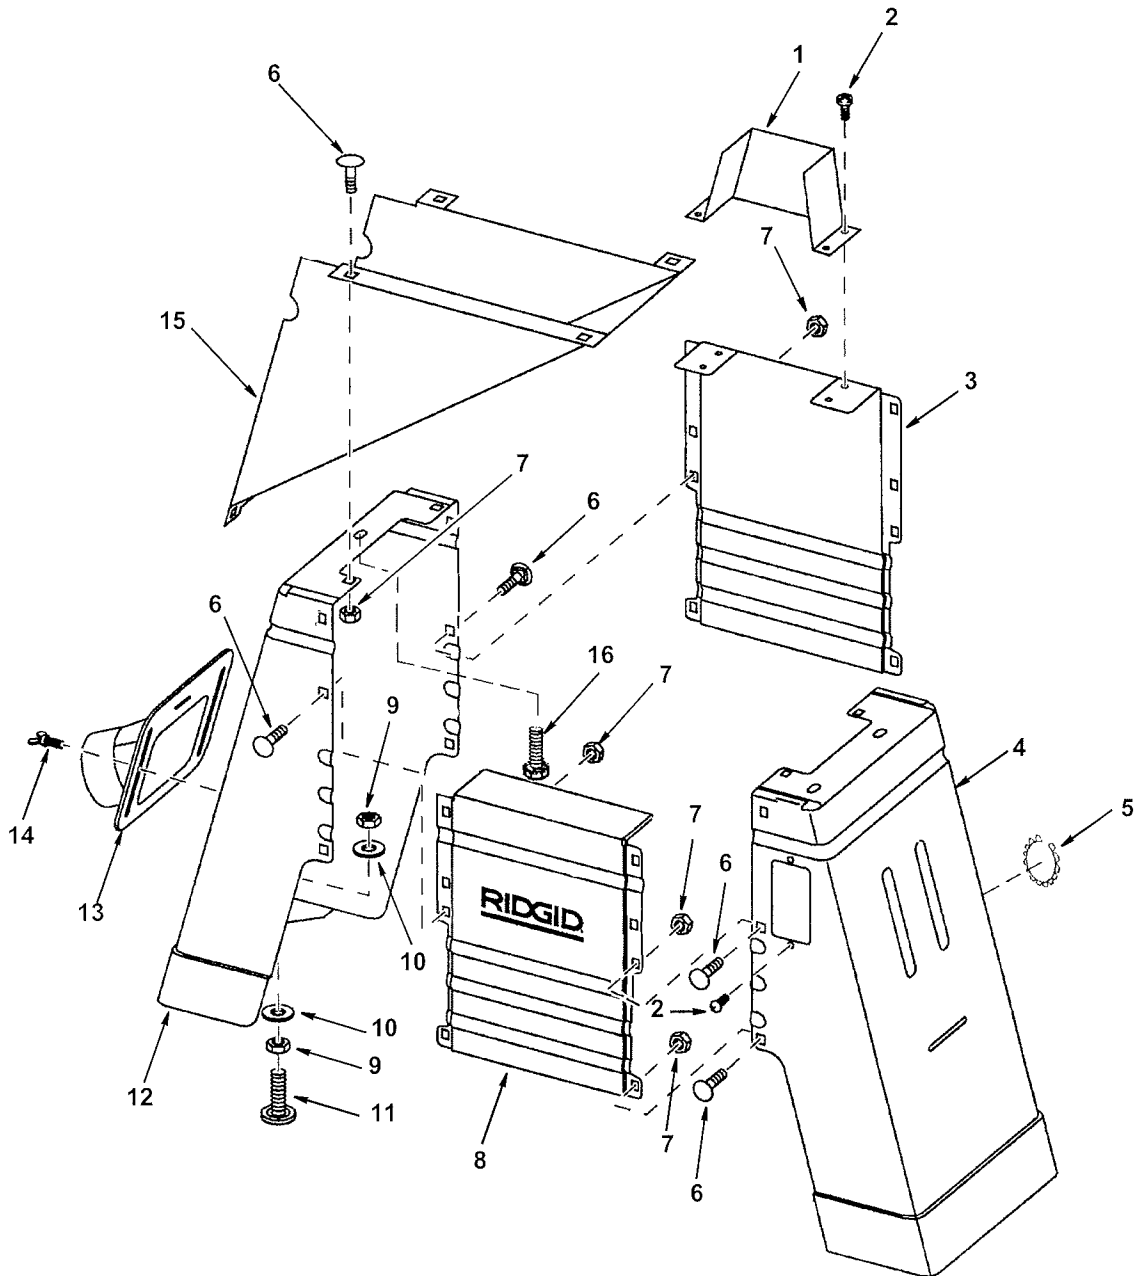

Repair Parts

Parts List for RIDGID 6-1/8" Jointer/Planer

Model No. JP06100

RIDGID parts are available on-line at www.ridgidparts.com

Figure 3

Always order by Part Number - Not by Key Number

Key No.	Part No.	Description
1	828577	Guard Pulley
2	826658	Screw Pan Cr Serr 3/16-24 x 3/8
3	828563	Panel Rear
4	828565	Panel Asm Right (Includes Key 5)
5	824909	Grommet
6	827642-1	Bolt Rd Hd Sh Neck 5/16-18 x 1/2
7	826817-1	Nut Hex Flange 5/16-18
8	828562	Panel Asm Front

Key No.	Part No.	Description
9	118615	* Nut Hex 3/8-16
10	820296-3	Washer 10mm I.D.
11	803835-3	Foot Leveling 3/8
12	828561	Panel Asm Left
13	828411	Chute Dust
14	826525	Screw Wing
15	828566	Bracket Motor
16	828412	Screw Hex Ser FI 3/8-16 x 3/4

* Standard hardware item, may be purchased locally


Repair Parts

Parts List for RIDGID 6-1/8" Jointer/Planer

Model No. JP06100

RIDGID parts are available on-line at www.ridgidparts.com

Figure 4

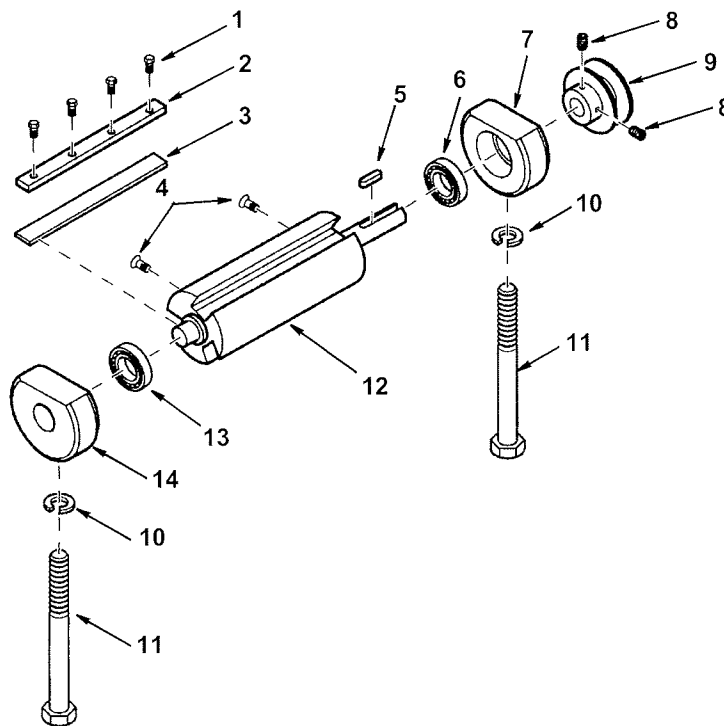

Always order by Part Number - Not by Key Number

Key No.	Part No.	Description
1	824886	Screw 1/4-28 x 7mm
2	824885	Wedge
3	AC8600	† Blade
4	821030	Screw Flat Hd Hex Soc M5 x 0.8-12
5	818654-7	Key
6	820722-5	Bearing
7	824881-1	Support Bearing

Key No.	Part No.	Description
8	160033-1	* Soc Set Screw 1/4-20 x 3/8
9	824888	Pulley
10	818826-8	* Lockwasher M10
11	824890	Screw Hex 3/8-24 x 3-1/2
12	828399	Cutter head
13	820722-6	Bearing
14	824879-1	Support Bearing

† These parts are available where you purchased your jointer.


Repair Parts

Parts List for RIDGID 6-1/8" Jointer/Planer

Model No. JP06100

RIDGID parts are available on-line at www.ridgidparts.com

Figure 5

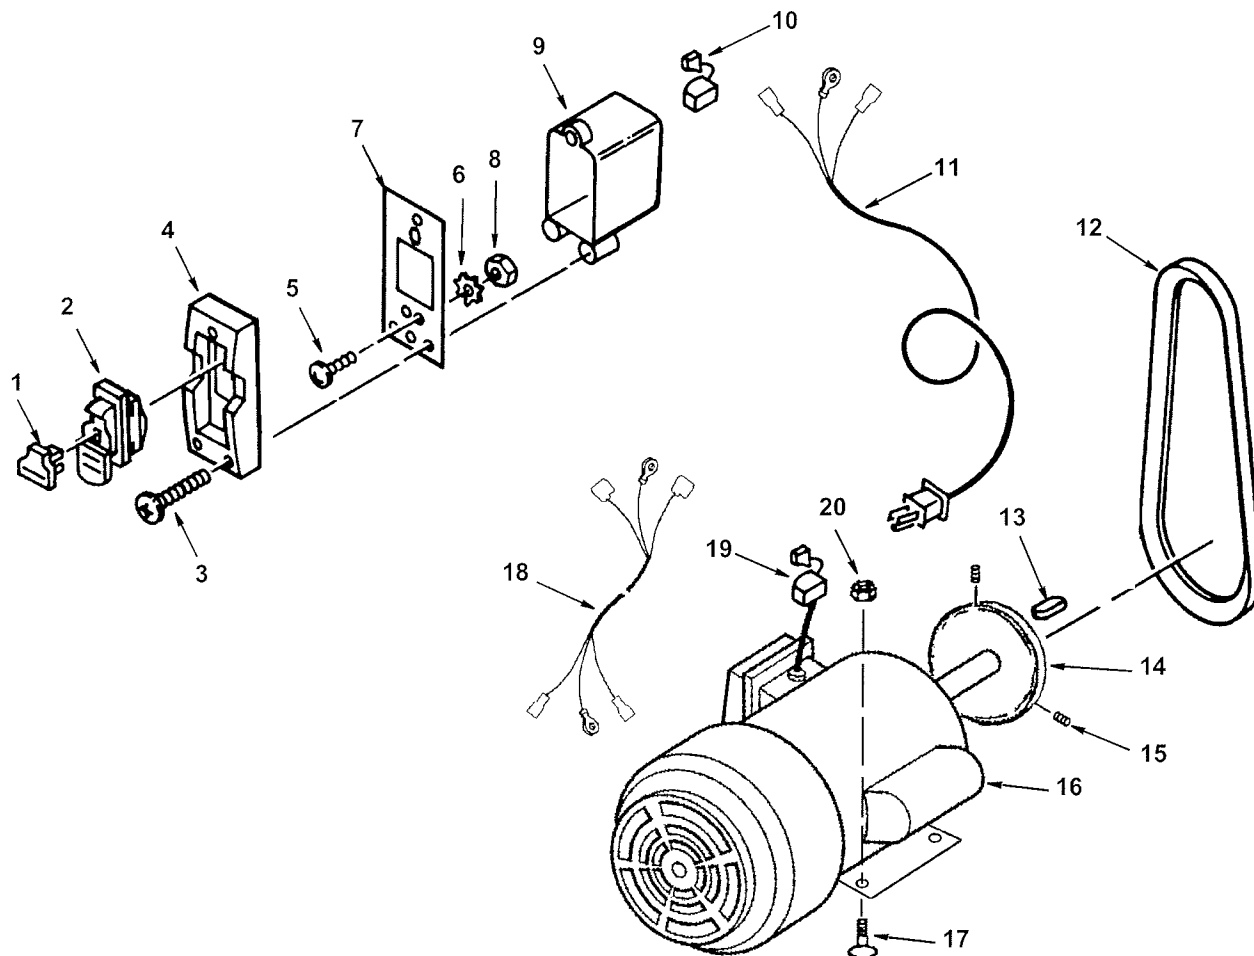

Always order by Part Number - Not by Key Number

Key No.	Part No.	Description
1	826122	Key Switch
2	826123	Switch Locking
3	817357-5	* Screw Ty AB M4 x 1.6-18
4	826395	Bezel Switch
5	808275-4	* Screw Pan Hd #8-32 x 3/8
6	138164	* Lockwasher #8
7	826653	Plate Switch Bezel
8	805475	* Nut #8-32
9	824914	Box Switch
10	169123-15	Strain Relief 6P3-4

Key No.	Part No.	Description
11	824911-1	Cord w/Plug
12	817393-7	V-Belt A-36
13	818654-8	Key
14	824931	Pulley
15	160033-1	Screw Set 1/4-20 x 3/8
16	828530	Motor
17	827642-1	* Bolt Rd Hd Sh 5/16-18 x 1/2
18	824915-1	Cord Motor
19	69164	Strain Relief 6N3-4
20	826817-1	Nut

* Standard hardware item, may be purchased locally