 


# **JET**

 
**EQUIPMENT & TOOLS**

## **OPERATOR'S MANUAL**


### **JSM-606/610/612/620/630 BELT SANDERS**

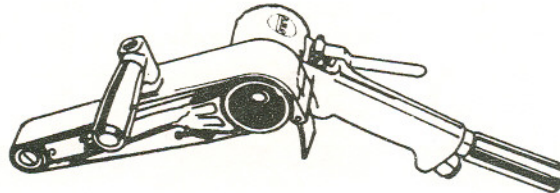

JSM-630

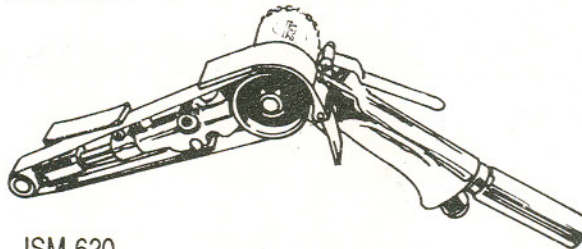


JSM-620

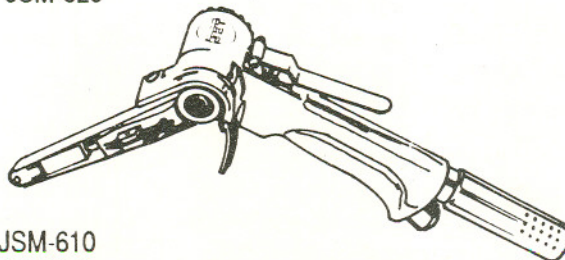 

JSM-610  
JSM-612  
JSM-606

## JSM-620 Belt Sander

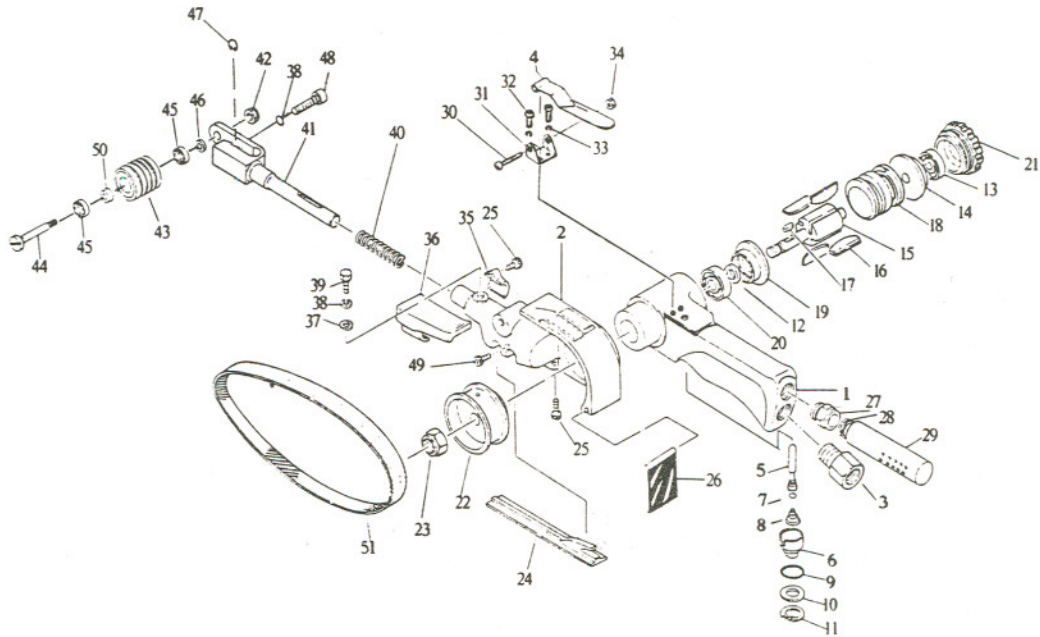 

No	parts No	Parts Name	O'ty	price	No	parts No	Parts Name	O'ty	price
1	62001	Housing	1		27	62027	Nipple	1	
2	62002	Guard Body	1		28	62028	Spring	1	
3	62003	Air Inlet	1		29	62029	Silencer	1	
4	62004	Lever	1		30	62030	Cross-Recessed Pan Head Machine Screw	1	
5	62005	Valve Stem	1		31	62031	Lever Support	1	
6	62006	Adjust Valve	1		32	62032	Cross-Recessed Pan Head Machine Screw	1	
7	62007	O Ring	1		33	62033	Spring Washer	1	
8	62008	Spring	1		34	62034	Hexagon Nut	1	
9	62009	O Ring	1		35	62035	Bushing	1	
10	62010	Spacer	1		36	62036	Finger Pad	1	
11	62011	Retaining Ring	1		37	62037	Washer	1	
12	62012	Distance Collar	1		38	62038	Spring Washer	2	
13	62013	Ball Bearing	1		39	62039	Screw	1	
14	62014	Rear End Plate	1		40	62040	Spring	1	
15	62015	Rotor	1		41	62041	Arm	1	
16	62016	Blade (4 pcs/set)	4		42	62042	Nut	1	
17	62017	Sunk Key	1		43	62043	Idle Pulley	1	
18	62018	Cylinder	1		44	62044	Shaft	1	
19	62019	Front End Plate	1		45	62045	Ball Bearing	2	
20	62020	Ball Bearing	1		46	62046	Spacer	1	
21	62021	Cap	1		47	62047	Retaining Ring	1	
22	62022	Drive Pulley	1		48	62048	Bolt	1	
23	62023	Hexagon Nut	1		49	62049	Bolt	1	
24	62024	Flat Shoe	1		50	62050	Spacer	1	
25	62025	Hexagon Socket Head Bolt	2		51	62051	Grinding Belt	1	
26	62026	Dust cover	1						

**RPK-620 Repair Kit: Contains part # 7,9,11,16,26**

**RBK-620 Rebuild Kit: Contains part # 42,43,44,45,46,47,50**