



LRXE5600 Generator UT-03823 - Brush Head - Generator

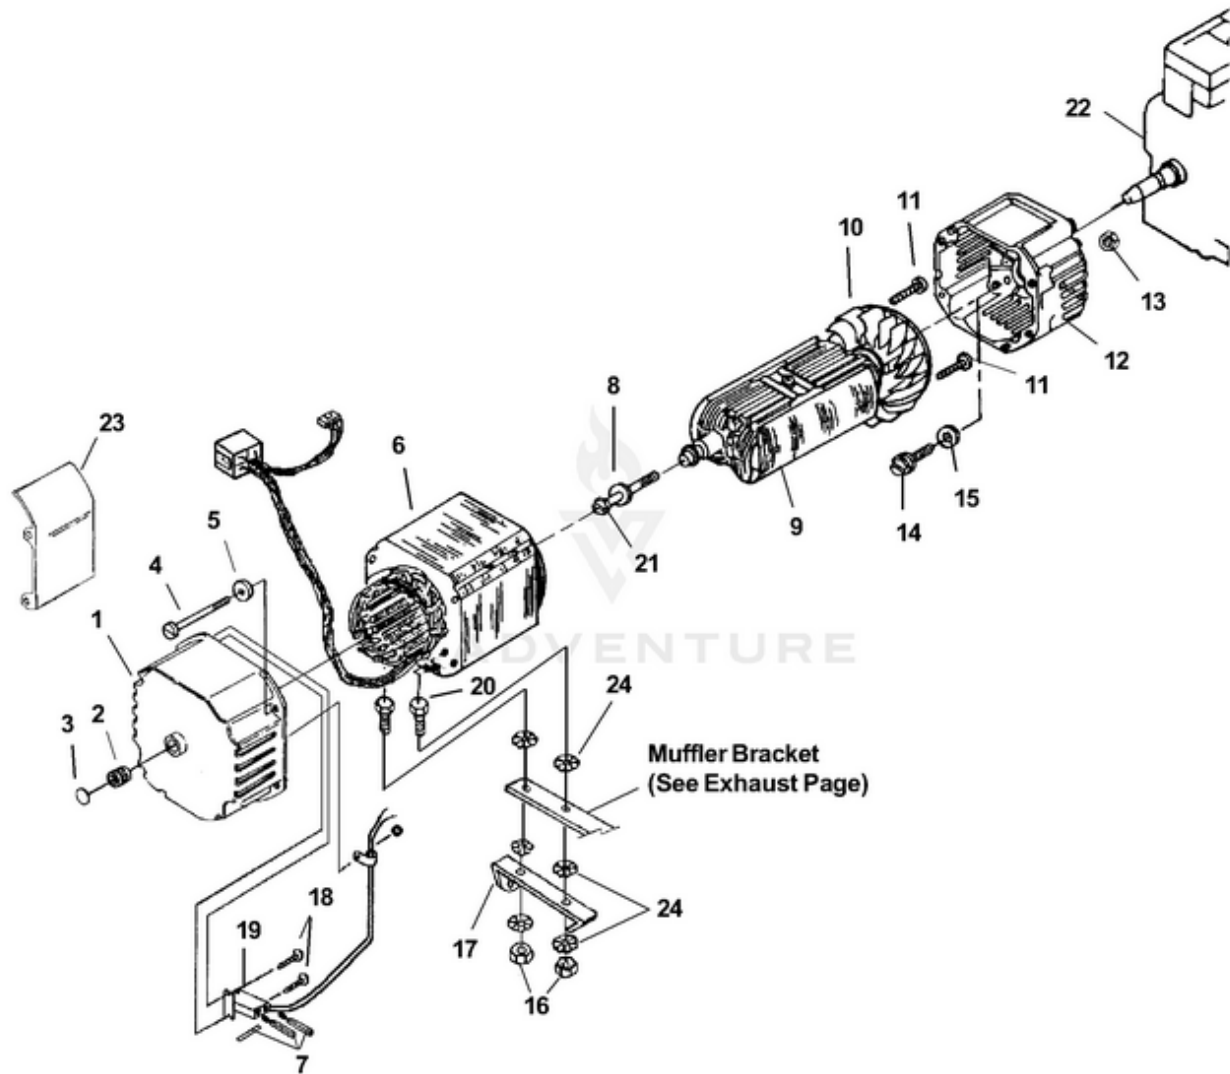

Rendered by LeadVenture, Inc.


<b>Ref #</b>	<b>Part #</b>	<b>Description</b>	<b>Qty</b>	<b>Context Note</b>
1	UP03527	Complete Brush Head	1	
2	UP03450	Bearing-Needle	1	
3	UP03437	Plug-Expansion	1	
4	UP03430	Bolt-Stator	4	Torque Specs 60-80 In/Lbs; 6.8-9.0 Nm
5	UP03418	Washer-Flat (1/4")	4	
6	A06770AS	(Stator & Harness)	1	Also order Decal Kit P/N UP04905
7	UP03736	Brush & Retainer Kit	1	
8	UP03407	Washer-Lock (5/16")	1	
9	UP03749	Rotor	1	
10	UP03737	Fan-Generator	1	
11	UP03403	Screw-Pan Hd. (6-19 X 3/4")	4	Torque Specs 12-16 In/Lbs; 1.4-1.8 Nm
12	UP04853	End Bell	1	
13	UP03400	Nut-Hex (1/4-20)	4	
14	UP03384	Screw-Hex Hd. (3/8-16 x .875)	4	Torque Specs 240-250 In/Lbs; 27.1-28.2 Nm
15	UP03412	Washer-Lock	4	
16	UP03397	Nut-Hex (5/16-18)	2	
17	UP03459	Bracket-Generator Support	1	
18	UP03403	Screw-Plastite (6/19 X 3/4")	2	Torque Specs 12-16 In/Lbs; 1.4-1.8 Nm
19	UP03449	Brush Holder	1	
20	80085	Screw- Hex Hd. (5/16-18 X 1")	2	Torque Specs 150-155 In/Lbs; 16.9-17.5 Nm
21	UP03425	Bolt-Rotor	1	Torque Specs 100-140 In/Lbs; 11.3-15.8 Nm
22	UP04475	Engine (EH36)	1	
23	UP05403	Brush Shield	1	
24	UP03479	Washer-Lock	6	
	UP04905	Decal Kit		

LRXE5600 Generator UT-03823 - Carburetor

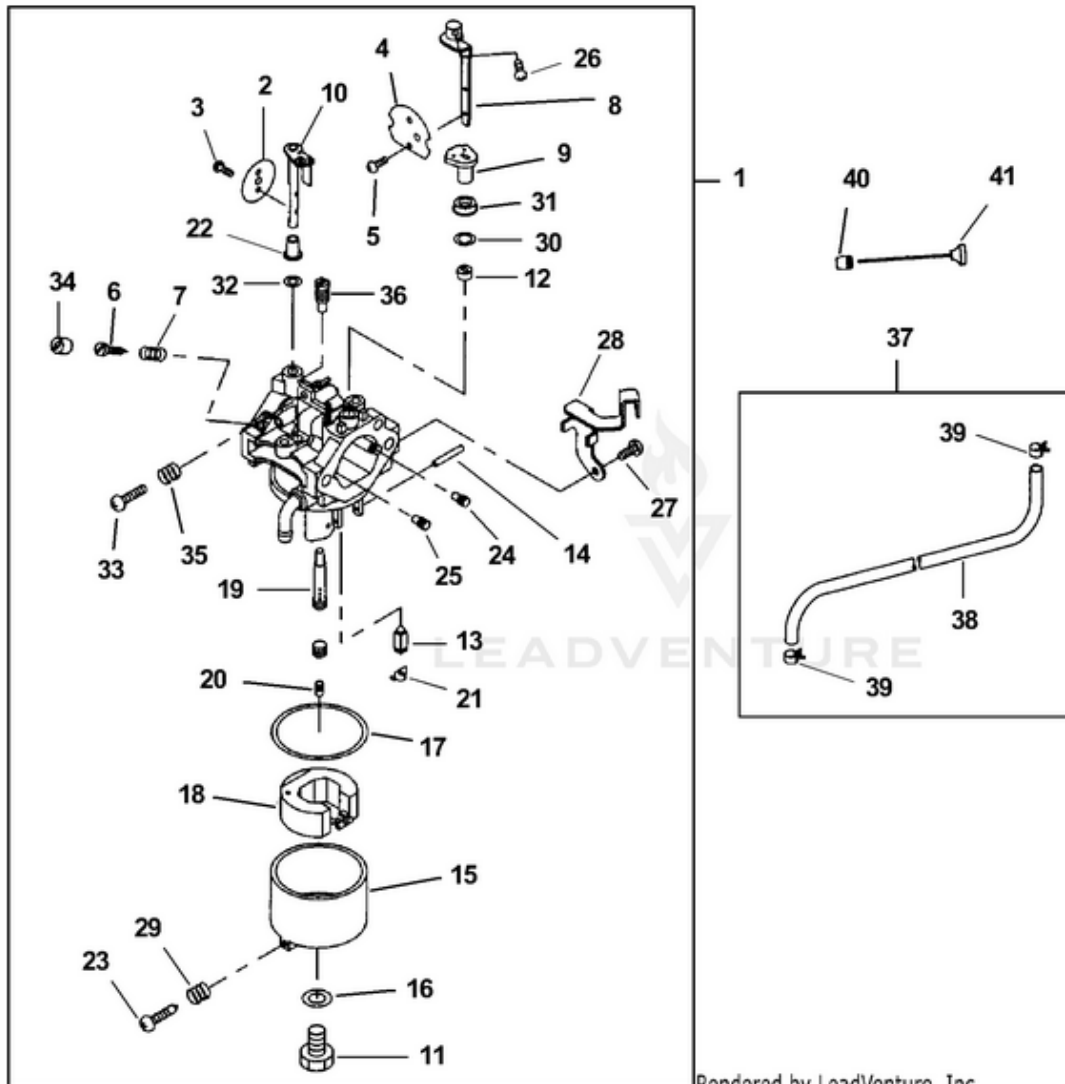

Ref #	Part #	Description	Qty	Context Note
1	UP05075	Carburetor	1	
2	UP05076	Throttle valve	1	
3	UP03314	Screw	2	
4	UP05077	Choke valve	1	
5	UP03316	Screw	2	
6	UP05078	Pilot jet	1	
7	UP03318	Spring	1	
8	UP05079	Choke lever	1	
9	UP03320	Ring	1	
10	UP05080	Throttle shaft	1	
11	UP05081	Bolt	1	Torque Specs 49 In/Lbs; 6.5 Nm
12	UP03323	Ring	1	
13	UP05082	Needle valve	1	
14	UP03325	Float pin	1	
15	UP05083	Float chamber body	1	
16	UP03327	Packing	1	
17	UP03328	Chamber packing	1	
18	UP05087	Float	1	
19	UP05088	Main nozzle	1	
20	UP05089	Main jet	1	
21	UP05090	Clip	1	
22	UP05091	Ring	1	
23	UP05092	Screw	1	
24	UP05093	Air jet	1	
25	UP05094	Air jet	1	
26	UP05096	Screw	1	
27	UP05097	Screw	1	
28	UP05098	Bracket	1	
29	UP05099	Spring	1	
30	UP05100	Seal	1	
31	UP03336	Cap	1	
32	UP03333	Seal	1	
33	UP03334	Adj screw	1	
34	UP03340	Cap	1	
35	UP03338	Spring	1	
36	UP05078	Pilot Jet	1	
37	UP05101	Fuel Pipe	1	
38	UP05015	Rubber Pipe	1	
39	UP04016	Hose Clamp	2	
40	UP04998	Grommet	1	
41	UP05001	Knob cp	1	


LRXE5600 Generator UT-03823 - Control Panel

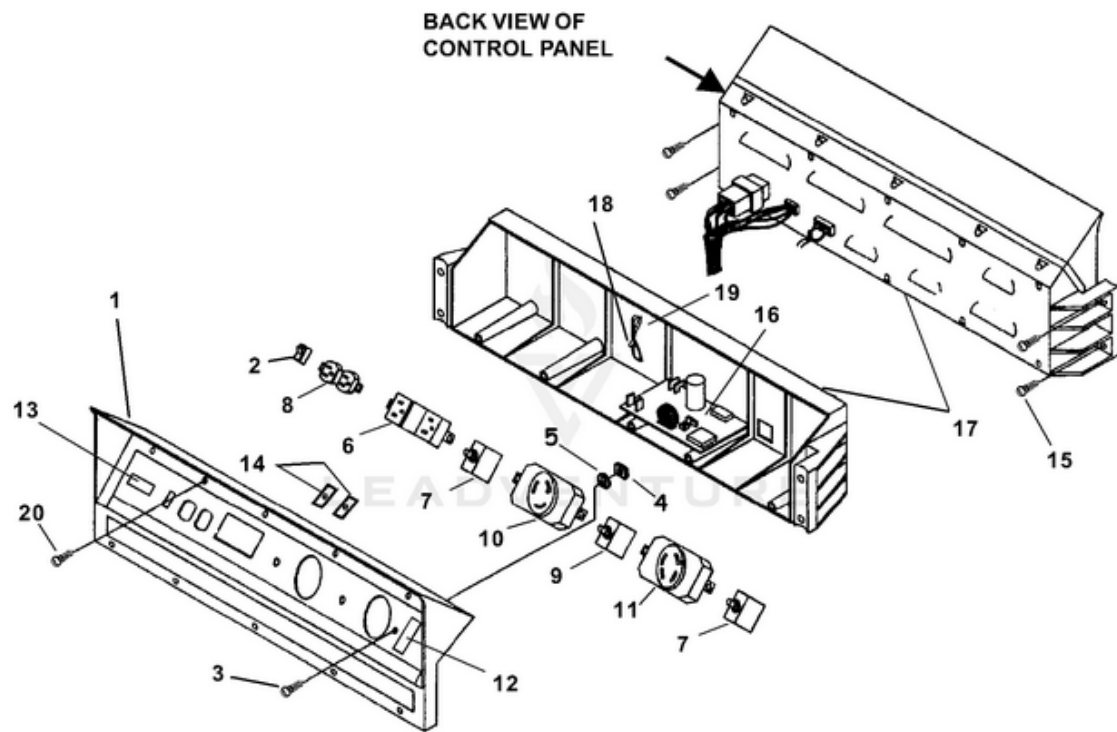

Rendered by LeadVenture, Inc.

Ref #	Part #	Description	Qty	Context Note
1	UP03528	Control Panel	1	
2	UP03438	Switch	1	
3	UP03389	Screw-Pan Hd. (8-32 X 7/8")	8	Torque Specs 12-14 In/Lbs; 1.4-1.6 Nm
4	UP03393	Nut-Hex	8	
5	UP03410	Washer-Lock	8	
6	UP03110	Receptacle (GFCI)	1	
7	UP03489	Circuit Breaker (20 amp)	2	
8	UP03498	Receptacle-Duplex	1	
9	UP03469	Circuit Breaker (30 amp)	1	
10	UP03477	Receptacle-Locking (120V)	1	
11	UP03478	Receptacle-Locking (240V)	1	
12	UP04800	Volt Meter	1	
13	UP04799	Hour Meter	1	
14	UP03501	Rubber Bumper	2	
15	UP03420	Screw-Torx Hd. (10-24 X 1/2")	4	Torque Specs 25-35 In/Lbs; 2.8-4.0 Nm
16	UP00087	Control Board	1	
17	UP03466	Control Panel-Back	1	
18	UP03468	Clip, Tie	1	
19	UP03454	Tie, Cable	1	
20	UP03405	Screw, Plastite (8-16 X 3/4")	10	Torque Specs 15-20 In/Lbs; 1.7-2.3 Nm

## LRXE5600 Generator UT-03823 - Crankcase

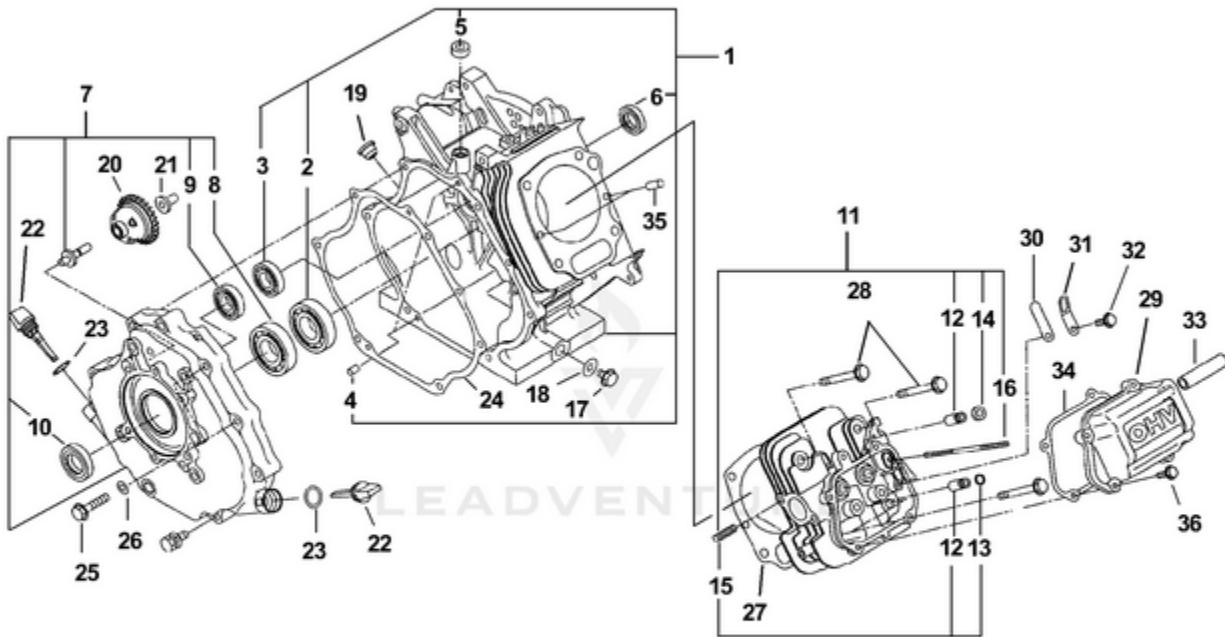


Rendered by LeadVenture, Inc.

<b>Ref #</b>	<b>Part #</b>	<b>Description</b>	<b>Qty</b>	<b>Context Note</b>
1	UP04895	Crankcase	1	
2	UP04899	Ball bearing	1	
3	UP04900	Ball bearing	1	
4	UP03220	Dowel pin	2	
5	UP04902	Oil seal	1	
6	UP04898	Oil seal	1	
7	UP04904	Main bearing cover	1	
8	UP04899	Ball bearing	1	
9	UP04900	Ball bearing	1	
10	UP04898	Oil seal	1	
11	UP04911	Cylinder head	1	
12	UP03740	Valve guide	2	
13	UP04896	Clip	1	
14	UP04897	Seal, Int valve	1	
15	UP03221	Stud	2	
16	UP04901	Stud	2	
17	UP03223	Plug	2	
18	UP03224	Gasket	2	
19	UP04903	Plug, rubber	1	
20	UP04906	Governor gear cp	1	
21	UP03229	Governor sleeve	1	
22	UP04907	Oil gauge	2	
23	UP04908	Gasket	2	
24	UP04909	Bearing cover gasket	1	
25	UP04910	Flange, bolt	7	Torque Specs 150-162 In/Lbs; 17-18.5 Nm
26	UP03993	Washer	2	
27	UP04912	Head gasket	1	
28	UP04913	Flange bolt	4	Torque Specs 159-188 In/Lbs; 18.0-21.2 Nm
29	UP04914	Rocker cover cp	1	
30	UP04915	Retainer plate	1	
31	UP04916	Leaf valve	1	
32	UP03274	Flange bolt	1	
33	UP04917	Rubber pipe	1	
34	UP04918	Gasket rocker cover	1	
35	UP03220	Dowel pin	2	
36	UP03984	Flange bolt	4	Torque Specs 72-84 In/Lbs; 8.0-9.5 Nm
37	UP04919	Oil shelter plate	1	(Not Shown)




LRXE5600 Generator UT-03823 - Crankshaft - Piston

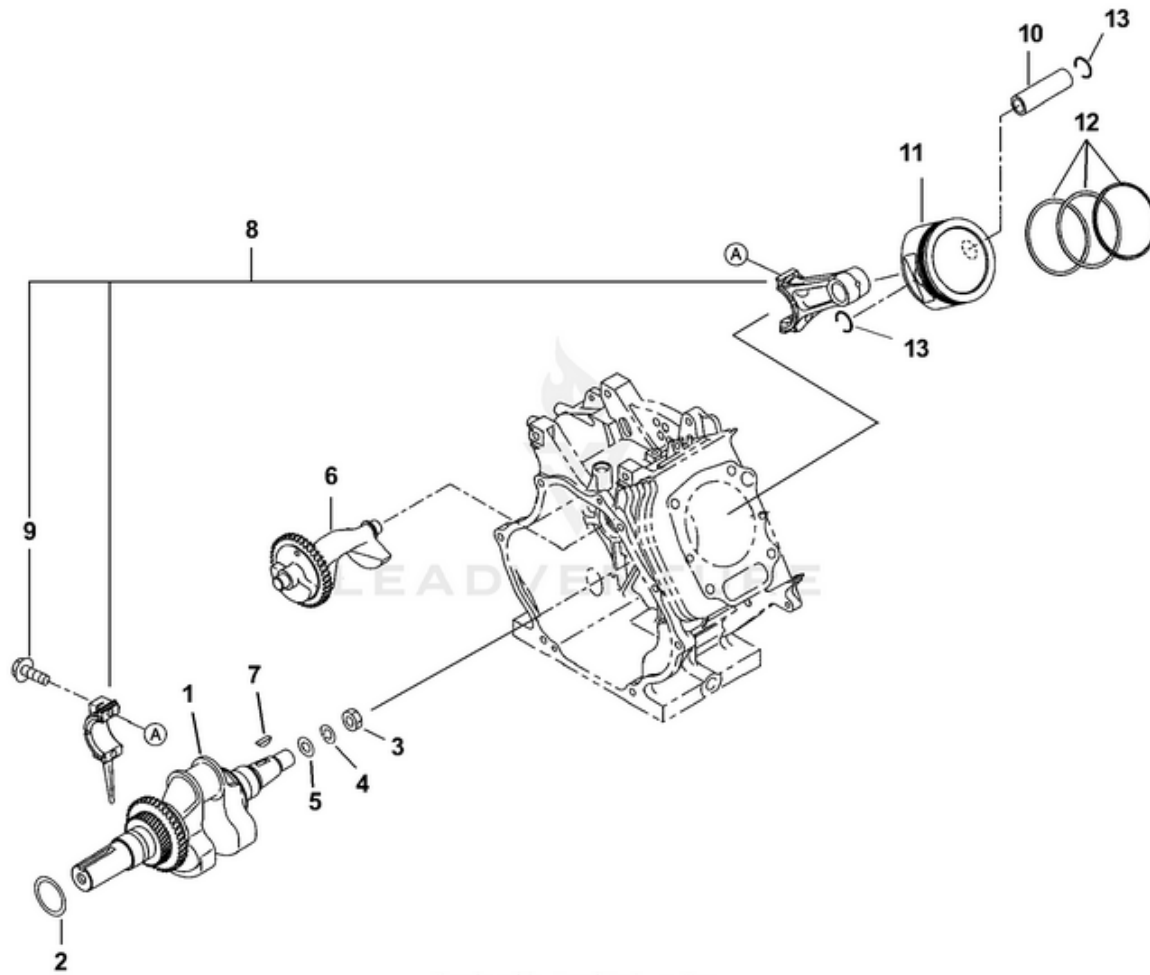

Rendered by LeadVenture, Inc.

Ref #	Part #	Description	Qty	Context Note
1	UP04920	Crankshaft cp	1	
2	UP04921	Spacer (.6)	1	
	UP04922	Spacer (.8)	1	
	UP04923	Spacer (1.0)	1	
3	UP04924	Nut	1	Torque Specs 434-470 In/Lbs; 49.0-53.1 Nm
4	UP03250	Spring washer	1	
5	UP04925	Washer	1	
6	UP04926	Balancer shaft	1	
7	UP04927	Woodruff key	1	
8	UP04928	Connecting rod	1	
9	UP04929	Connecting rod bolt	2	Torque Specs 122-145 In/Lbs; 13.8-16.4 Nm
10	UP04930	Piston pin	1	
11	UP04931	Piston	1	
	UP04932	Piston (.25)	1	
	UP04933	Piston (.5)	1	
12	UP04934	Piston ring set	1	(Std)
	UP04935	Piston ring set (.25)	1	
	UP04937	Piston ring set (.5)	1	
13	UP04936	Clip	2	


LRXE5600 Generator UT-03823 - Electric Motor

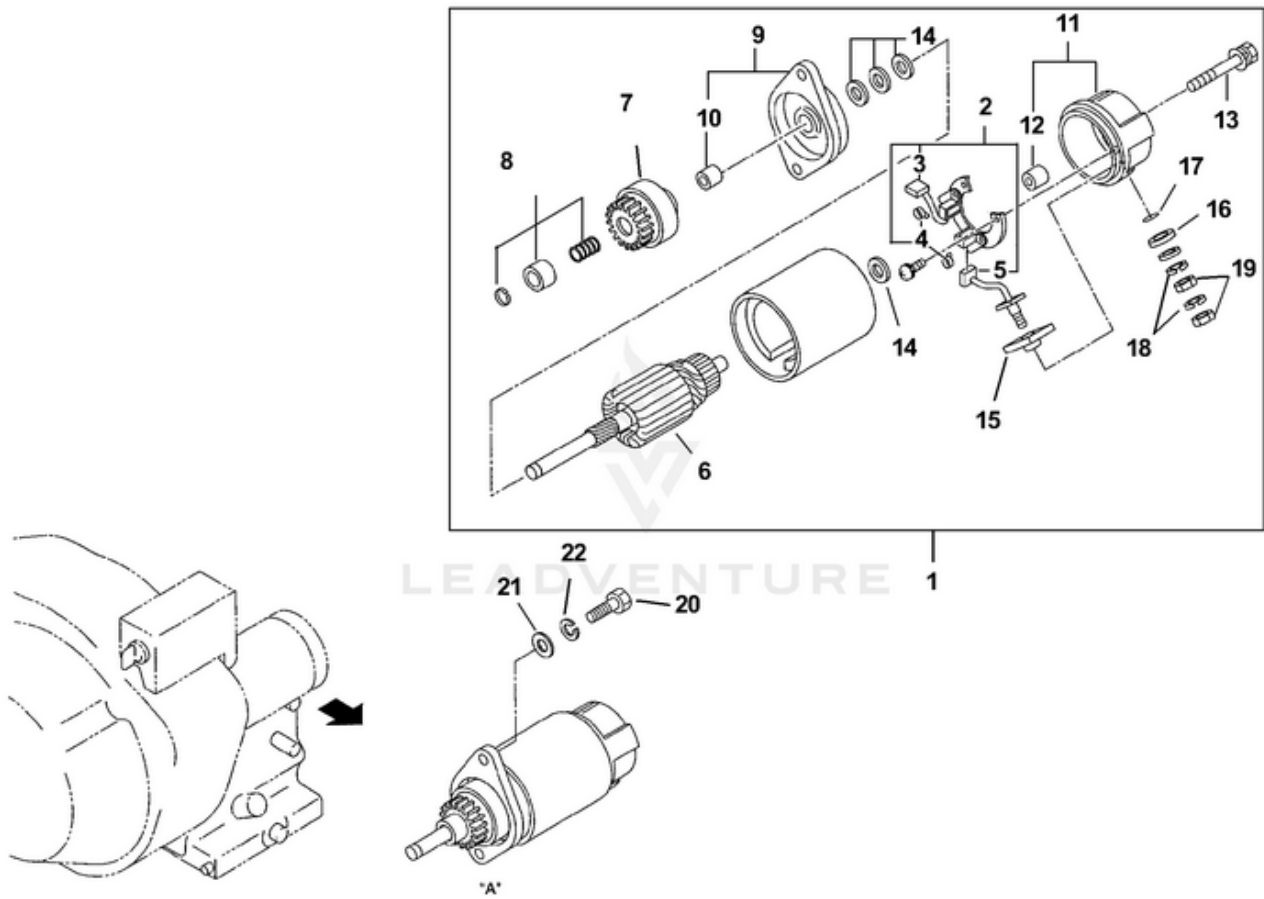

Rendered by LeadVenture, Inc.

Ref #	Part #	Description	Qty	Context	Note
1	UP05022	Starting motor assy	1		
2	UP05025	Holder assy, brush	1		
3	UP05023	Brush	1		
4	UP05024	Spring, brush	2		
5	UP05031	Brush (-)	1		
6	UP05027	Armature assy	1		
7	UP05028	Pinion assy	1		
8	UP05029	Pinion stopper set	1		
9	UP05030	Front cover assy	1		
10	UP05037	Front metal	1		
11	UP05032	Rear cover assy	1		
12	UP05033	Case metal	1		
13	UP05035	Through bolt	2		
14	UP05036	Washer kit	1		
15	UP05038	M brush 1	1		
16	UP05039	M brush 2	1		
17	UP05040	O ring	1		
18	UP04503	Spring Washer	2		
19	UP03299	Nut	2		
20	UP05041	Bolt, starter	2		
21	UP05042	Washer	2		
22	UP05043	Spring washer	2		


LRXE5600 Generator UT-03823 - Exhaust

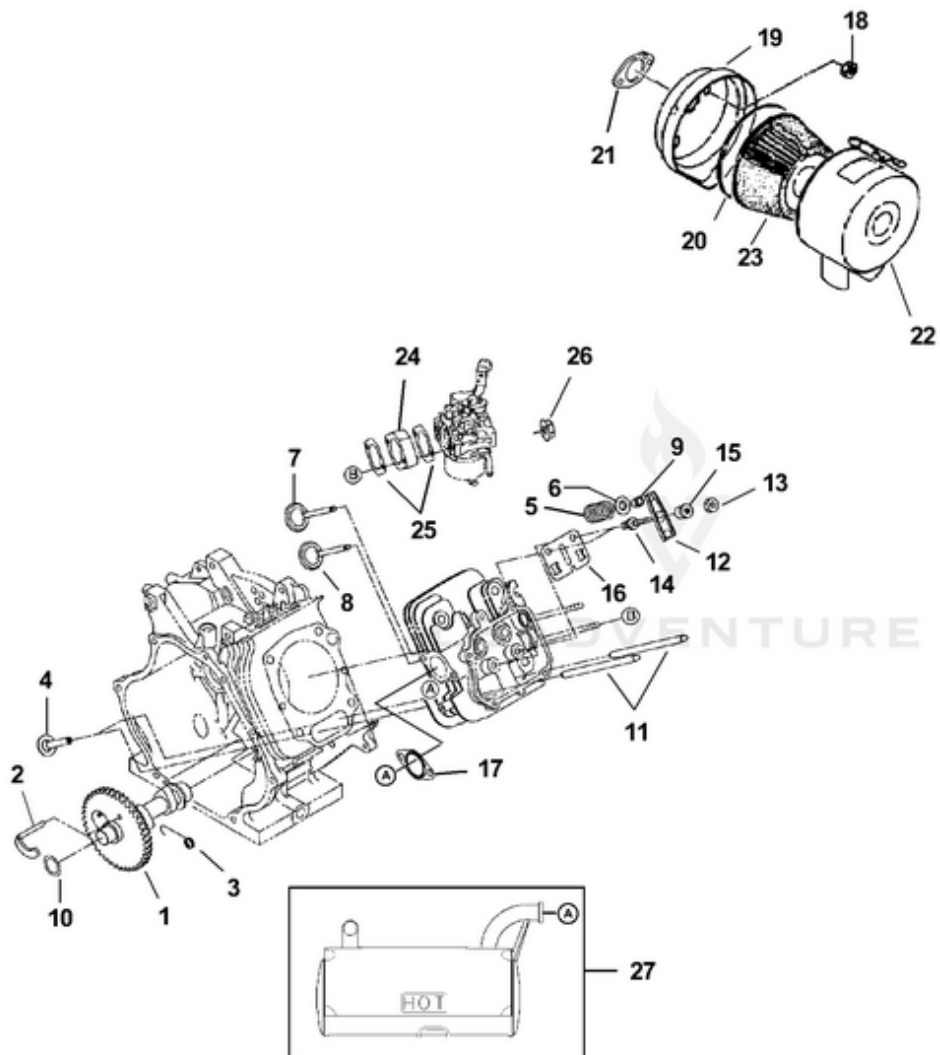

Rendered by LeadVenture, Inc.

Ref #	Part #	Description	Qty	Context Note
1	UP04938	Camshaft	1	
2	UP04939	Release lever cp	1	
3	UP04940	Return spring	1	
4	UP03957	Tappet	2	
5	UP04416	Valve spring	2	
6	UP04942	Spring retainer	2	
7	UP04943	Intake valve	1	
8	UP04944	Exhaust valve	1	
9	UP04419	Collet, valve	4	
10	UP04945	Spacer T=0.6	1	
	UP04946	Spacer T=0.7	1	
	UP04947	Spacer T=0.8	1	
11	UP04948	Push rod	2	
12	UP04949	Rocker arm	2	
13	UP04950	Nut	2	Torque Specs 62 In/Lbs; 7 Nm
14	UP04951	Bolt, pivot	2	
15	UP04952	Pivot	2	
16	UP04953	Guide plate	2	
17	UP04954	Gasket, exhaust	1	
18	UP04979	Cap nut	1	
19	UP04981	Cleaner base cp	1	
20	UP04983	Packing	1	
21	UP04984	Packing	1	
22	UP04985	Cleaner cover	1	
23	UP04978	Element, Air Cleaner	1	
24	UP04986	Insulator	1	
25	UP04987	Gasket, insulator	2	
26	UP03987	Flange nut	2	
27	UP04990	Muffler	1	

LRXE5600 Generator UT-03823 - Frame - Fuel Tank

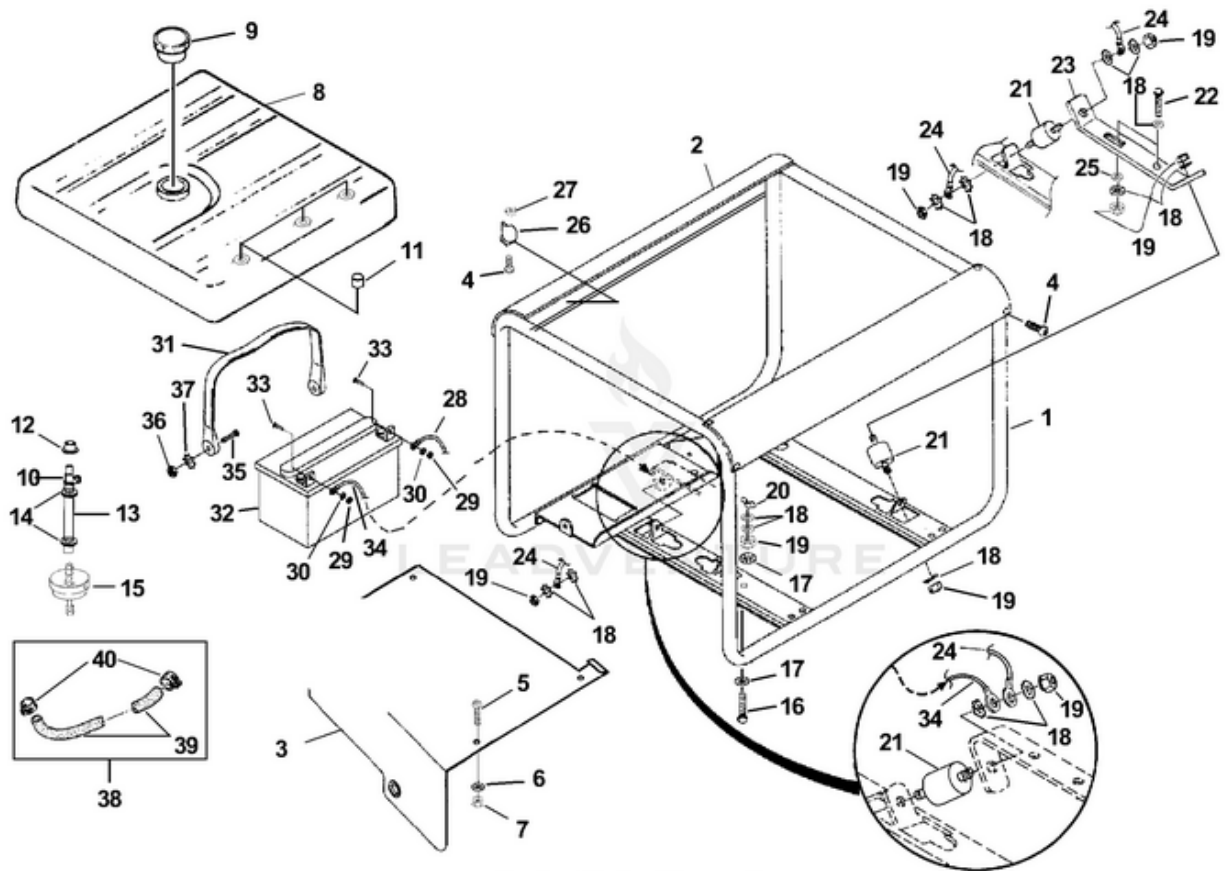


Rendered by LeadVenture, Inc.

Ref #	Part #	Description	Qty	Context Note
1	UP05219	Roll Cage-Recoil	1	
	UP05221	Roll Cage-Electric Start	1	
2	UP03460	Brace-Tank Support	2	
3	UP05222	Shield-Fuel Tank	1	
4	UP05732	Screw Serrated Hd.-Torx (10-24 X 1/2")	10	Torque Specs 25-35 In/Lbs; 2.8-4.0 Nm
5	UP03389	Screw-Pan Hd. (8-32 X 3/8")	4	Torque Specs 8-12 In/Lbs; .9-1.4 Nm
6	UP03410	Washer-Lock #8	4	
7	UP03393	Nut-Hex (8-32)	4	
8	UP05220	Fuel Tank (7 Gal.)	1	
9	UP03458	Cap-Fuel (2 1/4" Dia.)	1	
10	UP03476	Valve-Fuel	1	
11	UP03465	Pad-Fuel Tank	6	
12	UP03480	Bushing	1	
13	UP03486	Hose-Fuel (8")	1	
14	UP03434	Clip-Hose	2	
15	UP03697	Fuel Filter	1	
16	UP03382	Screw-Hex Hd. (5/16-18 X 1 1/4")	1	Torque Specs 145-155 In/Lbs; 16.4-17.5 Nm
17	UP03479	Washer, Lock -Int - Ext. (3/8")	2	
18	UP03413	Washer-Lock (int.)	18	
19	UP03397	Nut-Hex (5/16-18)	11	
20	UP03395	Nut-Wing (5/16-18)	1	
21	UP03538	Isolator	4	
22	UP03381	Screw-Hex Hd. (5/16-18 X 3/4")	2	Torque Specs 145-155 In/Lbs; 16.4-17.5 Nm
23	UP03535	Support - Eng.	1	
24	UP03511	Ground Strap	2	
25	UP03416	Washer-Flat	1	
26	UP04088	Stop-Tank	2	
27	UP04217	Nut	2	
	UP03520	Battery & Cable Kit	1	
28	UP03453	Battery Cable (Red to Switch)	1	Torque Specs 25-35 In/Lbs; 2.8-4.0 Nm
29	UP03399	Nut-Hex (1/4-20)	4	
30	UP03409	Washer-Lock	2	
31	UP03455	Strap-Battery Hold Down	1	
32	UP03494	Battery (12 Volt)	1	
33	UP03380	Screw-Hex Hd (1/4-20 x 5/8")	2	
34	UP03456	Battery Cable (Black to Ground)	1	Torque Specs 40-50 In/Lbs
35	UP03468	Screw-Shoulder (10-32 x 1/4")	2	
36	UP03394	Nut-Hex (10-32)	2	
37	UP03411	Washer-Lock	2	Torque Specs 12-16 In/Lbs
38	UP05101	Fuel Pipe	1	
39	UP05015	Rubber Pipe	1	
40	UP04016	Hose Clamp	2	




LRXE5600 Generator UT-03823 - Governor

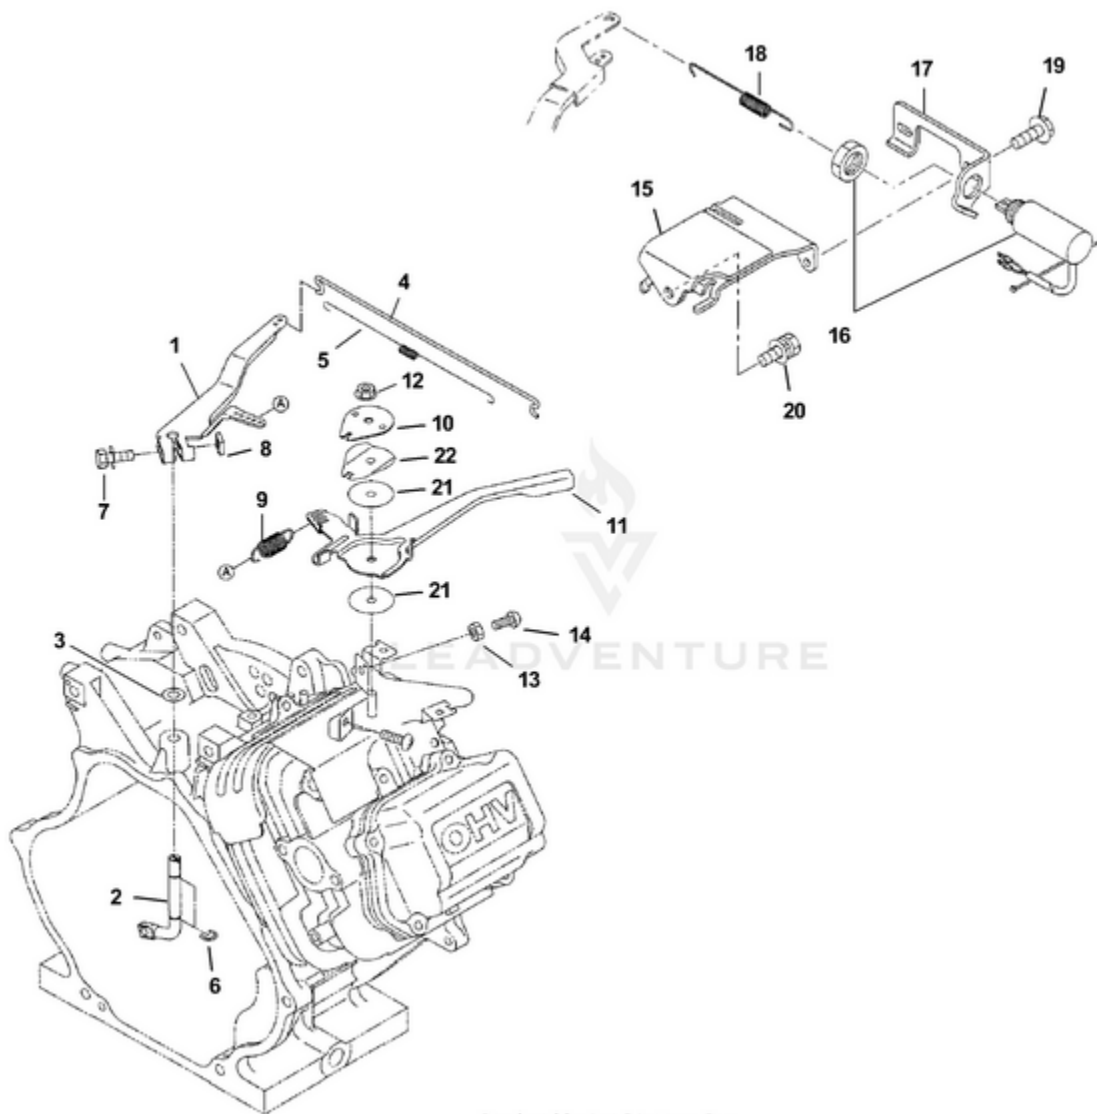

Rendered by LeadVenture, Inc.

Ref #	Part #	Description	Qty	Context Note
1	UP04988	Governor lever	1	
2	UP04989	Governor shaft	1	
3	UP03993	Washer	1	
4	UP04991	Governor rod	1	
5	UP04992	Rod spring	1	
6	UP03292	Clip	2	
7	UP03996	Bolt & washer	1	
8	UP03294	Nut	1	
9	UP04994	Governor spring	1	
10	UP03296	Stop plate	1	
11	UP04996	Speed control lever	1	
12	UP04997	Self lock nut	1	
13	UP03299	Nut	1	
14	UP05000	Screw, panhead	1	Torque Specs 65-80 In/Lbs; 7.3-9.0 Nm
15	UP05055	Bracket, solenoid 1 cp	1	
16	UP05056	Solenoid	1	
17	UP05057	Bracket, solenoid 2 cp	1	
18	UP05058	Spring, solenoid	1	
19	UP05059	Bolt and washer	2	
20	UP03293	Bolt and washer	1	
21	UP06616	Friction Washer	2	
22	UP03297	Spring Washer	1	


LRXE5600 Generator UT-03823 - Ignition (Part 1)

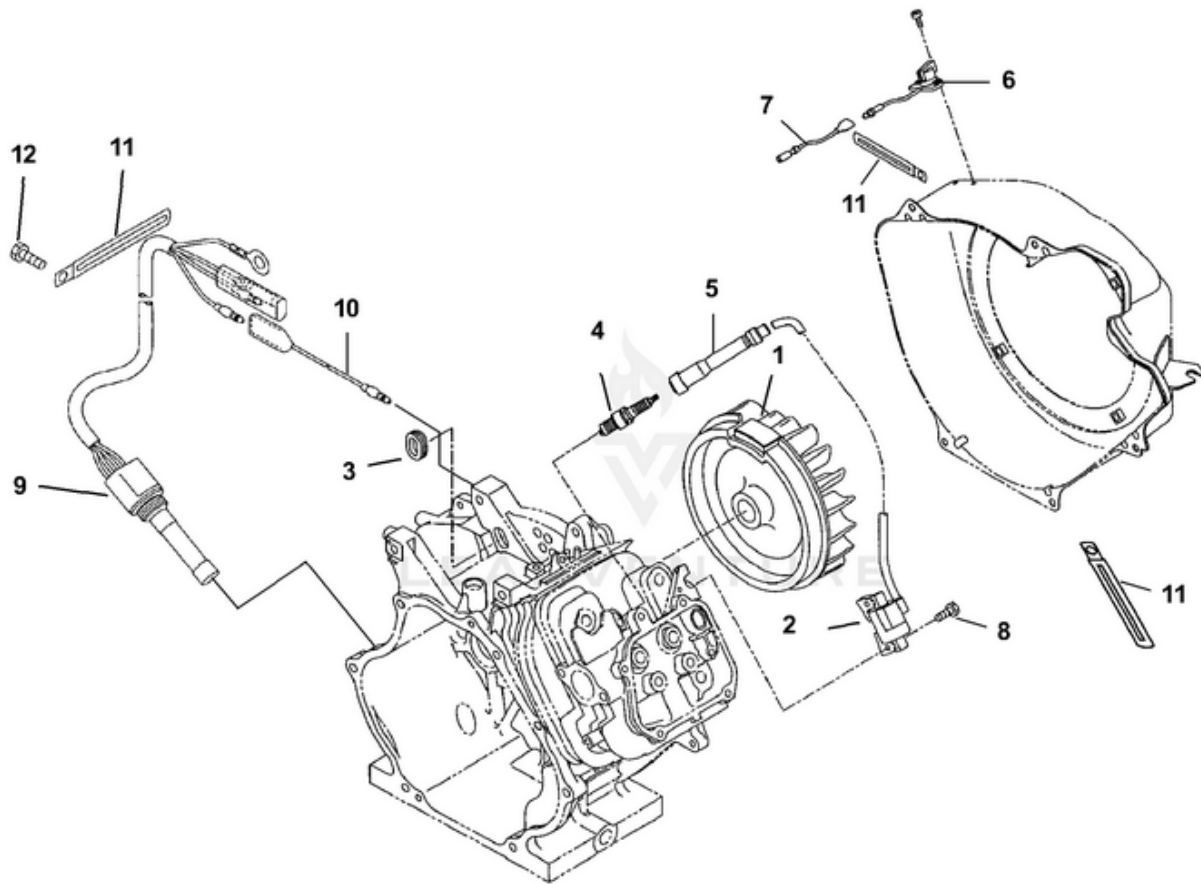

Rendered by LeadVenture, Inc.

Ref #	Part #	Description	Qty	Context Note
1	UP05018	Flywheel	1	
2	UP05019	Ignition coil cp	1	
3	UP03348	Grommet	1	
4	UP05045	Spark plug	1	Torque Specs 166-195 In/Lbs; 18.8-22.0 Nm
5	UP05046	Spark plug cap	1	
6	UP04504	Switch	1	
7	UP05048	Wire	1	
8	UP03293	Bolt and washer	2	Torque Specs 15-20 In/Lbs; 1.7-2.3 Nm
9	UP05054	Oil sensor	1	
10	UP03354	Wire 22cp	1	
11	UP04062	Clamp	3	
12	UP03274	Flange bolt	1	


LRXE5600 Generator UT-03823 - Ignition (Part 2)

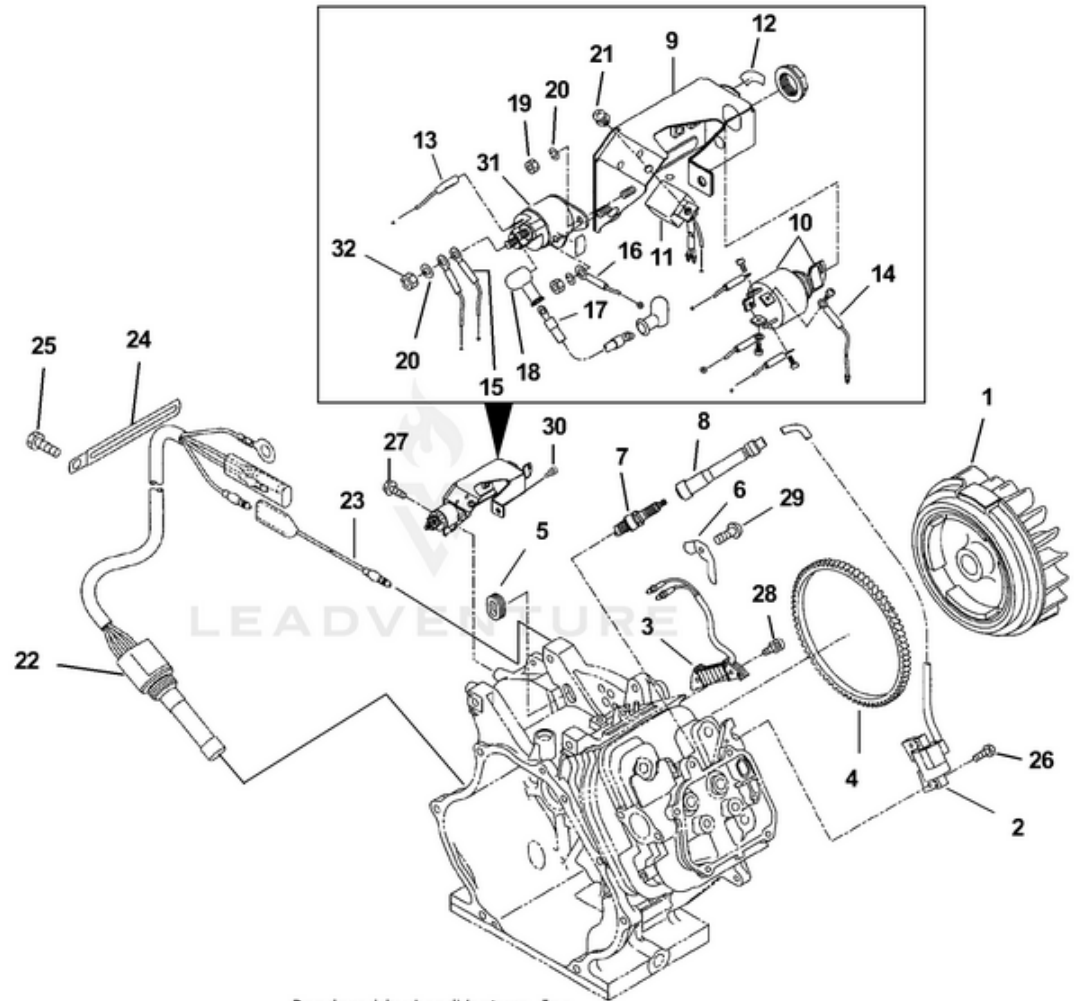

Rendered by LeadVenture, Inc.

Ref #	Part #	Description	Qty	Context Note
1	UP05018	Flywheel	1	Torque Specs 166-195 In/Lbs; 18.8-22.0 Nm
2	UP05019	Ignition coil cp	1	
3	UP05020	Charge coil cp	1	
4	UP05021	Ring gear	1	
5	UP03348	Grommet	1	
6	UP05044	Clamp cp	1	
7	UP05045	Spark plug	1	
8	UP05046	Spark plug cap	1	
9	UP05047	Control box cp	1	
10	UP04521	Magnetic switch	1	
11	UP04506	Diode rectifier cp	1	Torque Specs 15-20 In/Lbs; 1.7-2.3 Nm
12	UP05049	Label, starter switch	1	
13	UP05050	Wire 2 cp (red)	1	
14	UP05051	Wire 3 cp (black)	1	
15	UP04523	Wire 5 cp (green)	1	
16	UP05052	Wire 10 cp (black)	1	
17	UP04522	Wire 20 cp	1	
18	UP04525	Wire casing	2	
19	UP04500	Nut	2	
20	UP04503	Spring washer	3	
21	UP04507	Screw and washer	2	(Not Shown)
22	UP05054	Oil sensor	1	
23	UP03354	Wire 22cp	1	
24	UP04062	Clamp	1	
25	UP03274	Flange bolt	1	
26	UP03293	Bolt and washer	2	
27	UP03242	Flange bolt	1	
28	UP05061	Screw and washer	2	
29	UP04497	Screw, panhead	1	
30	UP05016	Bolt & Washer	1	
31	UP04521	Magnetic Switch	1	(Not Shown)
32	UP03299	Nut	2	
	UP04498	Label, battery	1	

LRXE5600 Generator UT-03823 - Starter

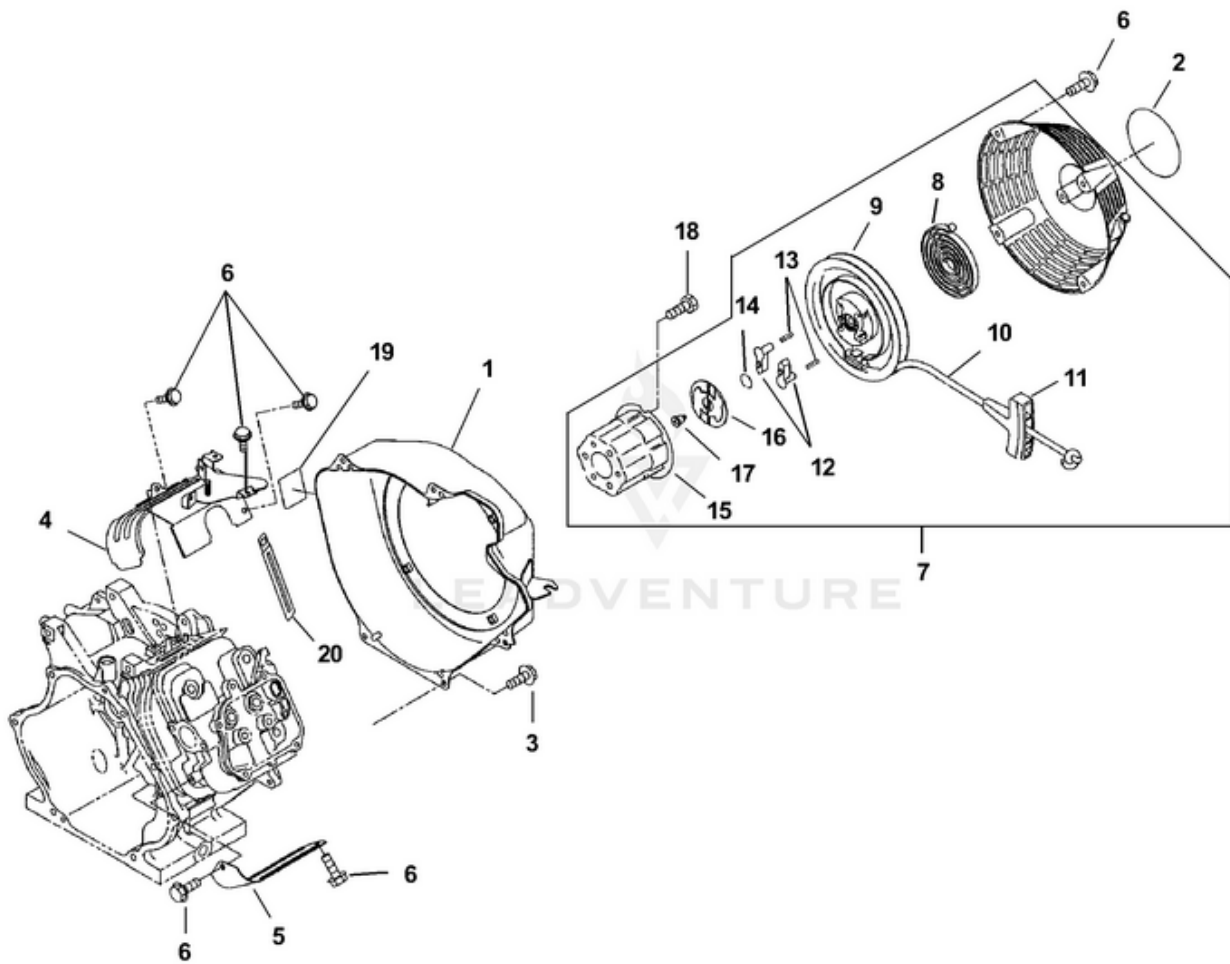

Rendered by LeadVenture, Inc.

Ref #	Part #	Description	Qty	Context Note
1	UP05002	Blower housing	1	
2	UP05003	Label (trademark)	1	
3	UP03242	Flange bolt	5	Torque Specs 51-65 In/Lbs; 5.8-7.3 Nm
4	UP05004	Cylinder baffle 1 UN	1	
5	UP05005	Cylinder baffle 2	1	
6	UP03274	Flange bolt	9	Torque Specs 51-65 In/Lbs; 5.8-7.3 Nm
7	UP05007	Recoil starter assy	1	
8	UP05008	Spring rewind	1	
9	UP05009	Reel	1	
10	0827410	Starter rope	1	
11	UP04008	Starter knob	1	
12	UP05010	Ratchet	2	
13	UP05011	Friction spring	2	
14	0827407	Return spring	1	
15	UP05012	Pulley	1	
16	UP05013	Ratchet guide	1	
17	0827409	Set screw	1	Torque Specs 40-45 In/Lbs; 4.5-5.1 Nm
18	UP05014	Bolt	3	
19	UP03358	Label (warning)	1	
20	UP04062	Clamp	1	



Ref #	Part #	Description	Qty	Context	Note
-------	--------	-------------	-----	---------	------

	UP05223	Lifting Ball			
--	---------	--------------	--	--	--

	UP05224	Dolly Kit			
--	---------	-----------	--	--	--