


Grass Catcher


LTGTB48 A

954633736

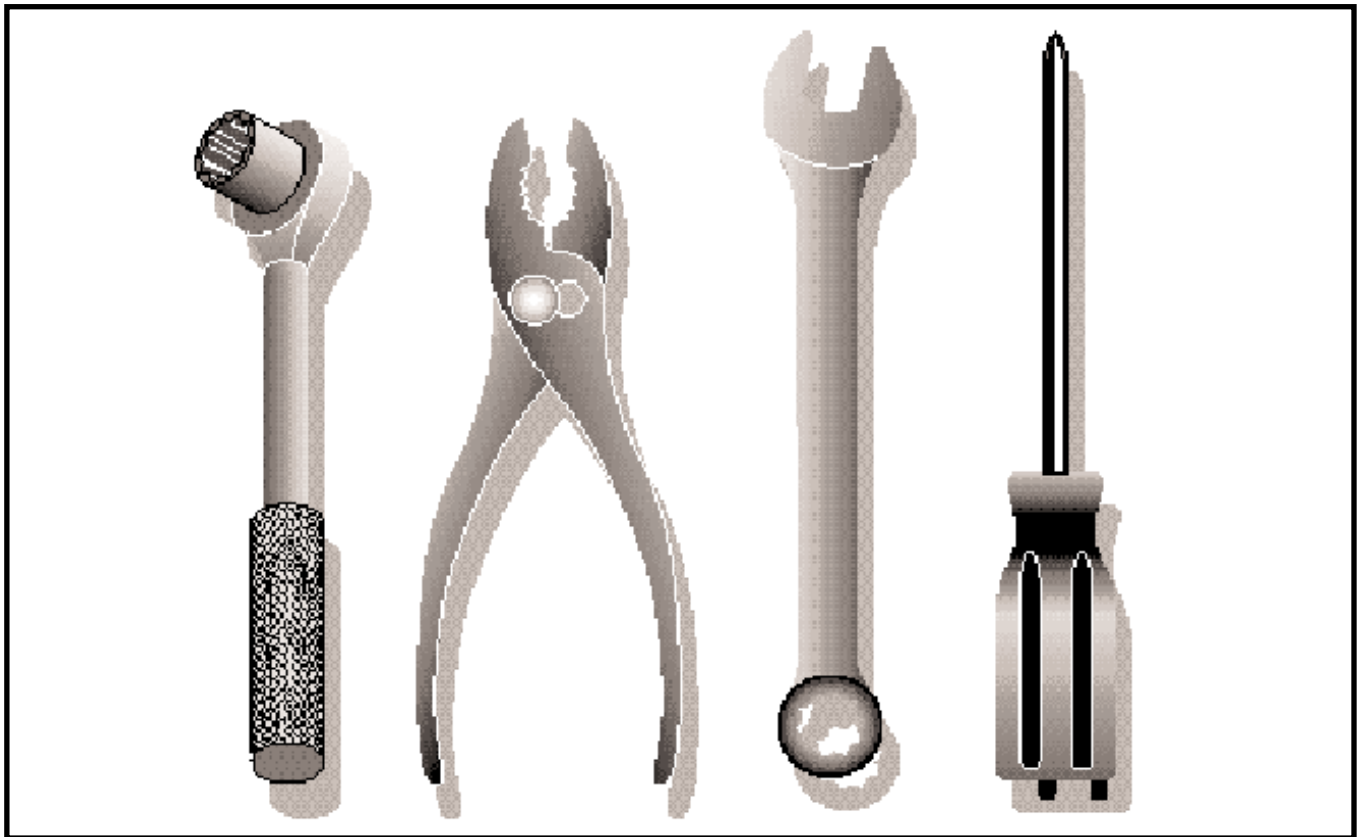

REPAIR PARTS

GRASS CATCHER- - MODEL NUMBER LTGTB48A

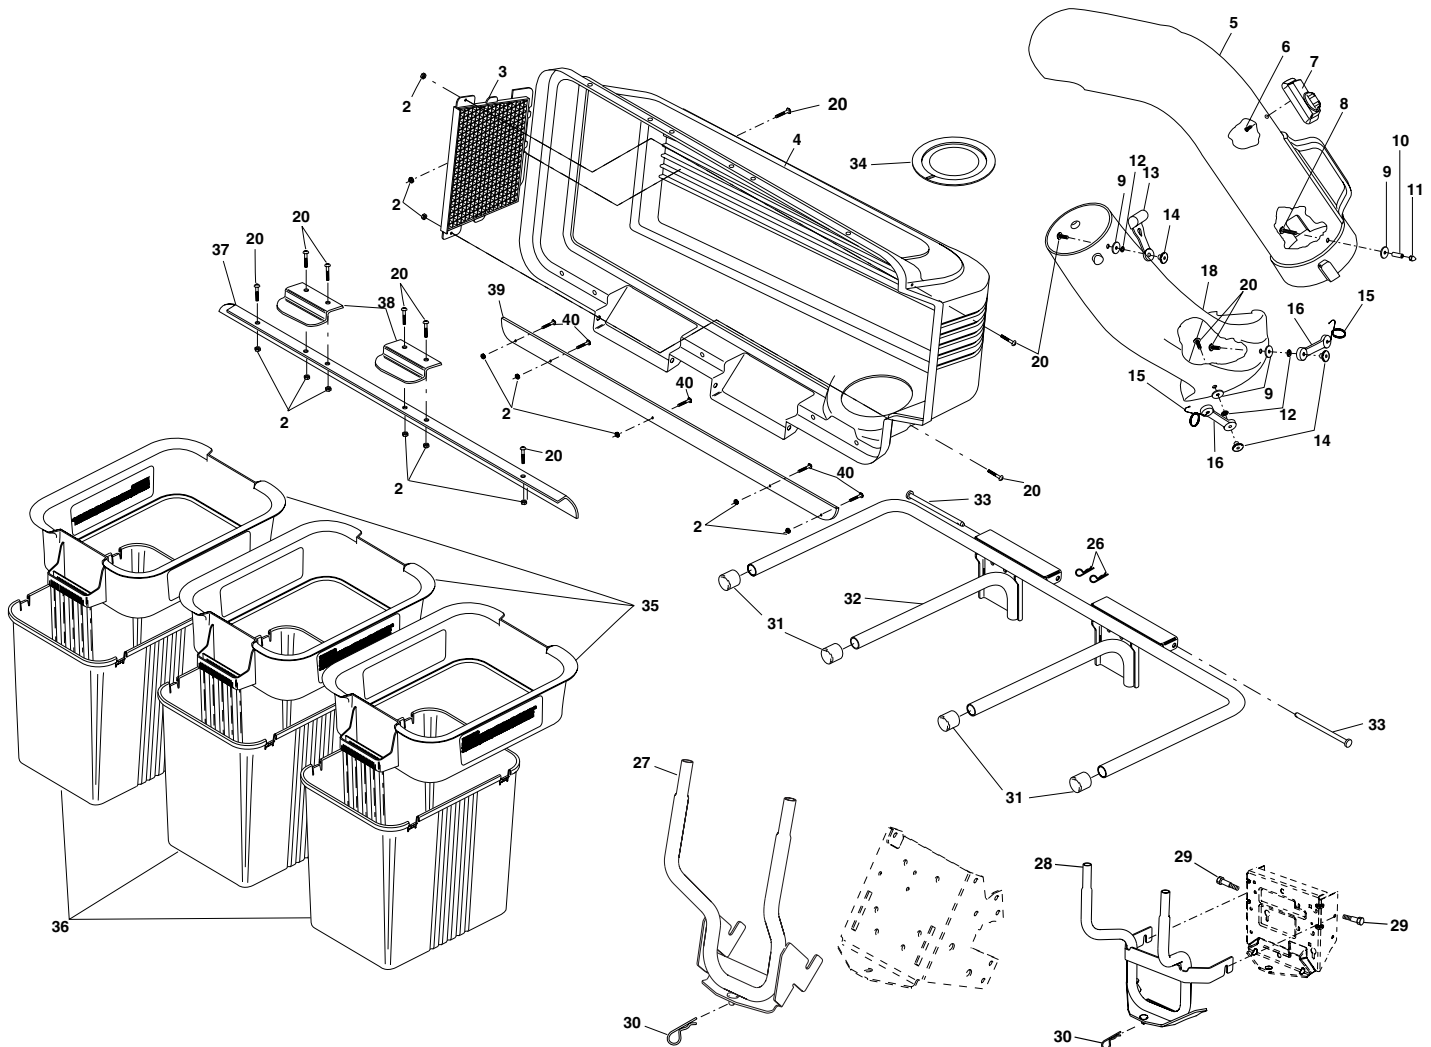

KEY NO.	PART NO.	DESCRIPTION
2	532069180	Nut, Crownlock #10-24
3	532127533	Screen, Cover
4	532139850	Cover Assembly (Includes 3, 37, 38, 39)
5	532176741	Chute, Upper
6	818021008	Screw, Special #10-14x1/2
7	532140572	Dump Bag Indicator
8	532087175	Screw, #10-24 x 1-1/8
9	819061216	Washer 3/16x3/4x16 Ga.
10	532007206	Spacer, Split
11	532060867	Nut, Acorn #10-24
12	810071000	Washer, Lock
13	532109808	Latch, Chute
14	532125004	Nut, Weld
15	532130760	Latch, Hook
16	532130759	Rubber, Latch
18	532174345	Chute, Lower

KEY NO.	PART NO.	DESCRIPTION
20	871161010	Screw #10-24 x 5/8
26	532124670	Spring, Retainer
27	532176987	Support Assembly - GT
28	532179534	Support Assembly - LT
29	532176997	Shoulder Bolt, Self Tapping
30	532165898	Spring, Retainer
31	532174083	Plug, Tubing End
32	532176990	Bagger, Frame
33	532128600	Pin, Hinge
34	532127534	Gasket, Cover
35	532183286	Container, Top
36	532129586	Container, Bottom
37	532134637	Seal, Cover
38	532130895	Latch Handle, Cover
39	532186601	Strip, Reinforcement
40	871141008	Screw #10-24 x 1/2
--	532190227	Owner's Manual