


# VACUUM PARTS - MODEL LV720r

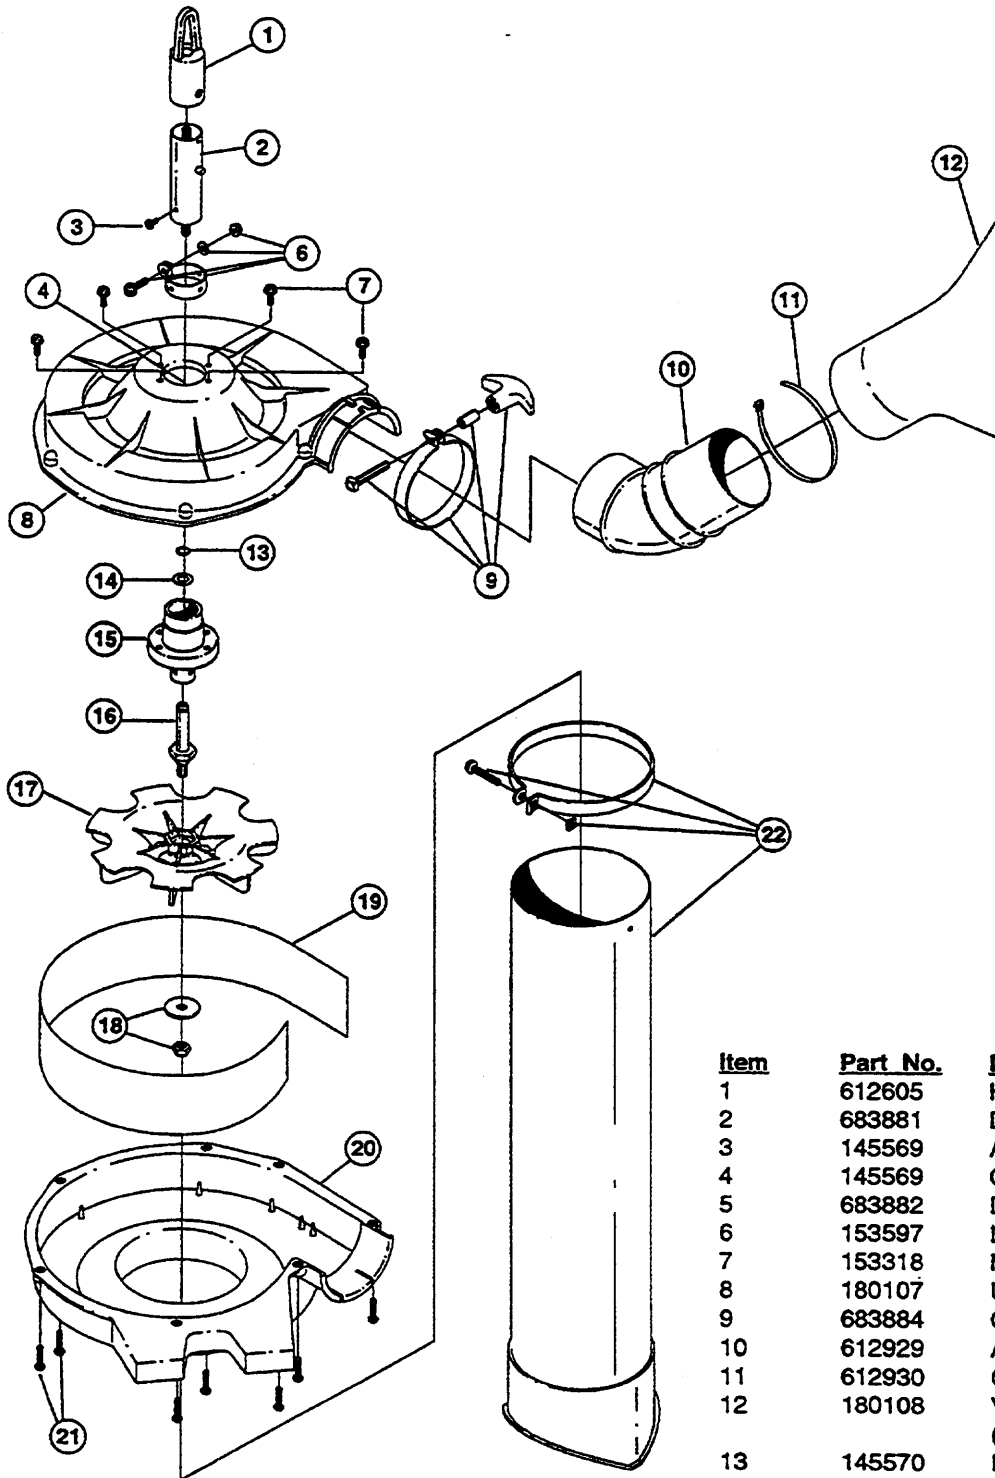

<u>Item</u>	<u>Part No.</u>	<u>Description</u>
1	612605	Hanger
2	683881	Drive Housing Assembly
3	145569	Anti-Rotation Screw
4	145569	Oil Hole Screw
5	683882	Drive Shaft Assembly
6	153597	Lower Clamp Assembly
7	153318	Mounting Screw Assembly
8	180107	Upper Housing Assembly
9	683884	Clamp Assembly
10	612929	Adapter
11	612930	Clamp
12	180108	Vacuum Bag Assembly (includes 10 and 11)
13	145570	Retaining Ring
14	145567	Washer
15	683886	Housing and Bushing Assembly
16	612931	Impeller Shaft
17	612932	Impeller
18	683887	Nut and Washer Assembly
19	612933	Shield
20	180109	Lower Housing
21	683662	Mounting Screw Assembly
22	180110	Vacuum Tube Assembly