



MP38 w/12" Multi Purpose Saw UT-05078 05078-UT MP38 w/12" Multi Purpose Saw UT-05078 MP38
w/12" Multi Purpose Saw - Air Cleaner

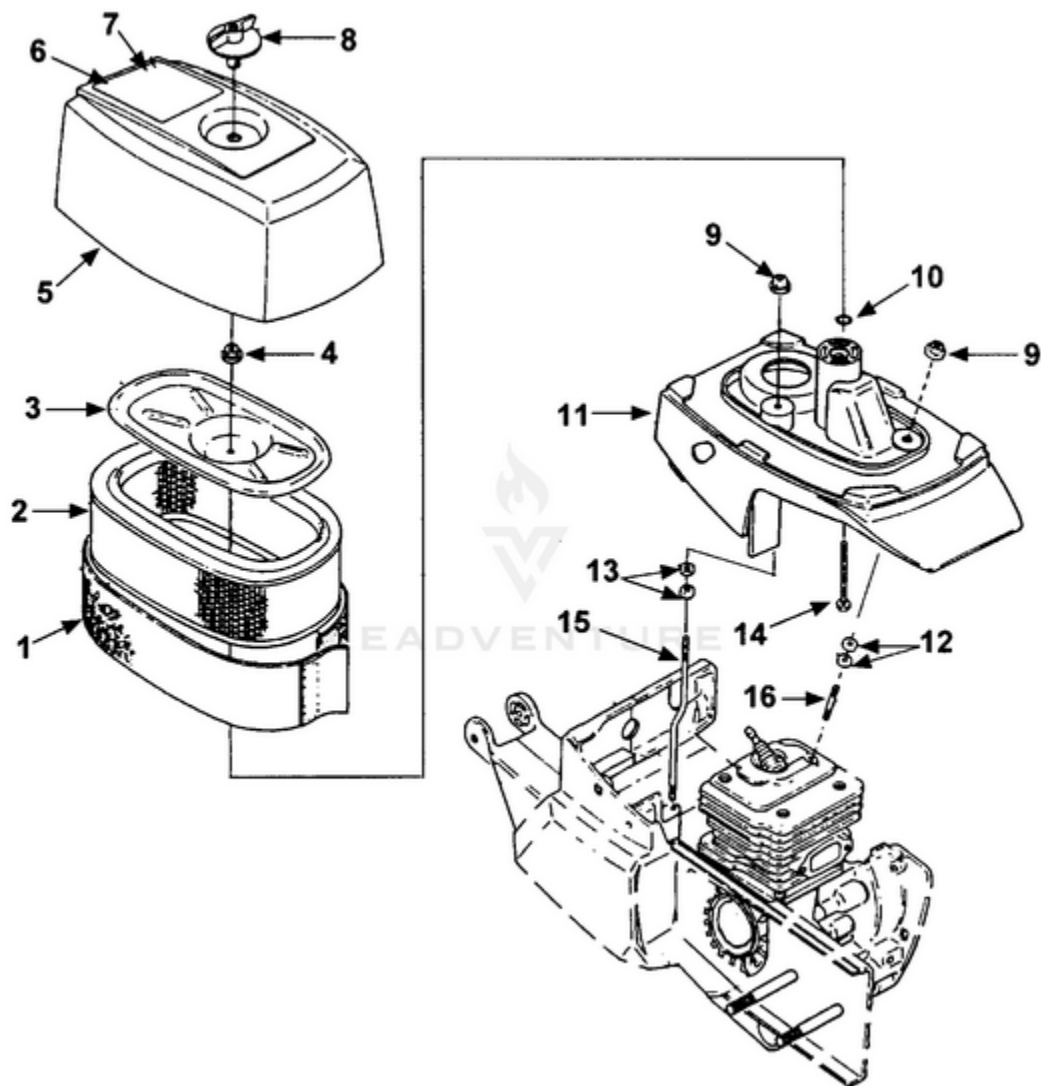

Rendered by LeadVenture, Inc.

Ref #	Part #	Description	Qty
1	02307	PREFILTER-Felt	1
2	02308	ELEMENT-Air Filter	1
3	023091	COVER-Air Filter Element	1
4	02330	NUT-Hex Conical	1
5	A03880A	COVER-Air Filter	1
6	03621	DECAL-Warning (French)	1
7	03620	DECAL-Warning (Eng.)	1
	04644	DECAL-Warning (Int.)	1
8	A03024	KNOB & INSERT	1
9	02330	NUT- Hex	2
10	03383	O-Ring	1
11	02303B	COVER-Cylinder	1
12	02425	SPACER-Insulating	2
13	81092	NUT-Hex	2
14	82584	SCREW-Hex Cap (10-24 X 1 3/4")	1
15	02347	STUD-Offset (10-24)	1
16	02346	STUD (10-24 x 1")	1


MP38 w/12" Multi Purpose Saw UT-05078 05078-UT MP38 w/12" Multi Purpose Saw UT-05078 MP38 w/12" Multi Purpose Saw - Carburetor - Fuel Tank

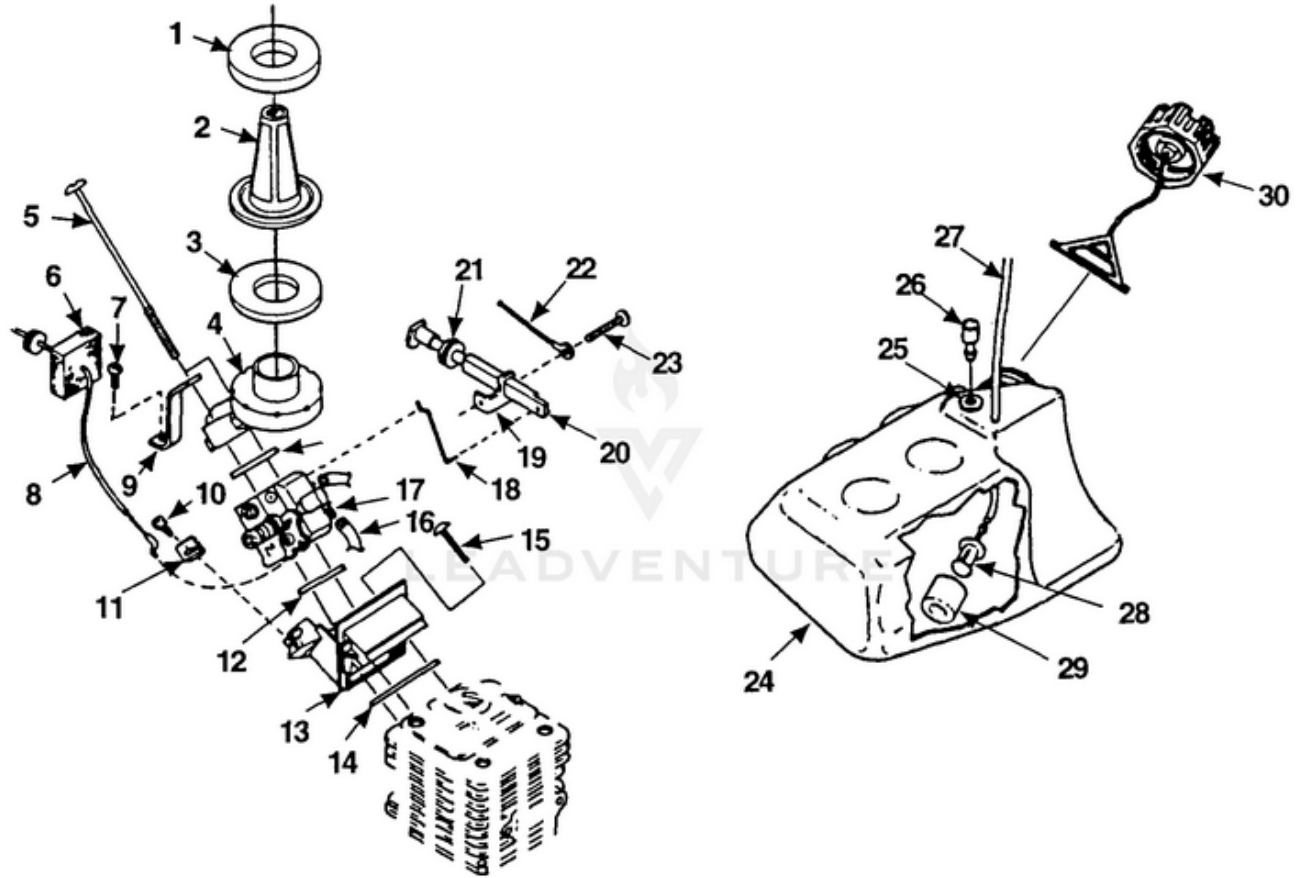

Rendered by LeadVenture, Inc.

Ref #	Part #	Description	Qty
1	02300	GASKET-Foam (1/4")	1
2	02301	FILTER-Screen	1
3	02302	GASKET Foam	1
4	A03272	ADAPTOR-Intake	1
5	82582	SCREW-Truss Hd. (8-16 X 3 1/4")	2
6	03758	PAD-Foam	1
7	966201	SCREW-Torx (10-24 X 1/2")	1
8	A02315	CABLE-Throttle	1
9	02313A	BRACKET-Air Intake	1
10	82513	SCREW-Thread Form. (6-19 X 1/2")	1
11	03455	BRACKET-Cable End	1
12	02295	GASKET-Carburetor	2
13	022961	ADAPTOR-Intake	1
14	02297	GASKET-Adaptor	1
15	82571	SCREW-Pan Hd. (10-24 X 1")	3
16	9315719	TUBING,Pulse line (4 3/4")	1
17	PA00032	CARBURETOR-Walbro	1
18	A06369	CHOKE LINK & RETAINER	1
19	03333	BRACKET-Cable	1
20	02314	ROD-Choke	1
21	64862	GROMMET	1
22	A03556	GROUND WIRE	1
23	82556	SCREW-Truss Hd. (10-24 X 1 1/4")	1
24	A03402A	TANK-Fuel	1
25	64862	GROMMET	1
26	A02294	FILTER SLEEVE	1
27	9477240	TUBING-Rubber (10")	1
28	A97700	USE UP06516	1
29	592531A	FILTER-Fuel	1
30	A00904A	CAP-Tank (w/Retainer)	1


MP38 w/12" Multi Purpose Saw UT-05078 05078-UT MP38 w/12" Multi Purpose Saw UT-05078 MP38 w/12" Multi Purpose Saw - Clutch - Exhaust System

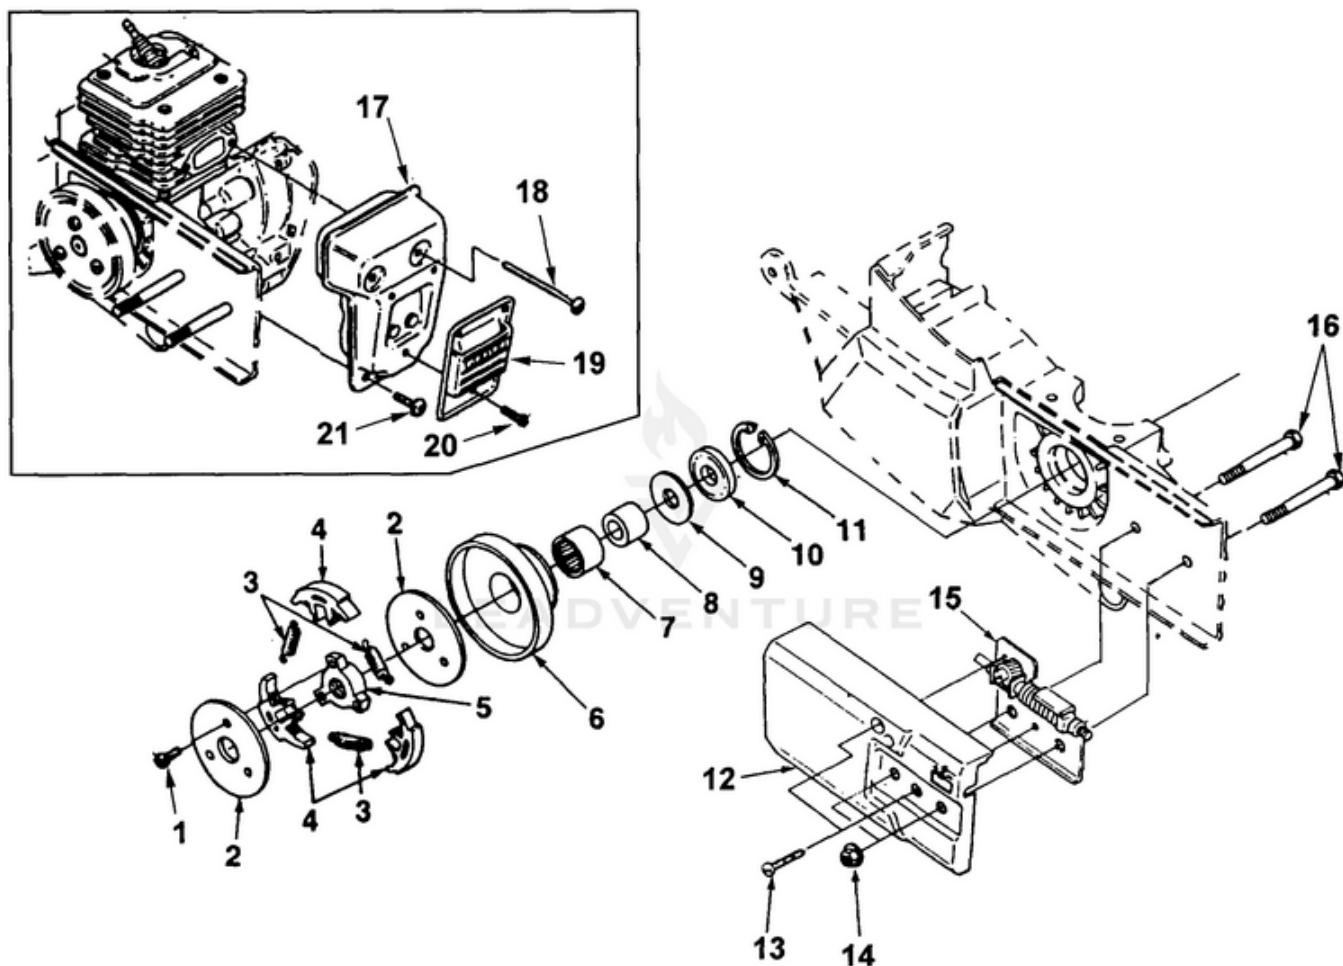

Rendered by LeadVenture, Inc.

Ref #	Part #	Description	Qty
1	82253	SCREW-Machine Hex Hd. (8-32 X 3/8")	3
2	93628	COVER-Clutch	2
3	93638A	SPRING-Clutch	3
4	79239	SHOE-Clutch	3
5	02334	CLUTCH-Spider	1
6	A49543	PULLEY-Drum & Bearing	1
7	46071	BEARING-Needle	1
8	46070	RACE-Inner	1
9	46135	WASHER-Thrust	1
10	98197A	SEAL-Main	1
11	289221	RETAINER-Bearing	1
12	A02329A	CLUTCH-Cover	1
13	82575	SCREW- Taptite (8-32 x 5/8")	2
14	81282	NUT-Hex Flange (5/16-18)	2
15	A03879A	GEAR KIT	1
16	02327	BOLT-Wheel Arm	1
17	A02287	MUFFLER	1
18	82574	SCREW-Truss Hd. (10-24 x 2 1/2")	2
19	A98747	CAP- Muffler	1
20	80983	SCREW-Machine Hex Hd. (8-32 x 1/2")	3
21	966201	SCREW-Torx (10-24 x 1/2")	2


MP38 w/12" Multi Purpose Saw UT-05078 05078-UT MP38 w/12" Multi Purpose Saw UT-05078 MP38
w/12" Multi Purpose Saw - Engine Internal

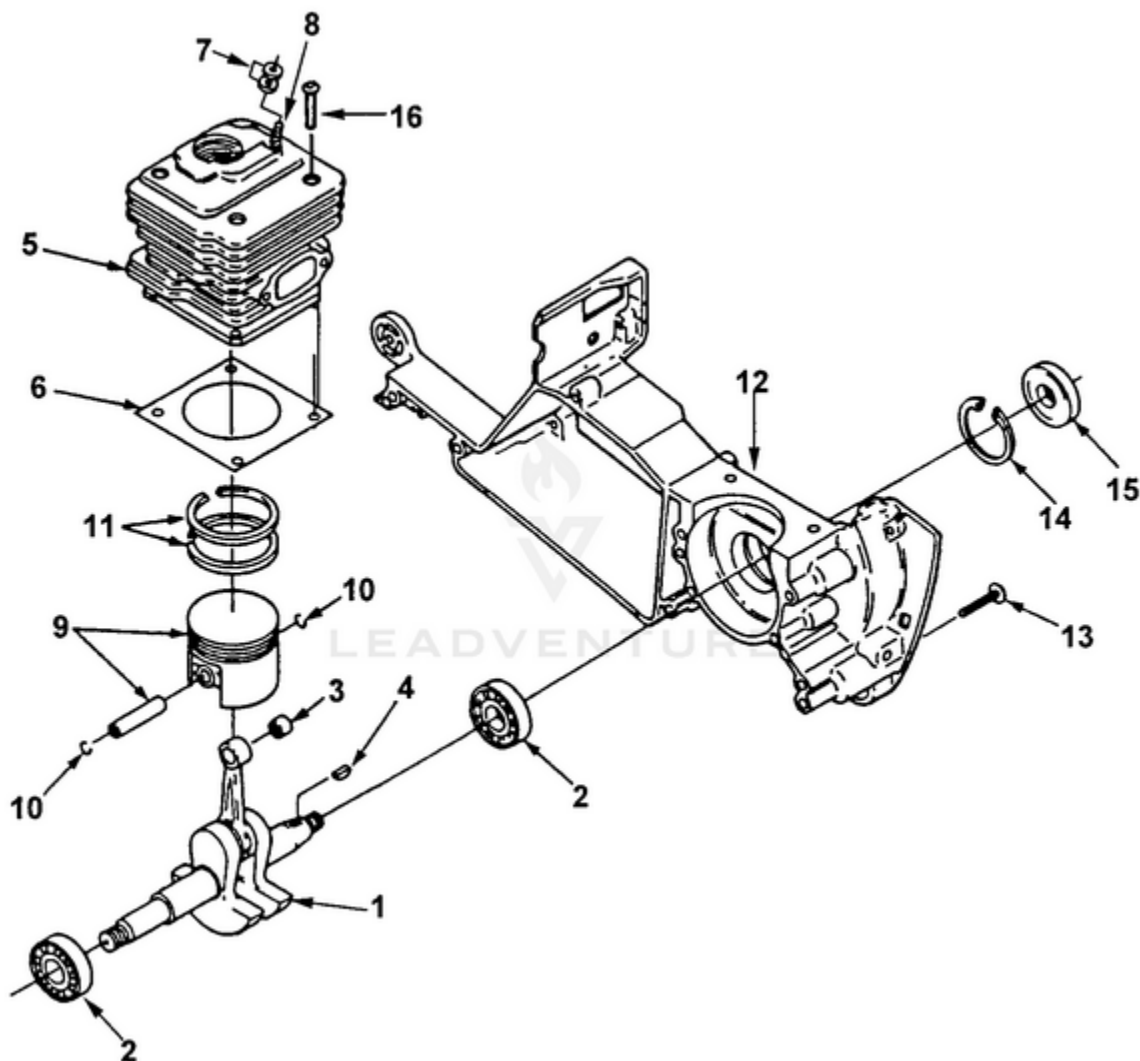

Rendered by LeadVenture, Inc.

Ref #	Part #	Description	Qty
1	A03883	CRANKSHAFT	1
2	987971	BEARING-Ball	2
3	02151A	BEARING-Piston Pin	1
4	75078	KEY-Woodruff	1
5	A03881	CYLINDER & PISTON ASSEMBLY	1
6	01568	GASKET-Cylinder	1
7	02425	SPACER	2
8	02346	STUD-(10-24 X 1 1/4")	5
9	A01273	PISTON (1.890 Dia.)	1
10	02161	RING-Retaining	2
11	02162	RING-Piston	2
12	A02272B	CRANKCASE	1
13	82556	SCREW-Truss Hd. (10-24 X 1 1/4")	9
14	289221	RETAINER-Bearing	1
15	98197A	SEAL-Main	2
16	82580	SCREW-Pan Hd (12-24 x 3/4")	4

MP38 w/12" Multi Purpose Saw UT-05078 05078-UT MP38 w/12" Multi Purpose Saw UT-05078 MP38
w/12" Multi Purpose Saw - Handles

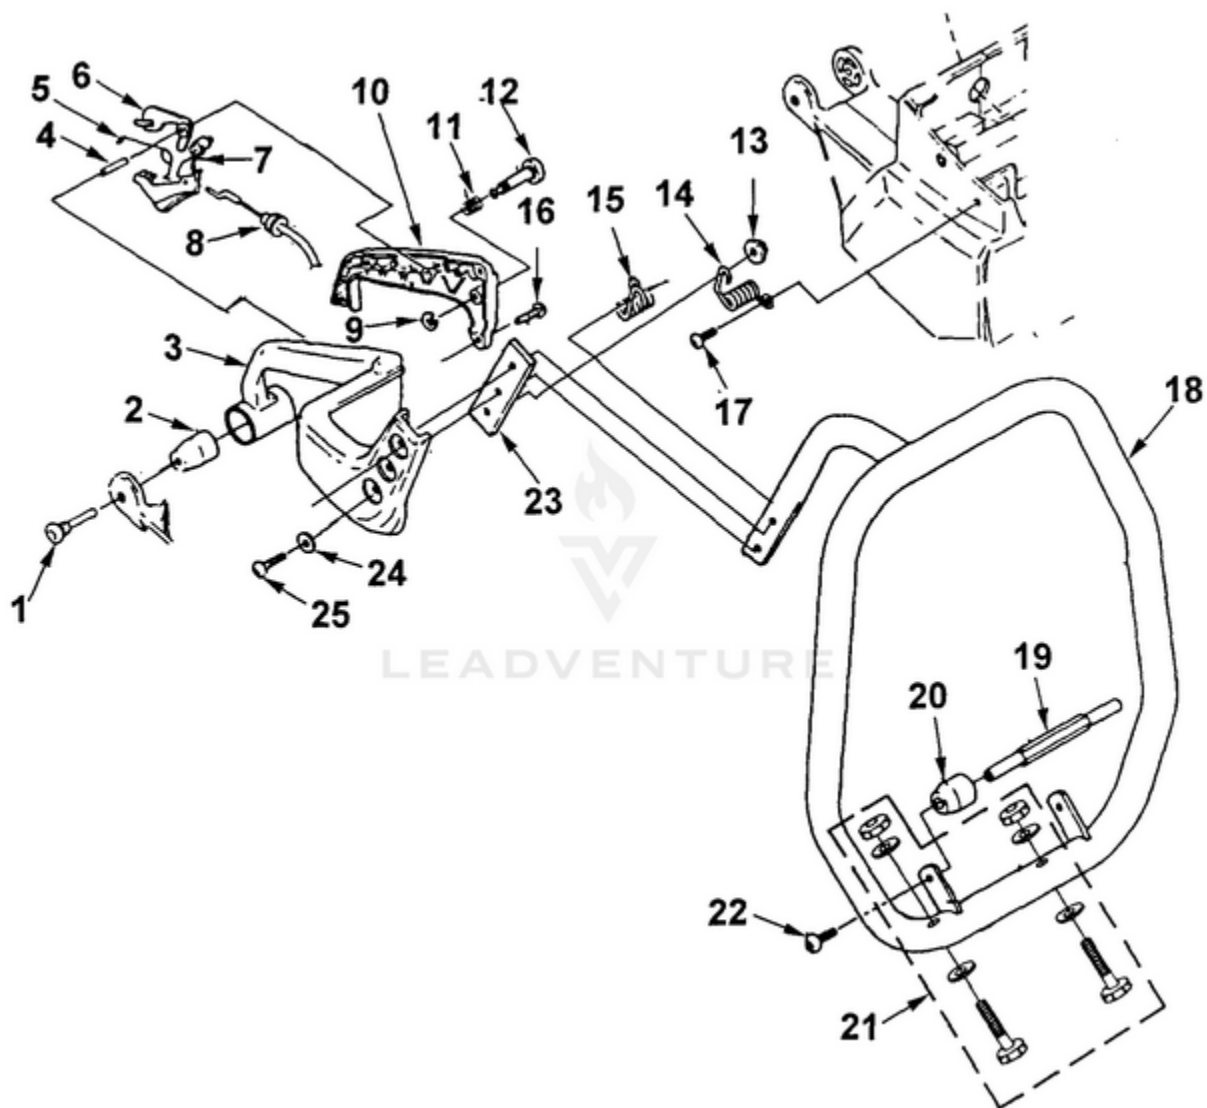

Rendered by LeadVenture, Inc.


Ref #	Part #	Description	Qty
1	93367	ISOLATOR PIN	3
2	93368A	ISOLATOR-Vibration	2
3	02318A	HANDLE-Rear	1
4	68548	PIN-Trigger	1
5	02316	SPRING-Throttle	1
6	93385A	LOCK-Trigger	1
7	A03806A	TRIGGER & SWIVEL	1
8	A02315	CABLE-Throttle	1
9	58409	RING-Retaining	1
10	02319	COVER-Handle	1
11	95020A	SPRING-Compression	1
12	95671	PIN-Throttle Lock	1
13	02330	NUT-Hex (10-24)	1
14	PS03535	SPRING-Isolation (Large)	1
15	PS03536	SPRING-Isolation (Small)	1
16	82536	SCREW-Plastite (8-16 x 5/8")	4
17	966201	SCREW-Torx Hd. (10-24 X 1/2")	4
18	A08326	HANDLE BAR	1
19	02277A	SPACER	1
20	973051A	ISOLATOR-Vibration	2
21	A03633	KIT-Wear Pad	1
22	966201	SCREW-Torx Hd. (10-24 x 1/2")	2
23	03078	STRAP, Reinforcing	2
24	95935	WASHER (#12-11/16)	3
25	UP03899	SCREW-Truss Hd. (10-24 x 3/4")	3

This diagram illustrates the exploded view of a carburetor assembly. The main body (1) is shown with various components being installed or removed. Key parts include the float valve assembly (2), the float (3), the float bowl (4), the float needle (5), the float needle seat (6), the float needle gasket (7), the float needle gasket O-ring (8), the float needle gasket O-ring (9), the float needle gasket O-ring (10), the float needle gasket O-ring (11), the float needle gasket O-ring (12), the float needle gasket O-ring (13), the float needle gasket O-ring (14), the float needle gasket O-ring (15), the float needle gasket O-ring (16), the float needle gasket O-ring (17), the float needle gasket O-ring (18), the float needle gasket O-ring (19), and the float needle gasket O-ring (20). The diagram also shows the float bowl gasket (13) and the float bowl gasket O-ring (14). The float bowl gasket O-ring (15) is shown being installed into the float bowl gasket (13). The float bowl gasket O-ring (16) is shown being installed into the float bowl gasket (13). The float bowl gasket O-ring (17) is shown being installed into the float bowl gasket (13). The float bowl gasket O-ring (18) is shown being installed into the float bowl gasket (13). The float bowl gasket O-ring (19) is shown being installed into the float bowl gasket (13). The float bowl gasket O-ring (20) is shown being installed into the float bowl gasket (13).

Rendered by LeadVenture, Inc.

Ref #	Part #	Description	Qty
1	A03884A	STARTER (Complete)	1
2	A69962B	GRIP-Starter (w/insert)	1
3	A97908	SPRING & CONTAINER	1
4	A03882	PULLEY ASSEMBLY	1
5	01274	WASHER-Thrust	1
6	98332A	PAWL-Starter	1
7	03750B	CLIP-Retainer	1
8	PS97500	ROPE-Starter (45")	1
9	81124A	NUT-Jam (3/8 - 24)	1
10	83102	WASHER-Lock (3/8")	1
11	82556	SCREW-Truss Hd. (10-24 x 1 1/4")	1
12	UP03899	SCREW (10-24 x 3/4")	3
	UP03701	IGNITION MODULE KIT	1
13	UP03630	ROTOR	1
14	UP03631	IGNITION MODULE	1
15	A02597	SPARK PLUG BOOT KIT	1
16	UP04093	SPARK PLUG (RCJ6Y) (Resistor)	1
17	UP04086	SCREW-Pan Hd (8-32 x 5/8")	2
18	A03556	GROUND WIRE	1
19	A02284	IGNITION GROUND WIRE	1
20	01802	SWITCH	1

MP38 w/12" Multi Purpose Saw UT-05078 05078-UT MP38 w/12" Multi Purpose Saw UT-05078 MP38 w/12" Multi Purpose Saw - Wheel Arm Assembly

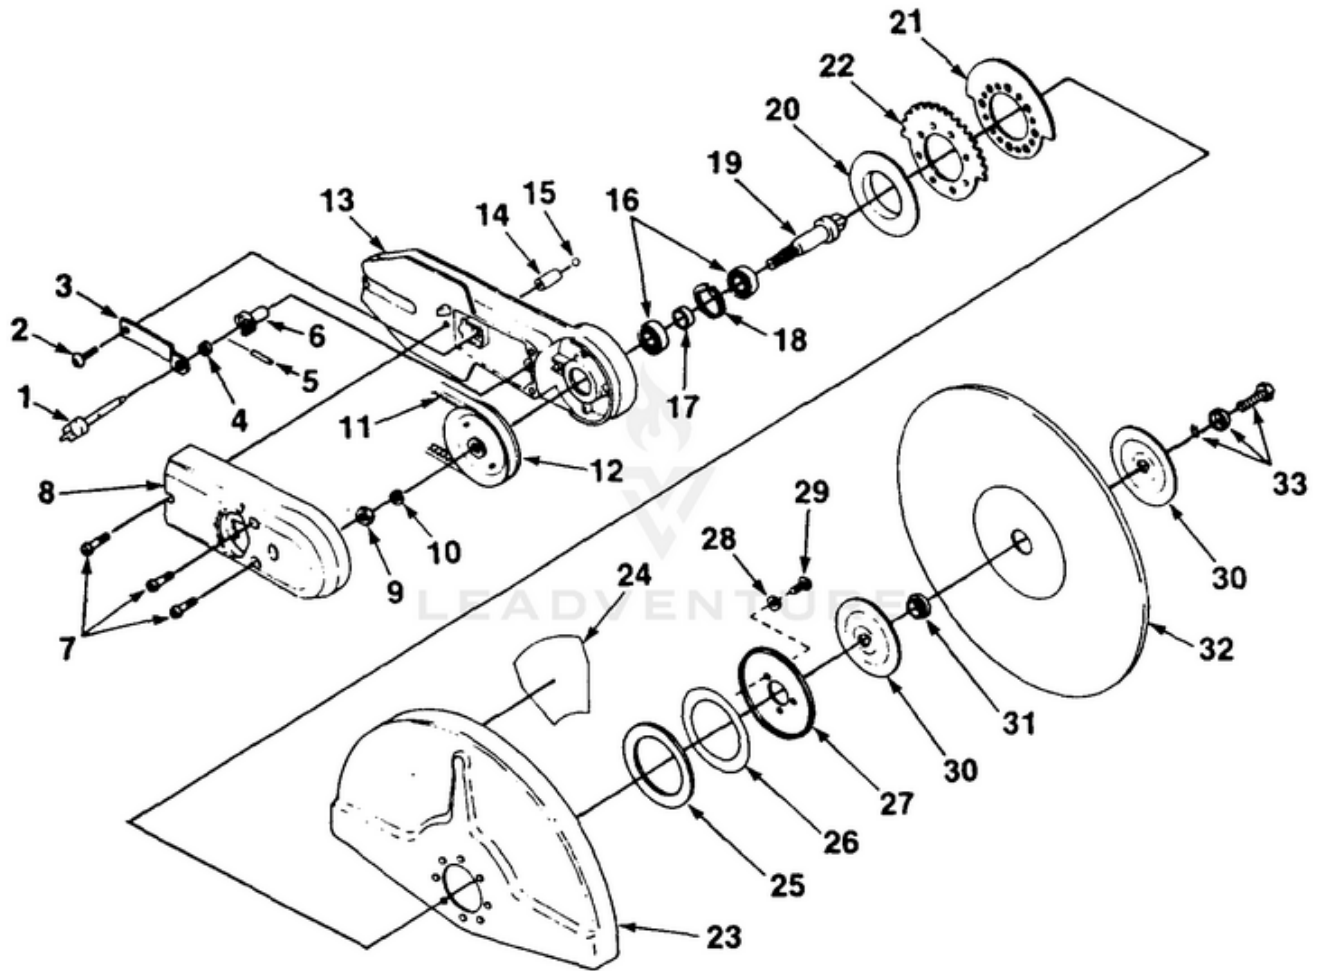

Rendered by LeadVenture, Inc.

Ref #	Part #	Description	Qty
1	A00660	KNOB & PIN	1
2	966201	SCREW-Truss Hd. (10-24 X 1/2")	1
3	01923	PLATE-Spring	1
4	01922	SPACER-Adjusting Pin	1
5	JA461359	PIN-Roll	1
6	01921	SLEEVE-Cam	1
7	95792	SCREW-Round Hd. (10-24 X 23/32")	3
8	07704	BELT Cover	1
9	02423	NUT-Hex	1
10	JA446148	WASHER-Lock (7/16)	1
11	46068	BELT- V-Drive	1
12	A02891	PULLEY & HUB	1
13	076563A	ARM-Wheel	1
14	02267	SNUBBER	1
15	00568	STEEL BALL	1
16	63107	BEARING-Ball	2
17	01916	SPACER-Bearing	1
18	PS31746	RING-Retaining	1
19	019061	SHAFT-Wheel	1
20	01915	COLLAR-Wheel Guard	1
21	01914A	PAD-Adjuster	1
22	01913	DETENT-Adjuster	1
23	A04647A	WHEEL GUARD & DECAL / 12"	1
24	04645A	DECAL-Caution	1
23	A07696	WHEEL GUARD & DECAL / 14"	1
24	04645A	DECAL-Caution	1
25	01912	WASHER-Rubber	1
26		UNKNOWN	
26A	0191101	SHIM-.020"	1
26B	0191102	SHIM-.030" (Alt. Part)	0
27	01910	WASHER-Spring	1
28	95935	WASHER (#12 - 11/16)	3
29	966201	SCREW-Truss Hd. (10-24 X 1/2")	3
30	019091A	FLANGE-Wheel	1
31	01902	SPACER (1")	1
	01903	SPACER (22mm)	1
	01907	SPACER (20mm)	1
32		WHEEL	1
33	A03412	BOLT & WASHER	1

MP38 w/12" Multi Purpose Saw UT-05078 05078-UT MP38 w/12" Multi Purpose Saw UT-05078 MP38
w/12" Multi Purpose Saw - Wheels

No
Diagram
Available



Parts List
Only

Rendered by Leadventure, Inc.

Ref #	Part #	Description	Qty
	64596C	Abrasive Wheels 12" - Masonry & Concrete	
	43230B	Abrasive Wheels 12" - Masonry & Concrete	
	49826	Abrasive Wheels 12" - Masonry & Concrete	
	64597C	Abrasive Wheels 12" - Metal	
	43232B	Abrasive Wheels 12" - Metal	
	49824	Abrasive Wheels 12" - Metal	
	68421B	Abrasive Wheels 12" - Ductile and Cast Iron	
	43231B	Abrasive Wheels 12" - Ductile and Cast Iron	
	49825	Abrasive Wheels 12" - Ductile and Cast Iron	
	03707A	Abrasive Wheels 12" - Asphalt	
	49559A	Abrasive Wheels 14" - Masonry & Concrete	
	49765A	Abrasive Wheels 14" - Masonry & Concrete	
	49561A	Abrasive Wheels 14" - Metal	
	49768A	Abrasive Wheels 14" - Metal	
	49560A	Abrasive Wheels 14" - Ductile and Cast Iron	
	49767A	Abrasive Wheels 14" - Ductile and Cast Iron	
	03696A	Abrasive Wheels 14" - Asphalt	
	A49753A	Diamond Wheels 12" - Premium Segmented Rim	
	A49751A	Diamond Wheels 12" - Standard Segmented Rim	
	A04831A	Diamond Wheels 14" - Premium Segmented Rim	
	A49572A	Diamond Wheels 14" - Standard Segmented Rim	
	08831	Saw Blades 12" - Carbide, Junkyard Dog(TM)	
	A08337A	Replacement arm Assemblies - 12" Wheel Arm	
	A08338A	Replacement arm Assemblies - 14" Wheel Arm	

MP38 w/12" Multi Purpose Saw UT-05078 05078-UT MP38 w/12" Multi Purpose Saw UT-05078 MP38
w/12" Multi Purpose Saw - Additional Accessories

No
Diagram
Available

LEADVENTURE
Parts List
Only

Rendered by LeadVenture, Inc.

Ref #	Part #	Description	Qty
	UT05064	Dolly kit W/Depth Gage	
	A18009A	Carry Case w/Insert	
	A49649	NLA(NO LONGER AVAILABLE)	
	98827	Spark Arrestor Screen	