



MP38i Multi Purpose Saw UT-05081 05081-UT MP38i Multi Purpose Saw UT-05081 MP38i Multi Purpose
Saw - Air Cleaner

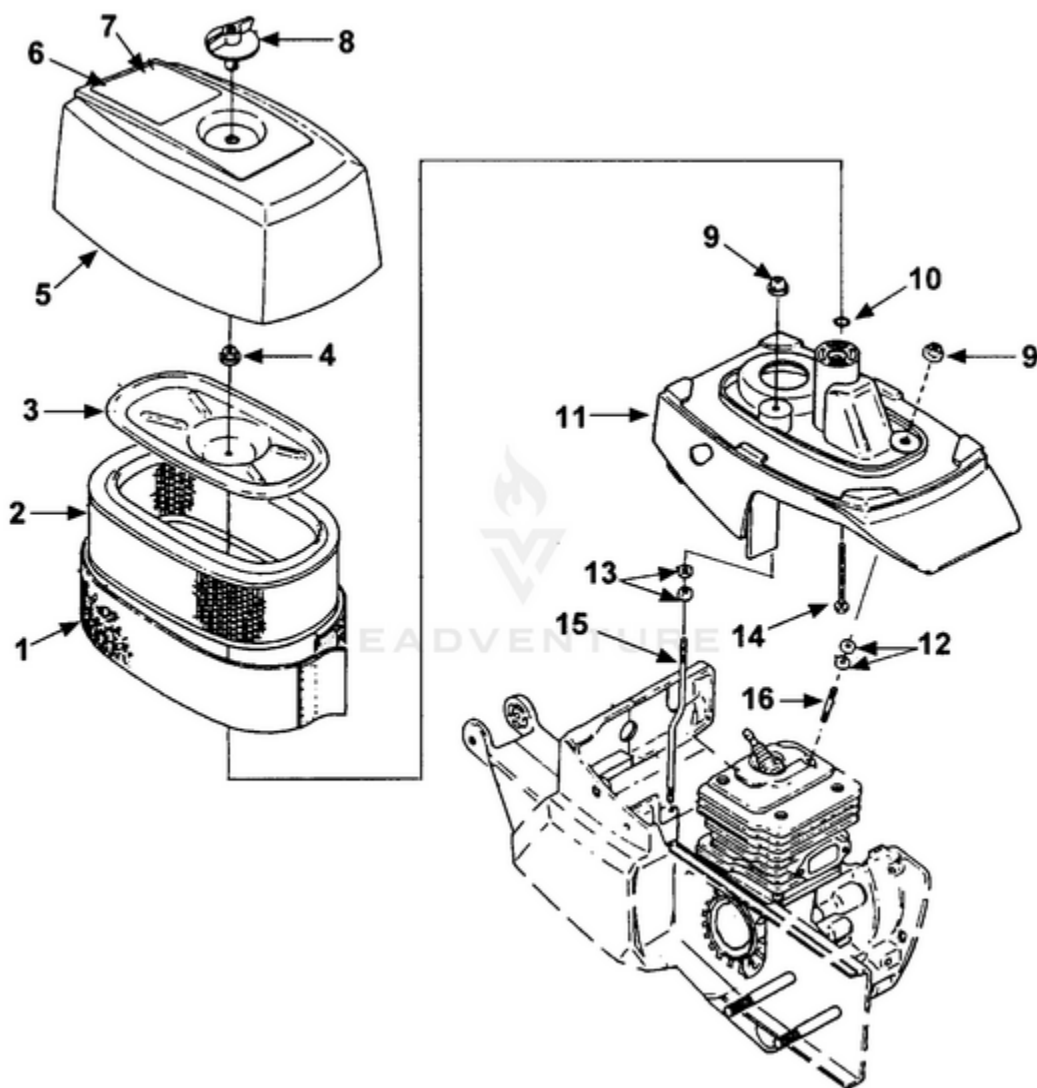

Rendered by LeadVenture, Inc.

Ref #	Part #	Description	Qty
1	02307	PREFILTER-Felt	1
2	02308	ELEMENT-Air Filter	1
3	023091	COVER-Air Filter Element	1
4	02330	NUT-Hex Conical	1
5	A03880A	COVER-Air Filter	1
6	03621	DECAL-Warning (French)	1
7	03620	DECAL-Warning (Eng.)	1
	04644	DECAL-Warning (Int.)	1
8	A03024	KNOB & INSERT	1
9	02330	NUT- Hex	2
10	03383	O-Ring	1
11	02303B	COVER-Cylinder	1
12	02425	SPACER-Insulating	2
13	81092	NUT-Hex	2
14	82584	SCREW-Hex Cap (10-24 X 1 3/4")	1
15	02347	STUD-Offset (10-24)	1
16	02346	STUD (10-24 x 1")	1


MP38i Multi Purpose Saw UT-05081 05081-UT MP38i Multi Purpose Saw UT-05081 MP38i Multi Purpose Saw - Carburetor - Fuel Tank

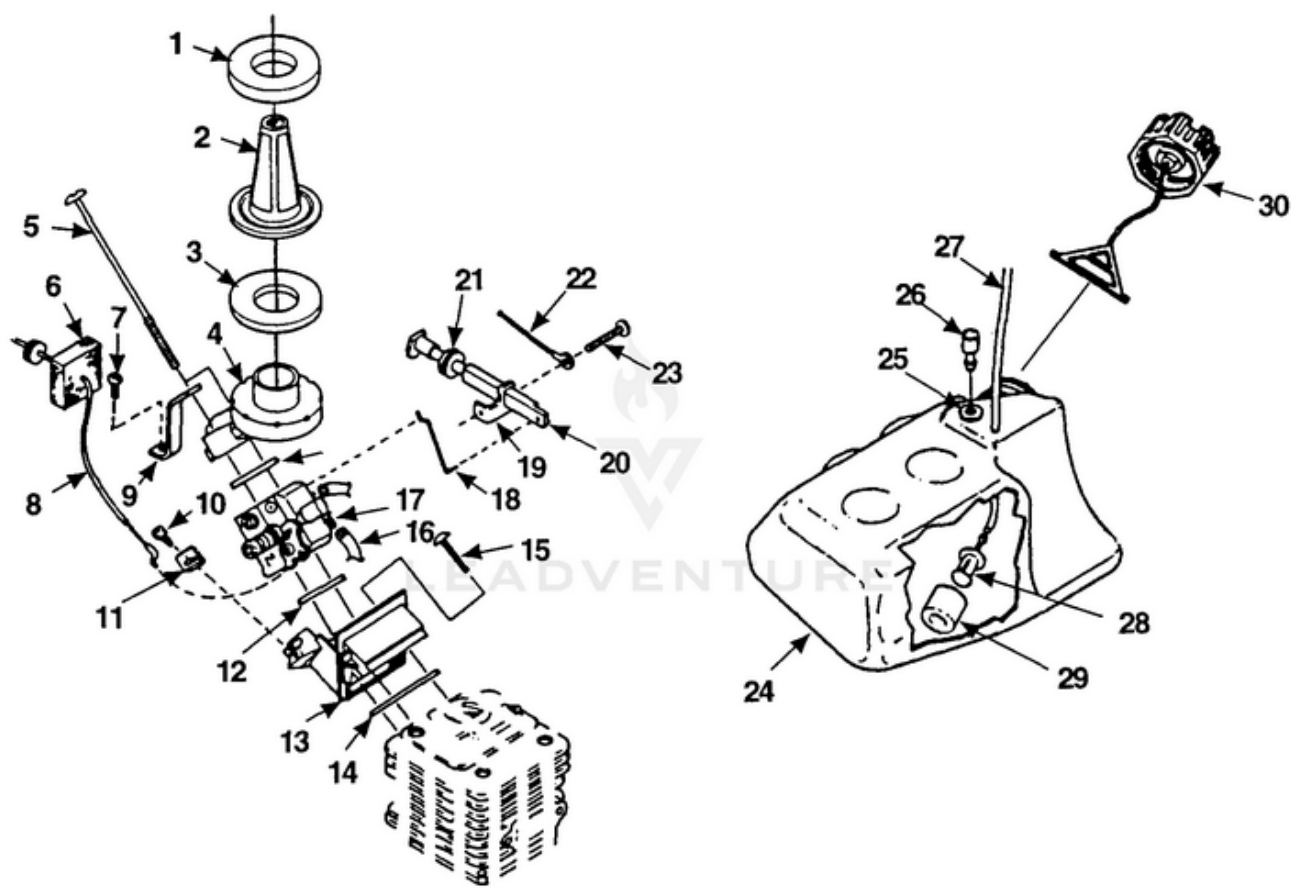

Rendered by LeadVenture, Inc.

Ref #	Part #	Description	Qty
1	02300	GASKET-Foam (1/4")	1
2	02301	FILTER-Screen	1
3	02302	GASKET Foam	1
4	A03272	ADAPTOR-Intake	1
5	82582	SCREW-Truss Hd. (8-16 X 3 1/4")	2
6	03758	PAD-Foam	1
7	966201	SCREW-Torx (10-24 X 1/2")	1
8	A02315	CABLE-Throttle	1
9	02313A	BRACKET-Air Intake	1
10	82513	SCREW-Thread Form. (6-19 X 1/2")	1
11	03455	BRACKET-Cable End	1
12	02295	GASKET-Carburetor	2
13	022961	ADAPTOR-Intake	1
14	02297	GASKET-Adaptor	1
15	82571	SCREW-Pan Hd. (10-24 X 1")	3
16	9315719	TUBING,Pulse line (4 3/4")	1
17	PA00032	CARBURETOR-Walbro	1
18	A06369	CHOKE LINK & RETAINER	1
19	03333	BRACKET-Cable	1
20	02314	ROD-Choke	1
21	64862	GROMMET	1
22	A03556	GROUND WIRE	1
23	82556	SCREW-Truss Hd. (10-24 X 1 1/4")	1
24	A03402A	TANK-Fuel	1
25	64862	GROMMET	1
26	A02294	FILTER SLEEVE	1
27	9477240	TUBING-Rubber (10")	1
28	A97700	USE UP06516	1
29	592531A	FILTER-Fuel	1
30	A00904A	CAP-Tank (w/Retainer)	1


MP38i Multi Purpose Saw UT-05081 05081-UT MP38i Multi Purpose Saw UT-05081 MP38i Multi Purpose Saw - Clutch
- Exhaust System

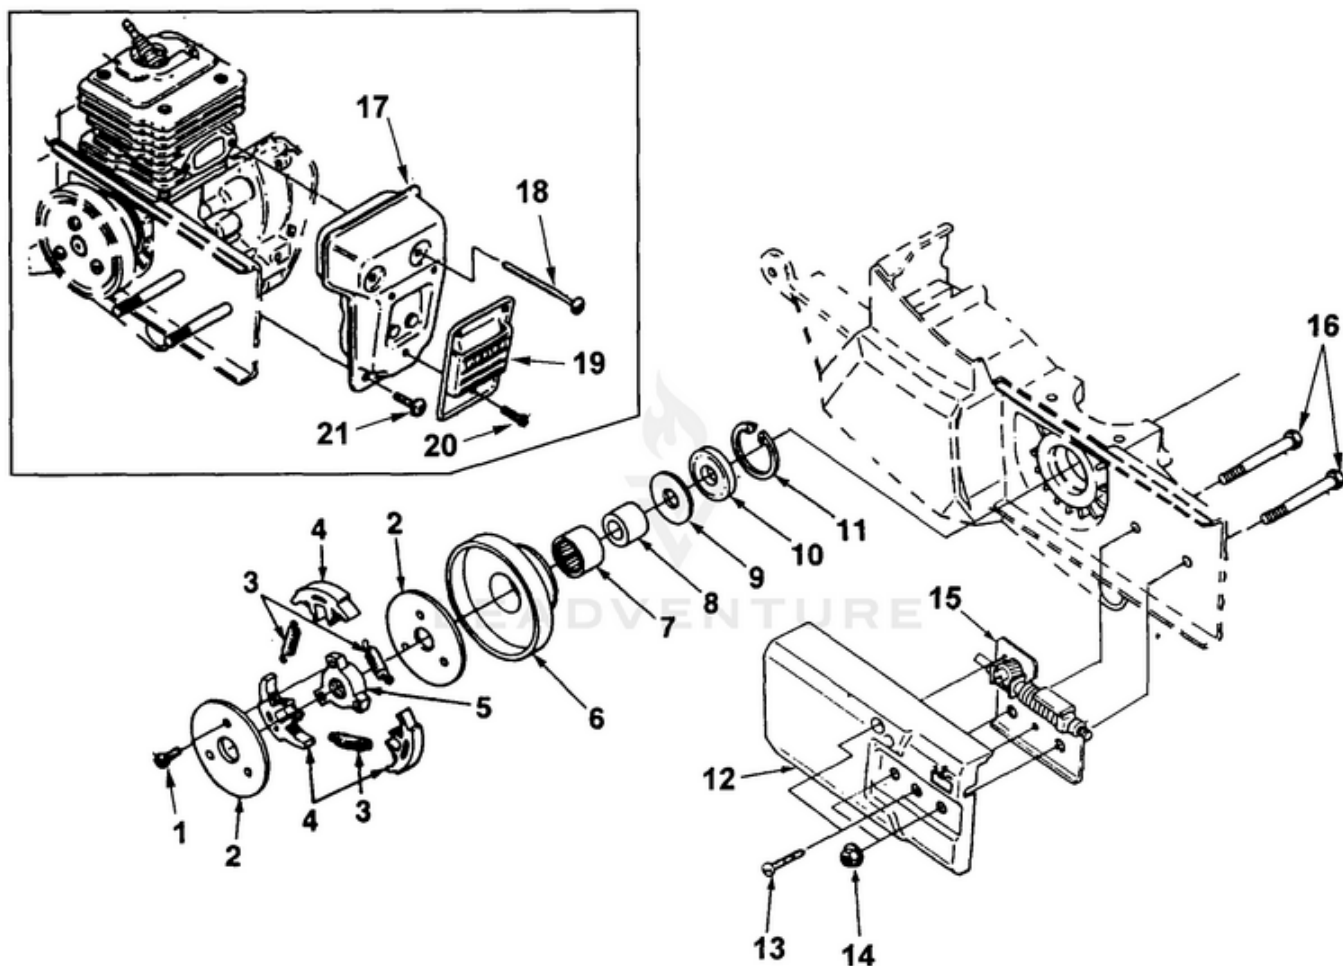

Rendered by LeadVenture, Inc.

Ref #	Part #	Description	Qty
1	82253	SCREW-Machine Hex Hd. (8-32 X 3/8")	3
2	93628	COVER-Clutch	2
3	93638A	SPRING-Clutch	3
4	79239	SHOE-Clutch	3
5	02334	CLUTCH-Spider	1
6	A49543	PULLEY-Drum & Bearing	1
7	46071	BEARING-Needle	1
8	46070	RACE-Inner	1
9	46135	WASHER-Thrust	1
10	98197A	SEAL-Main	1
11	289221	RETAINER-Bearing	1
12	A02329A	CLUTCH-Cover	1
13	82575	SCREW- Taptite (8-32 x 5/8")	2
14	81282	NUT-Hex Flange (5/16-18)	2
15	A03879A	GEAR KIT	1
16	02327	BOLT-Wheel Arm	1
17	A02287	MUFFLER	1
18	82574	SCREW-Truss Hd. (10-24 x 2 1/2")	2
19	A98747	CAP- Muffler	1
20	80983	SCREW-Machine Hex Hd. (8-32 x 1/2")	3
21	966201	SCREW-Torx (10-24 x 1/2")	2


MP38i Multi Purpose Saw UT-05081 05081-UT MP38i Multi Purpose Saw UT-05081 MP38i Multi Purpose
Saw - Engine Internal

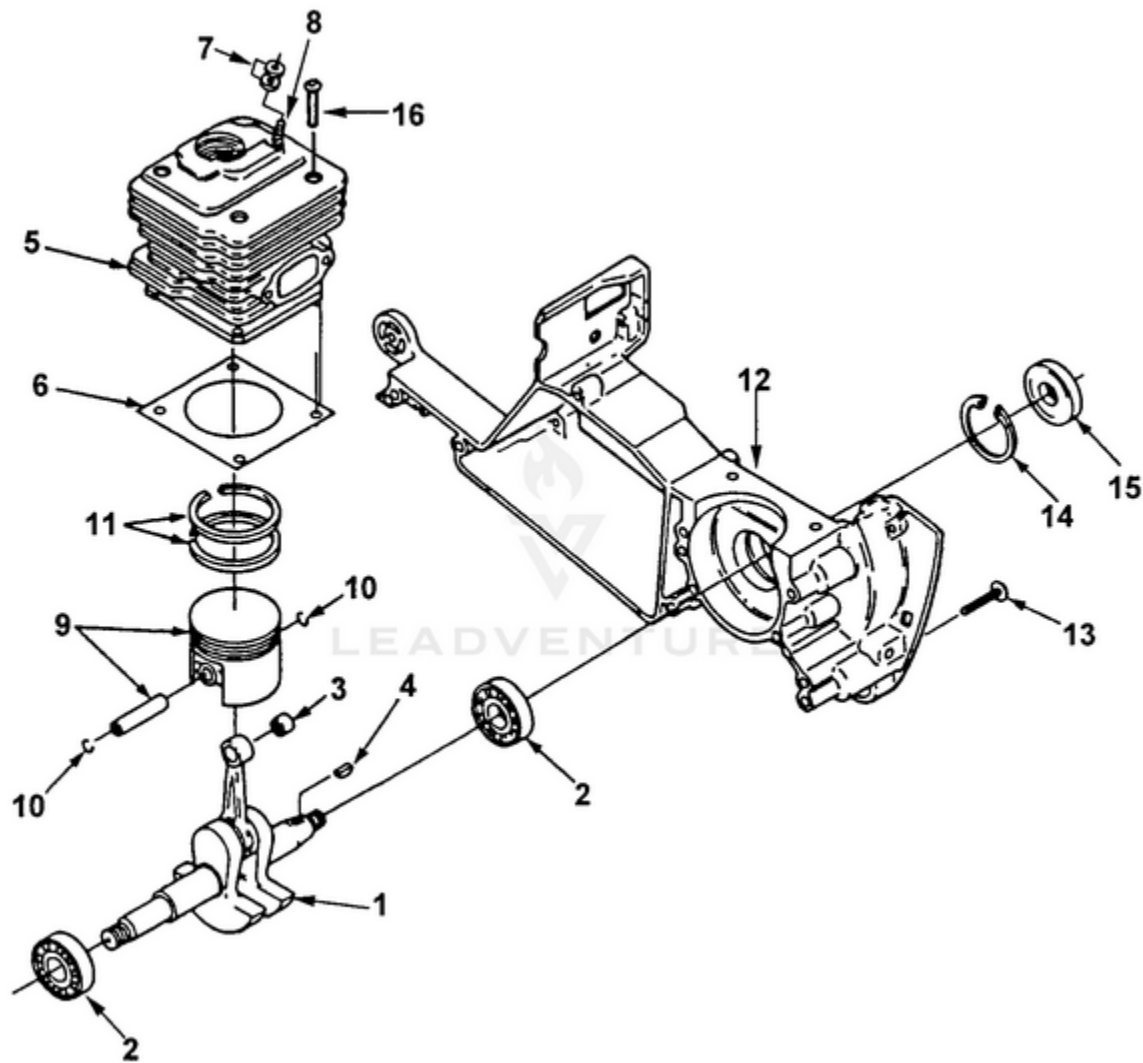

Rendered by LeadVenture, Inc.

Ref #	Part #	Description	Qty
1	A03883	CRANKSHAFT	1
2	987971	BEARING-Ball	2
3	02151A	BEARING-Piston Pin	1
4	75078	KEY-Woodruff	1
5	A03881	CYLINDER & PISTON ASSEMBLY	1
6	01568	GASKET-Cylinder	1
7	02425	SPACER	2
8	02346	STUD-(10-24 X 1 1/4")	5
9	A01273	PISTON (1.890 Dia.)	1
10	02161	RING-Retaining	2
11	02162	RING-Piston	2
12	A02272B	CRANKCASE	1
13	82556	SCREW-Truss Hd. (10-24 X 1 1/4")	9
14	289221	RETAINER-Bearing	1
15	98197A	SEAL-Main	2
16	82580	SCREW-Pan Hd (12-24 x 3/4")	4


MP38i Multi Purpose Saw UT-05081 05081-UT MP38i Multi Purpose Saw UT-05081 MP38i Multi Purpose
Saw - Handles

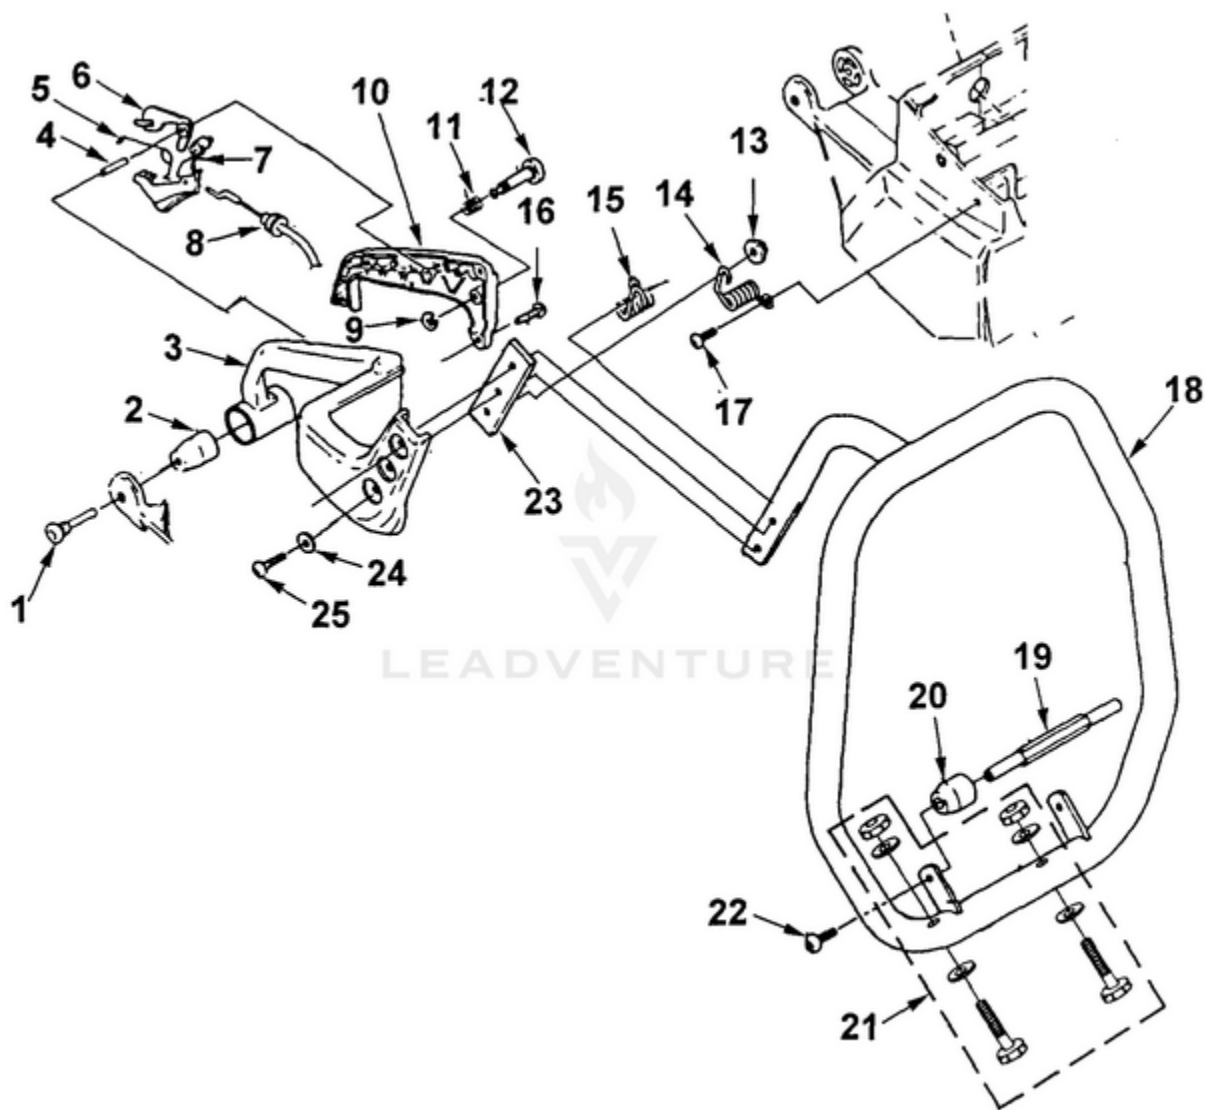

Rendered by LeadVenture, Inc.

Ref #	Part #	Description	Qty
1	93367	ISOLATOR PIN	3
2	93368A	ISOLATOR-Vibration	2
3	02318A	HANDLE-Rear	1
4	68548	PIN-Trigger	1
5	02316	SPRING-Throttle	1
6	93385A	LOCK-Trigger	1
7	A03806A	TRIGGER & SWIVEL	1
8	A02315	CABLE-Throttle	1
9	58409	RING-Retaining	1
10	02319	COVER-Handle	1
11	95020A	SPRING-Compression	1
12	95671	PIN-Throttle Lock	1
13	02330	NUT-Hex (10-24)	1
14	PS03535	SPRING-Isolation (Large)	1
15	PS03536	SPRING-Isolation (Small)	1
16	82536	SCREW-Plastite (8-16 x 5/8")	4
17	966201	SCREW-Torx Hd. (10-24 X 1/2")	4
18	A08326	HANDLE BAR	1
19	02277A	SPACER	1
20	973051A	ISOLATOR-Vibration	2
21	A03633	KIT-Wear Pad	1
22	966201	SCREW-Torx Hd. (10-24 x 1/2")	2
23	03078	STRAP, Reinforcing	2
24	95935	WASHER (#12-11/16)	3
25	UP03899	SCREW-Truss Hd. (10-24 x 3/4")	3


MP38i Multi Purpose Saw UT-05081 05081-UT MP38i Multi Purpose Saw UT-05081 MP38i Multi Purpose
Saw - Starter - Ignition

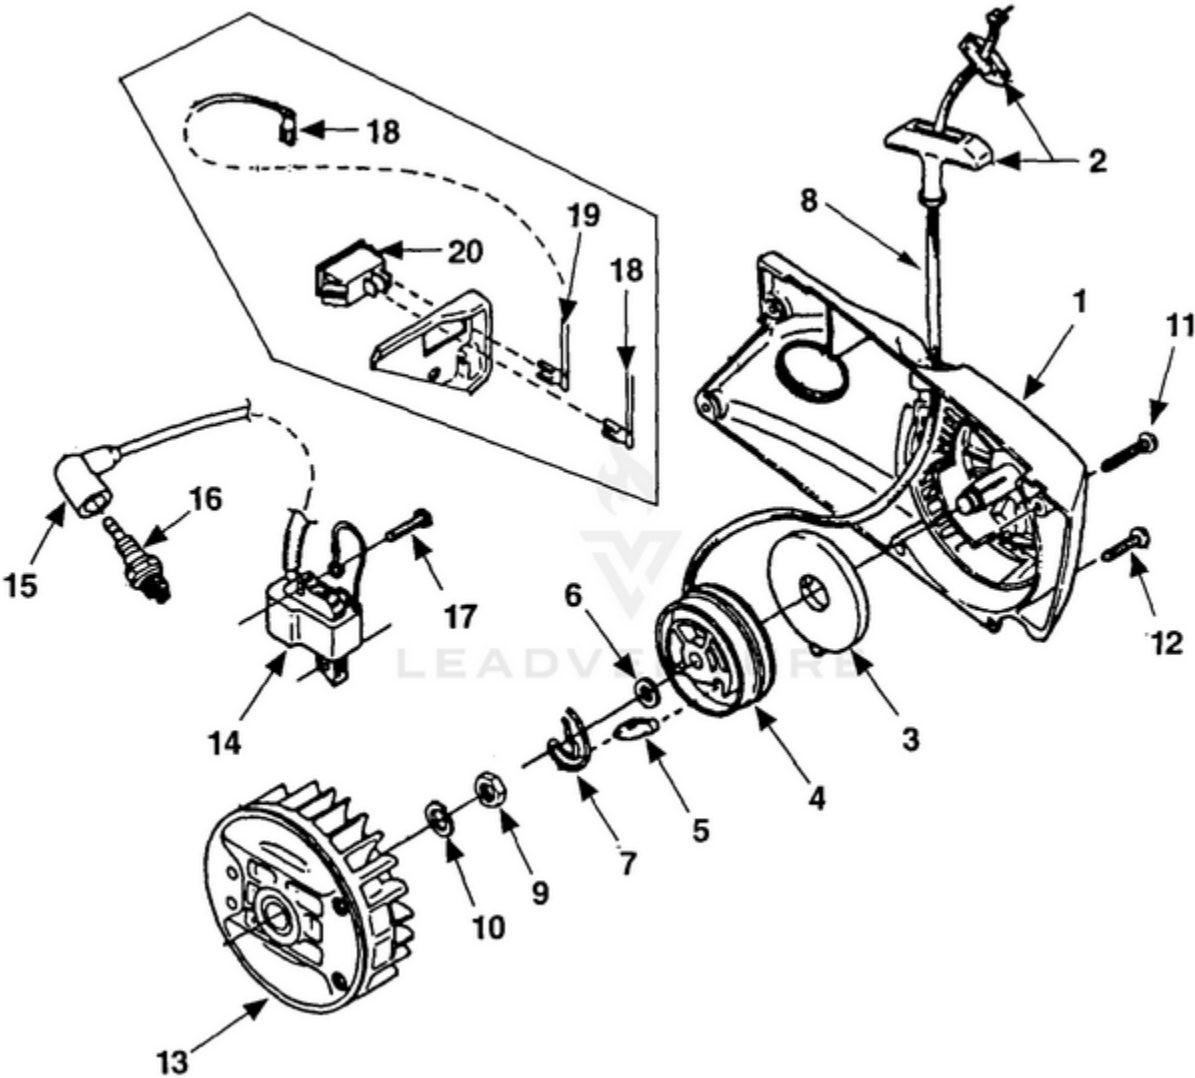

Rendered by LeadVenture, Inc.

Ref #	Part #	Description	Qty
1	A03884A	STARTER (Complete)	1
2	A69962B	GRIP-Starter (w/insert)	1
3	A97908	SPRING & CONTAINER	1
4	A03882	PULLEY ASSEMBLY	1
5	01274	WASHER-Thrust	1
6	98332A	PAWL-Starter	1
7	03750B	CLIP-Retainer	1
8	PS97500	ROPE-Starter (45")	1
9	81124A	NUT-Jam (3/8 - 24)	1
10	83102	WASHER-Lock (3/8")	1
11	82556	SCREW-Truss Hd. (10-24 x 1 1/4")	1
12	UP03899	SCREW (10-24 x 3/4")	3
	UP03701	IGNITION MODULE KIT	1
13	UP03630	ROTOR	1
14	UP03631	IGNITION MODULE	1
15	A02597	SPARK PLUG BOOT KIT	1
16	UP04093	SPARK PLUG (RCJ6Y) (Resistor)	1
17	UP04086	SCREW-Pan Hd (8-32 x 5/8")	2
18	A03556	GROUND WIRE	1
19	A02284	IGNITION GROUND WIRE	1
20	01802	SWITCH	1

MP38i Multi Purpose Saw UT-05081 05081-UT MP38i Multi Purpose Saw UT-05081 MP38i Multi Purpose Saw -
Wheel Arm Assembly

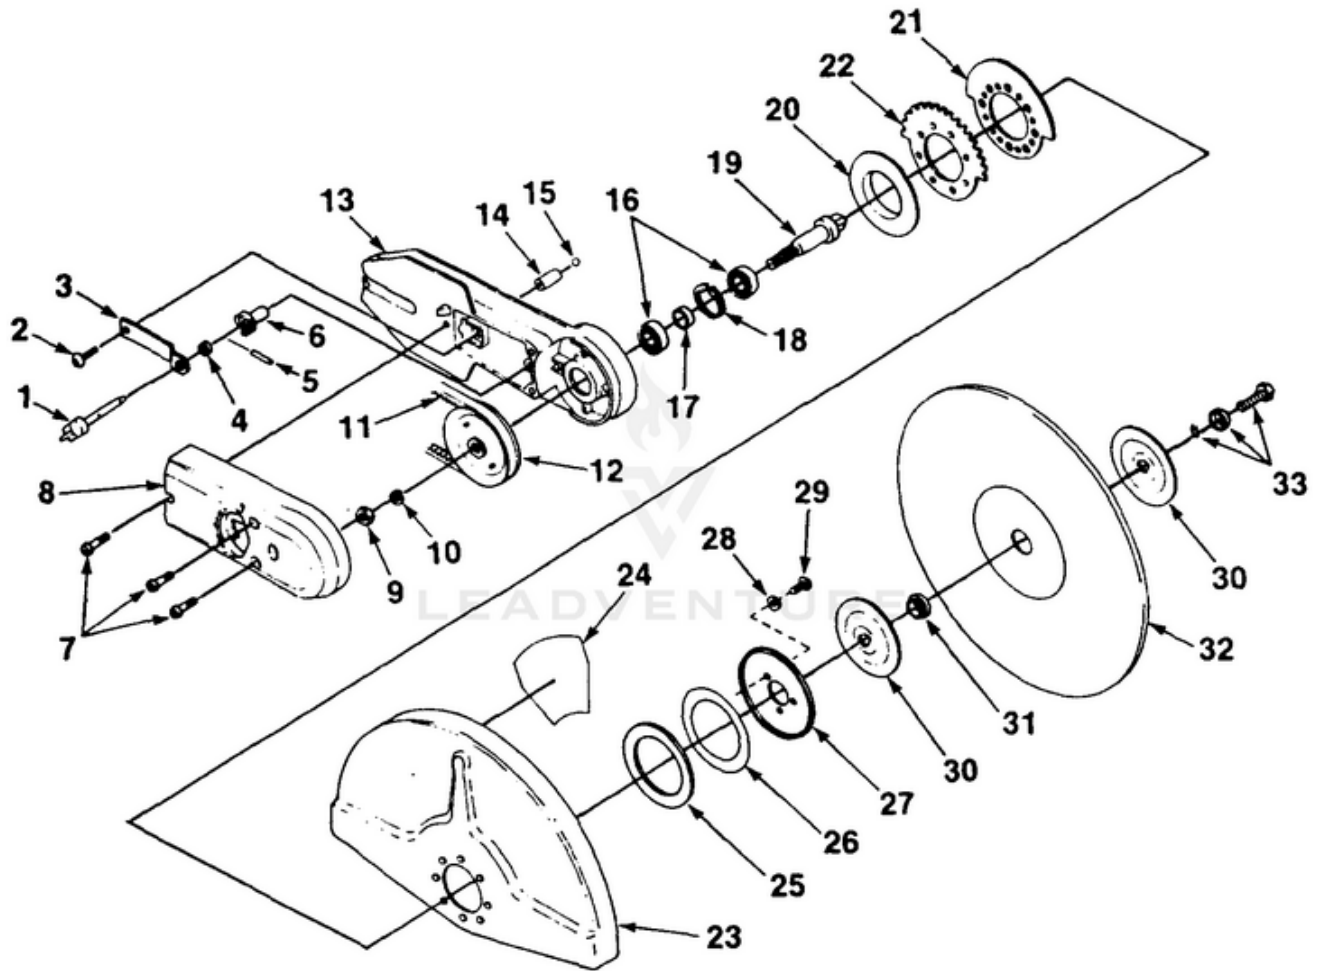

Rendered by LeadVenture, Inc.

Ref #	Part #	Description	Qty
1	A00660	KNOB & PIN	1
2	966201	SCREW-Truss Hd. (10-24 X 1/2")	1
3	01923	PLATE-Spring	1
4	01922	SPACER-Adjusting Pin	1
5	JA461359	PIN-Roll	1
6	01921	SLEEVE-Cam	1
7	95792	SCREW-Round Hd. (10-24 X 23/32")	3
8	07704	BELT Cover	1
9	02423	NUT-Hex	1
10	JA446148	WASHER-Lock (7/16)	1
11	46068	BELT- V-Drive	1
12	A02891	PULLEY & HUB	1
13	076563A	ARM-Wheel	1
14	02267	SNUBBER	1
15	00568	STEEL BALL	1
16	63107	BEARING-Ball	2
17	01916	SPACER-Bearing	1
18	PS31746	RING-Retaining	1
19	019061	SHAFT-Wheel	1
20	01915	COLLAR-Wheel Guard	1
21	01914A	PAD-Adjuster	1
22	01913	DETENT-Adjuster	1
23	A04647A	WHEEL GUARD & DECAL / 12"	1
24	04645A	DECAL-Caution	1
23	A07696	WHEEL GUARD & DECAL / 14"	1
24	04645A	DECAL-Caution	1
25	01912	WASHER-Rubber	1
26		UNKNOWN	
26A	0191101	SHIM-.020"	1
26B	0191102	SHIM-.030" (Alt. Part)	0
27	01910	WASHER-Spring	1
28	95935	WASHER (#12 - 11/16)	3
29	966201	SCREW-Truss Hd. (10-24 X 1/2")	3
30	019091A	FLANGE-Wheel	1
31	01902	SPACER (1")	1
	01903	SPACER (22mm)	1
	01907	SPACER (20mm)	1
32		WHEEL	1
33	A03412	BOLT & WASHER	1

No
Diagram
Available



LEADVENTURE

Parts List
Only

Ref #	Part #	Description	Qty
	64596C	Abrasive Wheels 12" - Masonry & Concrete	
	43230B	Abrasive Wheels 12" - Masonry & Concrete	
	49826	Abrasive Wheels 12" - Masonry & Concrete	
	64597C	Abrasive Wheels 12" - Metal	
	43232B	Abrasive Wheels 12" - Metal	
	49824	Abrasive Wheels 12" - Metal	
	68421B	Abrasive Wheels 12" - Ductile and Cast Iron	
	43231B	Abrasive Wheels 12" - Ductile and Cast Iron	
	49825	Abrasive Wheels 12" - Ductile and Cast Iron	
	03707A	Abrasive Wheels 12" - Asphalt	
	49559A	Abrasive Wheels 14" - Masonry & Concrete	
	49765A	Abrasive Wheels 14" - Masonry & Concrete	
	49561A	Abrasive Wheels 14" - Metal	
	49768A	Abrasive Wheels 14" - Metal	
	49560A	Abrasive Wheels 14" - Ductile and Cast Iron	
	49767A	Abrasive Wheels 14" - Ductile and Cast Iron	
	03696A	Abrasive Wheels 14" - Asphalt	
	A49753A	Diamond Wheels 12" - Premium Segmented Rim	
	A49751A	Diamond Wheels 12" - Standard Segmented Rim	
	A04831A	Diamond Wheels 14" - Premium Segmented Rim	
	A49572A	Diamond Wheels 14" - Standard Segmented Rim	
	08831	Saw Blades 12" - Carbide, Junkyard Dog(TM)	
	A08337A	Replacement arm Assemblies - 12" Wheel Arm	
	A08338A	Replacement arm Assemblies - 14" Wheel Arm	

No
Diagram
Available



LEADVENTURE

Parts List
Only

Ref #	Part #	Description	Qty
	UT05064	Dolly kit W/Depth Gage	
	A18009A	Carry Case w/Insert	
	A49649	NLA(NO LONGER AVAILABLE)	
	98827	Spark Arrestor Screen	