



867

866

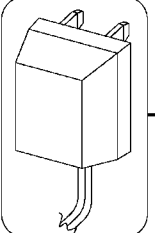


871

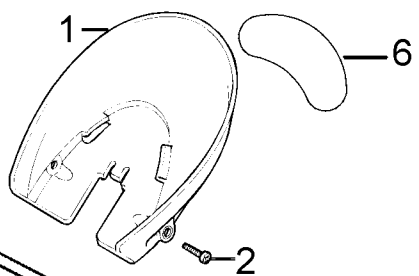

1

6

2

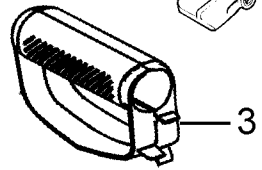



3

2




4

 2

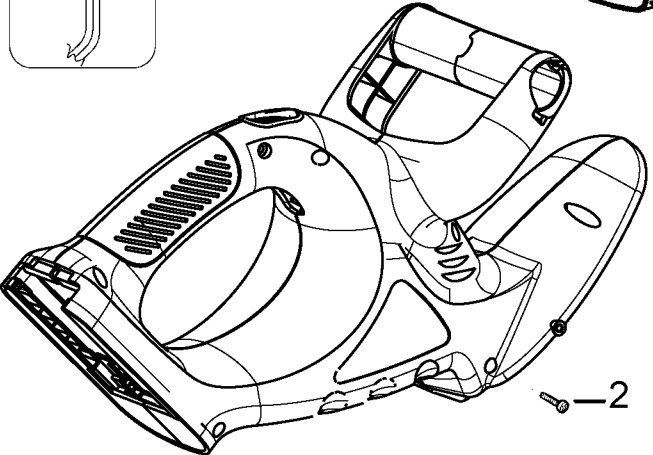

18

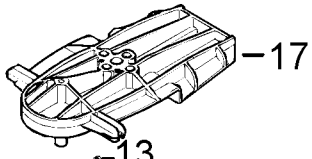

17

13

14


15

16

12

9

11

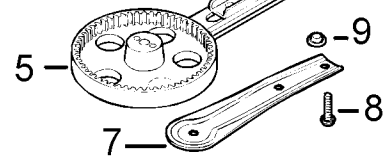


5

9

7

8

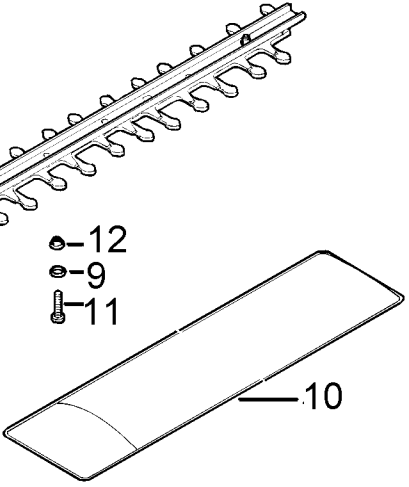

10

## Parts List for NHT518 Type 1

Item Number	Part Number	Description	Qty Required
1	574137-01	GUARD	1
2	5103541-00	SCREW	10
3	574847-00	HANDLE	1
4	574095-01	CAP	2
5	90542557	BLADE ASSY.	1
6	000000-00	No Longer Available	1
7	571828-00	GEAR COVER	1
8	798754-01	BOLT	1
9	573217-00	SPACER	9
10	576571-01	SHEATH	1
11	371954-01	BLADE BOLT	7
12	798755	NUT - FLANGE	7
13	573217-00	SPACER	2
14	576575-00	SCREW	2
15	574164-00	INSERT	1
16	570567-00	SCREW	2
17	571824-00	GEARCASE	1
18	370927-00	PLATE	1
866	90554640	BATTERY PACK	1
867	5102026-00	BATTERY CAP	1
871	90571729-01	CHARGER	1
871	5103069-12	CHARGER	1