


**RYOBI
18 VOLT LAWN MOWER
ITEM NO. P1104
MANUFACTURING NO. 099323001
REPAIR SHEET**

TECHTRONIC INDUSTRIES POWER EQUIPMENT

P.O. Box 1288, Anderson, SC 29622 USA
1-800-860-4050 • www.ryobitools.com

RYOBI 18V LAWN MOWER – MODEL NO. P1104

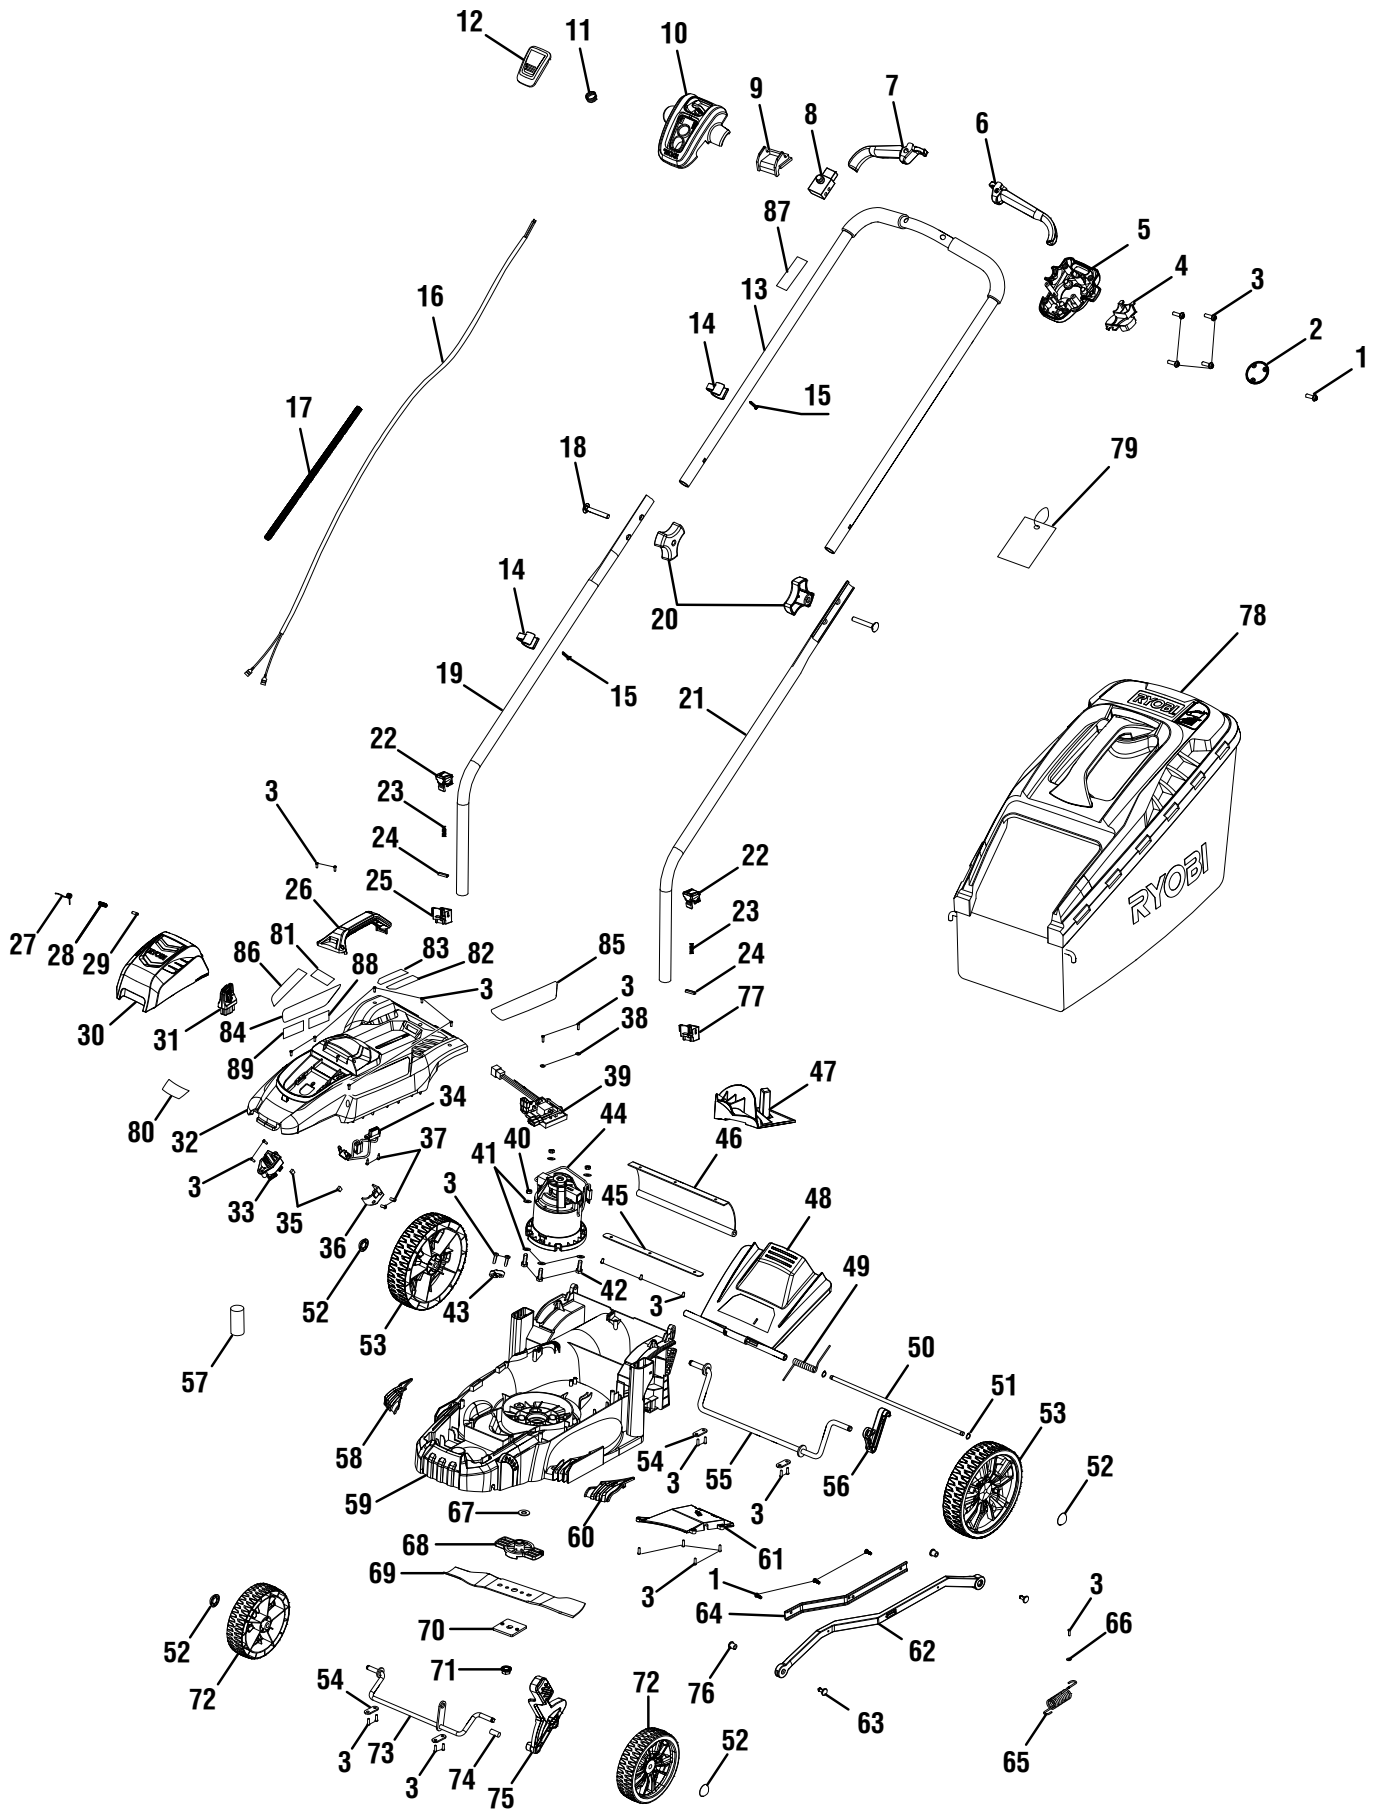

RYOBI 18V LAWN MOWER – MODEL NO. P1104


The model number will be found on a label attached to the housing. Always mention the model number in all correspondence regarding your **LAWN MOWER** or when ordering replacement parts.

PARTS LIST

KEY NO.	PART NUMBER	DESCRIPTION	QTY	KEY NO.	PART NUMBER	DESCRIPTION	QTY
1	996607001	Screw (M4.2 x 12 mm)	4	47	996652001	Mulch Plug.....	1
2	996600001	Socket Cover.....	1	48	996618001	Rear Door	1
3	996603001	Screw (M4.2 x 15 mm).....	34	49	996611001	Torsion Spring.....	1
4	996605001	Partition Plate	1	50	996650001	Rear Door Shaft.....	1
5	996609001	Lower Control Cover	1	51	996617001	Rentention Clip.....	2
6	996602001	Switch Trigger (Left).....	1	52	996620001	Bearing Clamp.....	4
7	996601001	Switch Trigger (Right)	1	53	996647001	Rear Wheel	2
8	996606001	Anti-Self Locking Switch	1	54	996661001	Axle Press Plate.....	4
9	996608001	Switch Cover	1	55	996616001	Rear Axle	1
10	996612001	Upper Control Cover	1	56	996654001	Axle Bracket	1
11	996624001	Compression Spring.....	1	57	996667001	Counter Weight.....	1
12	996636001	Switch Button	1	58	996657001	Grass Comb (Right)	1
13	996653001	Handle Assembly.....	1	59	996673001	Deck	1
14	996614001	Cord Clip	2	60	996664001	Grass Comb (Left)	1
15	996644001	Screw (M3 x 16 mm).....	2	61	996676001	Deck Insert	1
16	996642001	Cord Assembly	1	62	996662001	Adjustment Link Bar	1
17	996615001	Corrugated Pipe	1	63	996659001	Connector.....	2
18	996610001	Bolt (M6 x 49 mm)	2	64	996674001	Metal Plate Support.....	1
19	996619001	Lower Right Tube.....	1	65	996666001	Tension Spring.....	1
20	996643001	Triangle Knob.....	2	66	996656001	Spring Washer	1
21	996623001	Lower Left Tube.....	1	67	996671001	Blade Washer	1
22	996627001	Cutting Adjustment Button.....	2	68	996670001	Blade Holder.....	1
23	996625001	Compression Spring.....	2	69	996675001	Blade	1
24	996630001	Lock Pin.....	2	70	996668001	Blade Mounting Plate	1
25	996633001	Right Housing	1	71	996660001	Flange Hex Nut (M10 x 1.25)	1
26	996649001	Upper Cover Handle.....	1	72	996604001	Front Wheel	2
27	996638001	Torsion Spring.....	1	73	996672001	Front Axle	1
28	996629001	Compression Spring.....	1	74	996665001	Metal Pin.....	1
29	996646001	Button	1	75	996655001	Adjust Lever.....	1
30	996635001	Battery Cover.....	1	76	996669001	Lock Pin.....	2
31	996626001	Key Assembly	1	77	996663001	Left Housing	1
32	996641001	Upper Housing	1	78	996658001	Bag Assembly.....	1
33	996631001	Power Connector.....	1	79	918016014	Start Key Hang Tag.....	1
34	996622001	Inner Wire Assembly.....	1	80	940705397	Ryobi Logo Label (Front)	1
35	996639001	Rubber Pad	2	81	940705398	Start Key Warning (ENG)	1
36	996632001	Power Connection Flap Cover	1	82	940705400	Warning Icon Label (#1).....	1
37	996645001	Screw (M3 x 12 mm).....	4	83	940851354	Warning Icon Label (#2).....	1
38	996637001	Washer.....	2	84	940851338	Feature Label (Right)	1
39	996651001	Deck Motor Controller Circuit Board.....	1	85	940851339	Feature Label (Left).....	1
40	996640001	Lock Nut (M6)	3	86	940851355	Warning Label (FR/SP)	1
41	996634001	Washer (ID6 x OD14 x 1.5t)	6	87	940851356	Starting Instructions Label.....	1
42	996648001	Bolt (M6 x 25 mm, Hex Hd.)	3	88	941588225	Data Label (#1).....	1
43	996677001	Cord Clamp	1	89	941588226	Data Label (#2).....	1
44	996628001	DC Motor	1				
45	996621001	Pressure Plate.....	1				
46	996613001	Trailing Shield	1				

Not Shown:

995000344 Operator's Manual
6-12-18
(Rev:01)

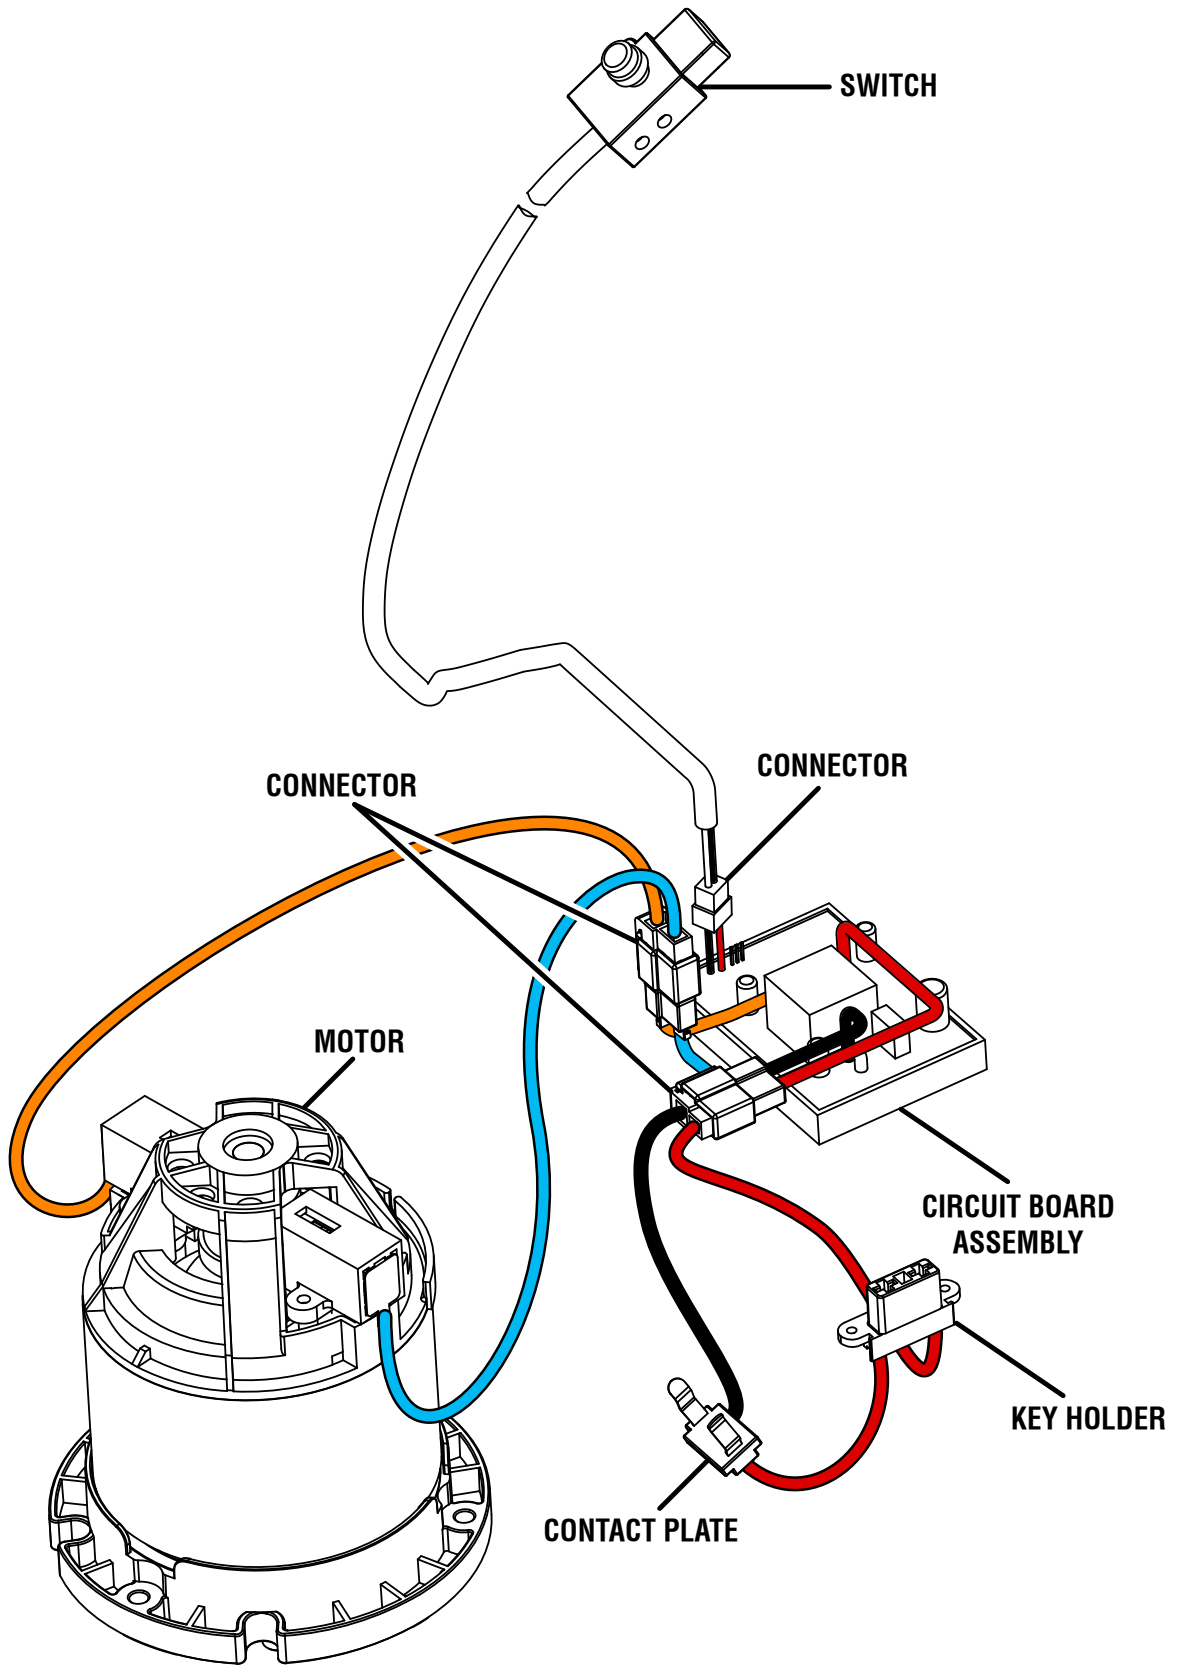

WIRING DIAGRAM