


RYOBI 18V RIGHT ANGLE DRILL - MODEL NUMBER P240

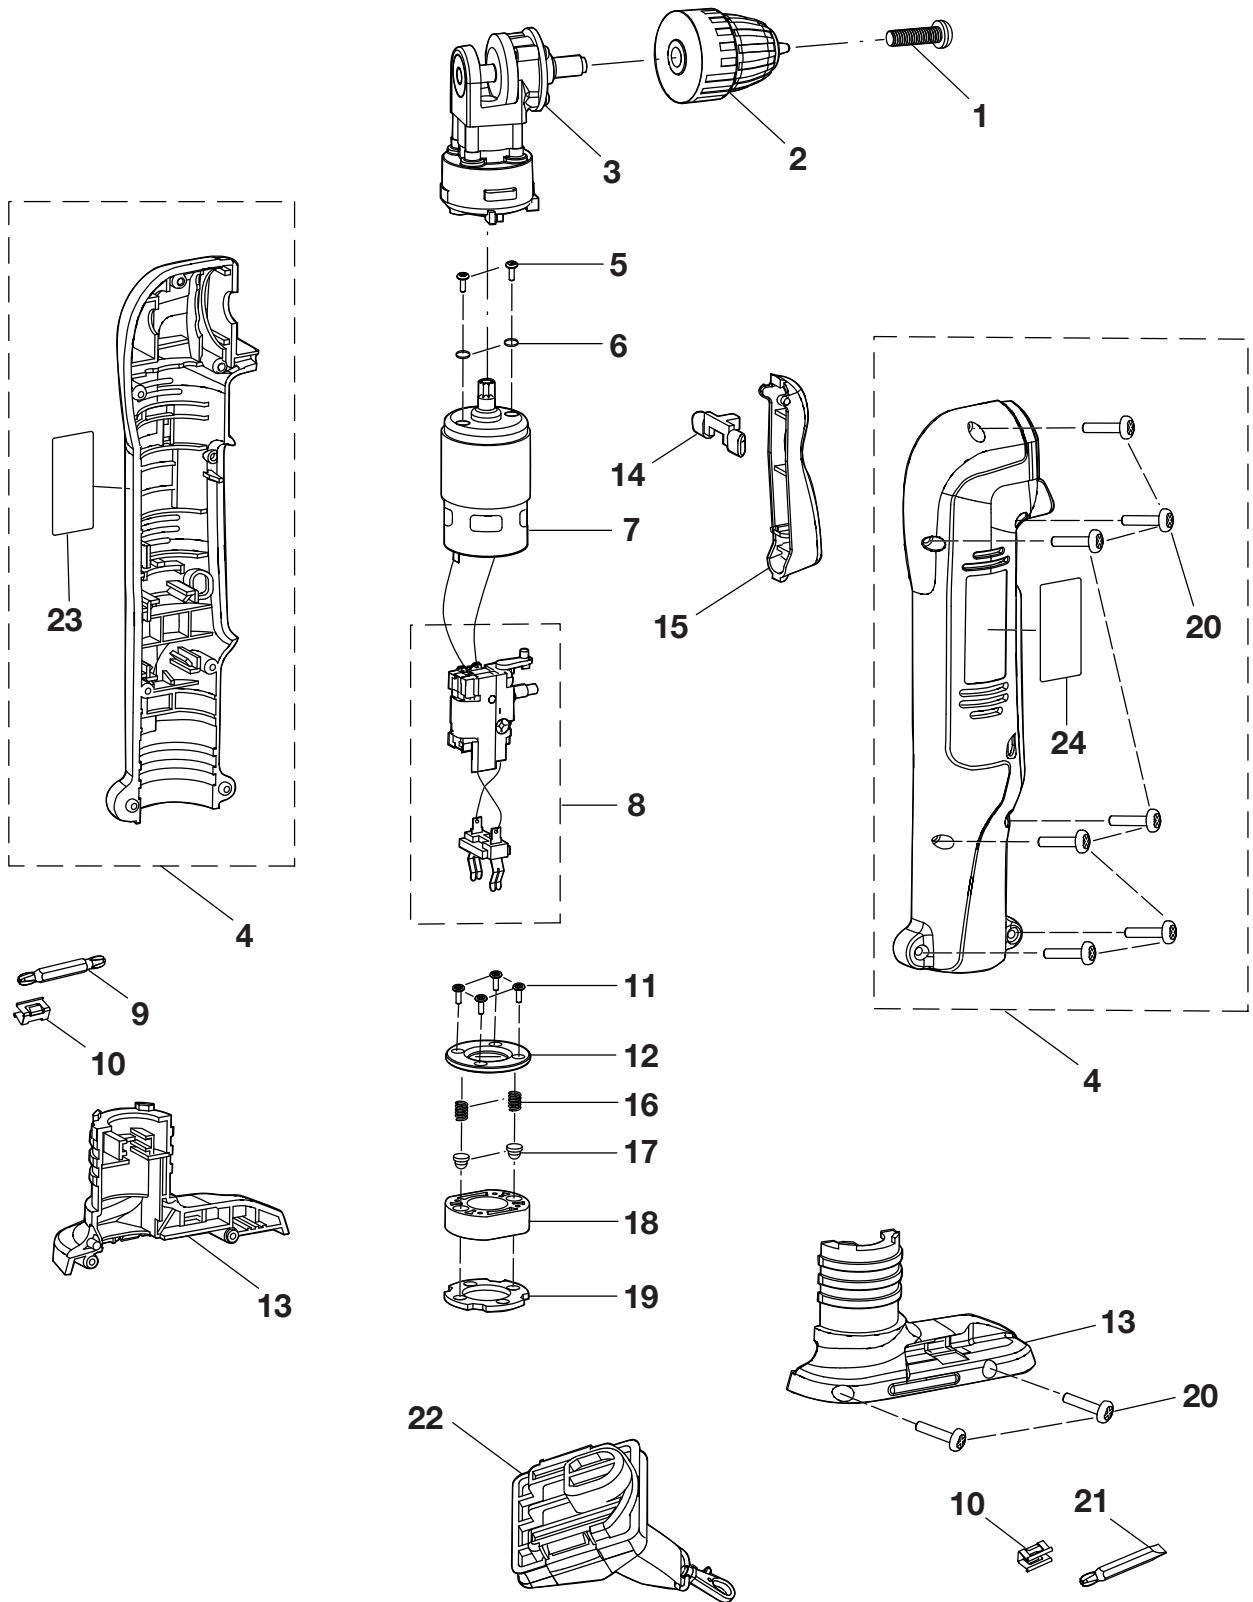

## RYOBI 18V RIGHT ANGLE DRILL – MODEL NUMBER P240

The model number will be found on a label attached to the motor housing. Always mention the model number in all correspondence regarding your **Right Angle Drill** or when ordering repair parts.

### PARTS LIST

Key No.	Part Number	Description	Qty.
1	6612003	SCREW (M5 x 18.5 mm) .....	1
2	6903201	CHUCK (3/8 in.) .....	1
3	220017194	GEAR BOX ASSEMBLY .....	1
4	200202334	HOUSING ASSEMBLY .....	1
5	6621202	SCREW (M4 x 10 mm PAN HD.) .....	2
6	6703001	SPRING WASHER.....	2
7	230081002	MOTOR ASSEMBLY .....	1
8	270018078	SWITCH ASSEMBLY (VS80) .....	1
	270015206	SWITCH ASSEMBLY (VS70) .....	1
9	6782106	BIT (DOUBLE ENDED PH#2, PH#3) .....	1
10	630206007	BIT CLIP.....	2
11	660204001	SCREW (M3 x 10 mm PAN HD.) .....	4
12	671510001	MOUNTING PLATE .....	1
13	200305001	SWIVEL FOOT ASSEMBLY .....	1
14	512697001	FORWARD/REVERSE SELECTOR.....	1
	512697003	FORWARD/REVERSE SELECTOR (ONLY USE WITH VS70 SWITCH).....	1
15	512698001	PADDLE SWITCH TRIGGER .....	1
16	671624001	SPRING.....	2
17	671522001	BALL PIN.....	2
18	512699001	PIVOT HOLDER .....	1
19	671511001	MOUNTING BASE.....	1
20	6620805	SCREW (M4 x 16 mm) .....	9
21	6782405	BIT (DOUBLE ENDED 6 mm, 7 mm) .....	1
22	200292003	LANYARD .....	1
23	940237058	DATA LABEL.....	1
24	940203046	LOGO LABEL .....	1
	983000648	OPERATOR'S MANUAL	
	3-1-13 (REV:03)		