


RYOBI 18.0 VOLT CORDLESS RECIPROCATING SAW – MODEL NUMBER P510

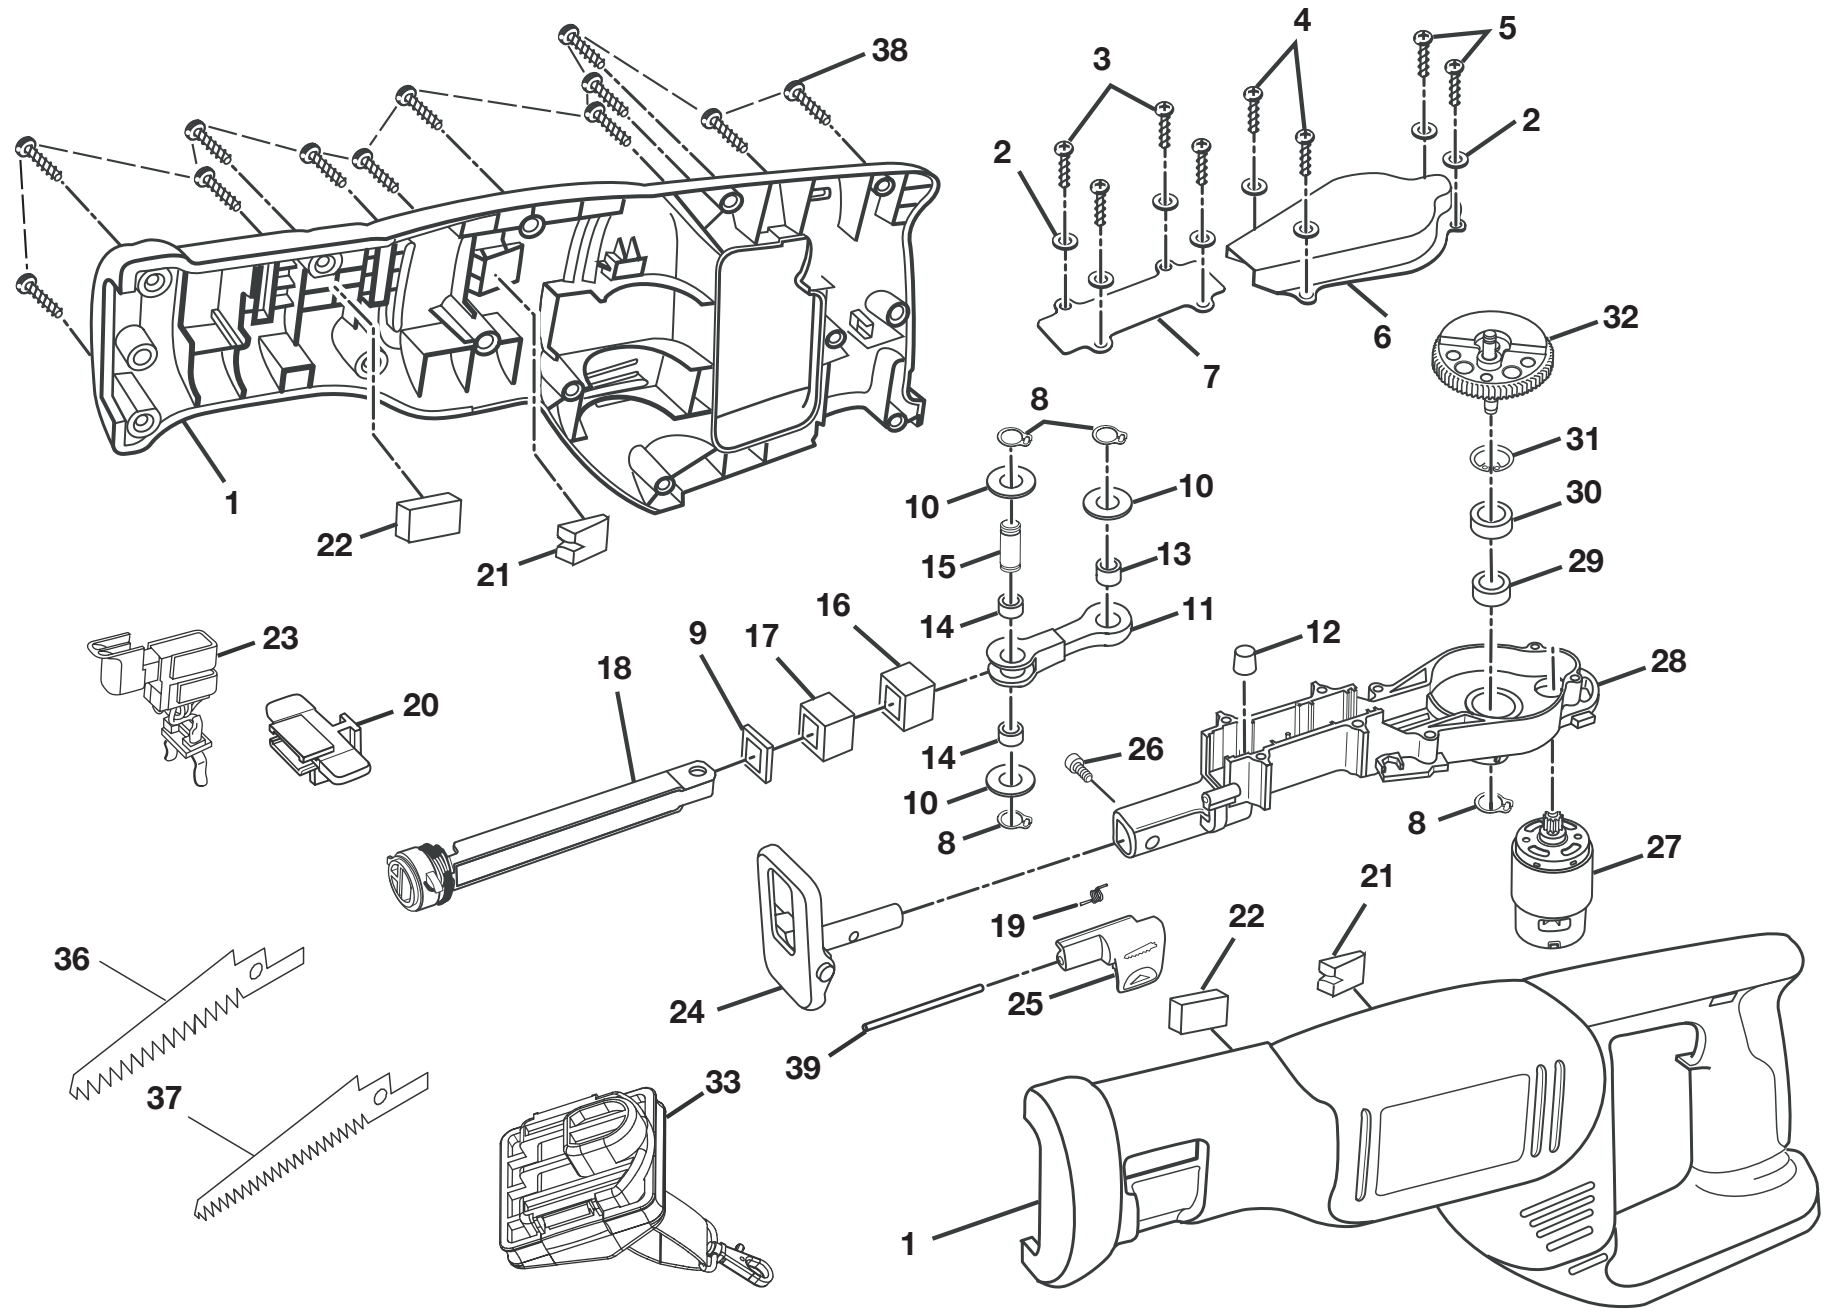

RYOBI 18.0 VOLT CORDLESS RECIPROCATING SAW – MODEL NUMBER P510

The model number will be found on a label attached to the motor housing. Always mention the model number in all correspondence regarding your **RECIPROCATING SAW** or when ordering repair parts.

PARTS LIST

KEY NO.	PART NUMBER	DESCRIPTION	QTY	KEY NO.	PART NUMBER	DESCRIPTION	QTY
1	200202291	HOUSING ASSEMBLY	1	22	5670301	RUBBER PAD.....	2
2	6703001	SPRING WASHER.....	8	23	270018098	SWITCH ASSEMBLY.....	1
3	660165007	SCREW (M4 x 18 mm)	4	24	300216040	SHOE ASSEMBLY	1
4	6621211	SCREW (M4 x 12 mm)	2	25	300697001	BLADE RELEASE MECHANISM	1
5	6621215	SCREW (M4 x 28 mm)	2	26	6616926	SCREW (M6 x 14 mm) W/SPRING WASHER	1
6	6899801	GEAR CASE COVER.....	1	27	230074014	MOTOR ASSEMBLY	1
7	6900501	SLIDING ROD COVER	1	28	680997006	GEAR CASE SUPPORT	1
8	6770401	RETAINING RING.....	4	29	6899902	BALL BEARING (696-ZZ).....	1
9	901512001	FIBER SHEET (20.5 x16.9 x 3 mm).....	1	30	6899901	BALL BEARING (607-ZZ).....	1
10	690915019	WASHER.....	3	31	6902501	RETAINING RING	1
11	641201001	CONNECTING ROD.....	1	32	3030810	GEAR ASSEMBLY.....	1
12	5670401	RUBBER CUSHION	1	33	200292003	PLUG-IN LANYARD	1
13	610824001	NEEDLE ROLLER BEARING.....	1	34	940340001	LOGO PLATE (NOT SHOWN).....	1
14	672354002	CONNECTING BUSHING	2	35	940045065	DATA PLATE (NOT SHOWN).....	1
15	681081002	PIN	1	36	690291006	SAW BLADE, WOOD CUTTING.....	1
16	672355003	SLIDE BUSHING.....	1	37	690292006	SAW BLADE, METAL CUTTING.....	1
17	672353003	SLIDE BUSHING	1	38	6620805	SCREW (M4 x 16 mm).....	12
18	300309027	SLIDING ROD ASSEMBLY W/QUICK RELEASE.....	1	39	690476001	PIN	1
19	690475001	TORSION SPRING	1		983000542	OPERATOR'S MANUAL (960223354)	
20	984987001	SAFETY BUTTON W/SPRING	1		7-29-10		
21	5672301	RUBBER WEDGE.....	2		(REV:08)		