



Parts List for PC60THPK Type 1

Item Number	Part Number	Description	Qty Required
1	5140101-33	FRONT SHOE	1
2	5140101-34	SPRING	1
3	5140101-35	STEEL BALL	2
4	5140101-36	SPRING	1
5	5140101-38	DIAL	1
6	5140101-39	KNOB SET	1
7	5140101-40	KNOB COVER	1
8	5140101-41	SCREW	7
9	5140101-42	UPPER COVER	1
10	5140101-43	SCREW	1
11	5140101-44	SPRING	1
12	5140101-45	BLADE SHIELD PLATE	1
13	5140101-47	CLAMSHELL ASSY.	1
14	5140101-48	BRUSH COVER	2
15	5140101-51	CORD CLAMP	1
16	5140101-52	SCREW	15
17	5140101-53	SWITCH	1
18	5140101-55	CAPACITOR	1
20	5140101-56	MOTOR COVER	1
21	5140101-57	CORD PROTECTOR	1
22	5140101-58	SCREW	3
23	20774-01	BEARING,BALL	1
24	5140101-61	ARMATURE ASSEMBLY	1
25	5140101-62	LOCK WASHER	2
27	5140101-63	KNOB BAFFLE	1
28	5140101-64	NUT M6	1
29	5140101-65	DUST SPANNER	1

Parts List for PC60THPK Type 1

Item Number	Part Number	Description	Qty Required
30	5140101-66	DUST DEFLECTOR	1
32	5140101-36	SPRING	1
33	5140101-59	BALL BEARING	1
34	5140101-69	BLADE DRUM ASSY	1
35	5140101-83	PIN	1
36	5140101-85	FIELD	1
37	5140101-86	BAFFLE	1
38	5140101-87	SPRING	1
39	5140101-88	REAR PLATE BAR	2
40	5140101-89	REAR PLATE STAND	1
41	5140101-90	REAR SHOE	1
42	5140101-91	SCREW	4
43	5140101-92	BELT	1
44	5140101-93	BELT COVER	1
47	5140101-94	BALL BEARING	1
48	5140101-95	BEARING PLATE	1
50	5140101-96	DRIVE WHEEL	1
51	5140101-97	NUT M8	1
52	5140101-98	BAFFLE	1
54	5140101-99	BALL BEARING	1
56	5140102-00	DRIVE WHEEL	1
57	5140102-01	BEARING PLATE	1
58	5140102-05	CORDSET	1
60	5140102-06	DUST BAG	1
61	5140102-07	SPANNER BLADE 1	1
62	5140102-09	VACUUM ADAPTOR	1
63	5140102-10	FENCE	1

Parts List for PC60THPK Type 1

Item Number	Part Number	Description	Qty Required
67	5140101-49	BRUSH BOX	2
68	5140101-50	BRUSH PAIR	1
69	5140101-72	SCREW	6
70	5140101-74	BLADE CLAMP	2
71	5140101-76	SCREW	4
72	5140101-78	BLADE SUPPORT	2
73	5140101-80	BLADE	2
74	5140101-82	CUTTER BLOCK	1
821	5140102-19	NAME PLATE	1
856	5140102-13	HSS PLANER BLADES	1