



## Parts List for PCC710LA Type 1

Item Number	Part Number	Description	Qty Required
1	90592732	HOUSING & COVER	1
2	90592735	ECCENTRIC SHAFT ASSY	1
3	90592740	SPINDLE ASSEMBLY	1
4	90595811	PCB ASSEMBLY	1
5	90592742	SWITCH ACTUATOR	1
6	90592745	MOTOR ASSEMBLY	1
7	90599051	LEVER ASSEMBLY	1
8	90580672	TORSION SPRING	1
9	90581542	SCREW	1
10	90581543	HEX NUT	1
11	90593191	COVER	1
12	90596629	RUBBER PLUG	2
13	370748	SCREW	10
22	90596670	CLAMP WASHER	1
29	624474-06	NEEDLE BEARING	1
32	PC3011	BLADE	1
33	PC3012	BLADE	1
34	PC3005	PAD	1
35	PC3002	SANDPAPER	1
36	PC3030	BLADE	1
37	PC3020	BLADE	1
40	PC3021	BLADE	1
41	PC3013	BLADE	1
120	90595055	NAME PLATE	1
856	PC3010	BLADE	1
862	90628316	SOFT BAG	1
866	PCC680L	BATTERY PACK	1

## Parts List for PCC710LA Type 1

Item Number	Part Number	Description	Qty Required
871	90599245-01	CHARGER	1