











Parts List for PCI5000-AR Type 1

Item Number	Part Number	Description	Qty Required
1	285819-99	FUEL TANK	1
2	285820-00	FUEL CAP	1
4	285820-01	GASKET	1
5	285820-02	FUEL FILTER	1
6	285820-03	FUEL VALVE	1
7	285820-04	GAUGE	1
8	285820-05	FLAT WASHER	4
9	285820-06	SPACER	4
10	285820-07	RUBBER CUSHION	4
11	285820-08	SCREW	2
13	285815-09	CLIP	2
14	285818-08	HOSE	1
15	285820-09	SLEEVE	1
16	5140066-68	SEAT	1
17	5140066-69	SCREW	4
18	5140070-57	CONTROL PANEL	1
21	5140066-38	FRAME	1
22	5140066-39	CUSHION	2
24	285815-75	NUT	14
25	5140066-40	ISOLATOR	2
26	5140066-41	ISOLATOR	2
27	5140066-42	FLANGE NUT	4
29	5140066-43	SHOCK ABSORBER	4
30	5140070-62	BRACKET	2
31	5140070-63	HANDLE	2
32	5140066-46	RUBBER SLEEVE	2
33	5140066-47	BOLT	6

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit www.dewaltservicenet.com for current parts information.

Parts List for PCI5000-AR Type 1

Item Number	Part Number	Description	Qty Required
34	5140066-48	STAY	1
35	285817-57	BOLT	4
41	5140066-49	GUARD PLATE	1
43	5140066-79	GENERATOR ASSY	1
44	5140066-51	BOLT	2
45	5140066-52	FLAT WASHER	1
46	5140066-53	BOLT	1
47	5140066-54	REAR HOUSING	1
49	5140066-56	WIRE TIE	2
50	5140066-57	BRUSH ASSEMBLY	1
51	285815-83	BOLT	3
52	5140066-58	BOLT	4
53	5140066-59	VOLTAGE REGULATOR	1
54	5140066-60	END COVER	1
55	5140070-58	SUPPORT	1
56	5140066-61	WHEEL	2
57	285819-90	BOLT	8
59	5140066-63	SHAFT	1
60	5140066-64	PLATE	1
61	5140066-65	MOUNT	2
62	5140066-66	SHOCK ABSORBER	2
63	5140066-67	FLAT WASHER	2
64	5140067-15	NUT	2
65	5140067-16	WASHER	2
66	5140067-17	CLIP	2
67	5140067-18	WASHER	2
68	5140070-60	PIN	2

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit www.dewaltservicenet.com for current parts information.

Parts List for PCI5000-AR Type 1

Item Number	Part Number	Description	Qty Required
69	5140070-61	CHAIN	2
101	N029667	NAMEPLATE	1
102	N009041	LABEL	1
105	N010764	WARNING LABEL	1
106	N028849	CAUTION LABEL	1
107	N028848	WARNING LABEL	1
108	N009562	INSTRUCTION LABEL	1
109	N009083	WARNING LABEL	2
110	N024485	LABEL	1
400	285814-01	BOLT	4
401	285815-94	DRAIN PLUG	2
402	285814-03	BOLT	1
404	285819-03	BOLT	2
406	285814-08	WASHER	1
407	285814-10	WASHER	2
408	285814-12	SPECIAL NUT	1
409	285814-14	OIL SEAL	1
410	285814-16	DOWEL PIN	2
413	285800-98	SPARK PLUG	1
414	285819-05	SEAL RING	1
415	285819-71	HEAD GASKET	1
416	285819-70	CYLINDER HEAD	1
417	285819-00	COVER	1
418	285818-99	BOLT	1
419	285819-73	CRANKCASE	1
420	285820-66	SWITCH ASSEMBLY	1
421	285819-17	OIL ALERT UNIT	1

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit www.dewaltservicenet.com for current parts information.

Parts List for PCI5000-AR Type 1

Item Number	Part Number	Description	Qty Required
426	285819-33	COUNTER BALANCE	1
427	285819-31	CRANKSHAFT	1
428	285819-32	KEY	1
429	285819-41	PISTON PIN	1
430	285814-61	CLIP	2
431	285814-64	RING SET	1
432	285819-39	CONNECTING ROD	1
433	285819-48	LIFTER	2
434	285819-47	PUSH ROD	2
436	285819-59	VALVE KIT	1
437	285819-55	VALVE SPRING	2
439	285819-62	SEAL	1
440	285819-51	ROTATOR VALVE	1
441	285819-50	CAMSHAFT	1
442	285819-45	PLATE	1
443	285819-44	ARM ASSEMBLY	2
444	285819-10	SHROUD	1
445	285815-04	GASKET	1
446	285815-08	GASKET	1
448	285815-10	CLIP	2
449	285820-12	STAY ASSY	1
450	285819-80	FAN	1
451	285819-81	STARTER PULLEY	1
452	285820-13	FLYWHEEL	1
453	285815-23	GROMMET	1
455	285819-82	IGNITION COIL	1
457	285815-30	GASKET	1

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit www.dewaltservicenet.com for current parts information.

Parts List for PCI5000-AR Type 1

Item Number	Part Number	Description	Qty Required
460	285819-37	PISTON	1
461	285819-86	SPRING	1
462	285819-85	SPRING	1
463	285819-88	ARM	1
464	285819-14	SHAFT	1
465	285815-49	LOCK PIN	1
470	285819-64	STARTER ASSY.	1
471	285819-75	INSULATOR	1
472	285820-75	CARBURETOR	1
473	285820-14	FILTER ASSY.	1
474	285819-84	CONTROL ASSY	1
477	285815-74	NUT	13
482	285815-86	BOLT	15
484	285815-90	BOLT	6
488	285819-66	FLAT WASHER	3
489	285820-10	BOLT	2
491	285819-68	FAN COVER	1
492	285816-07	BUSHING	1
495	285819-87	ROD	1
498	285819-74	OIL SEAL	1
499	285816-27	BALL BEARING	2
503	285815-84	BOLT	3
505	285819-57	SEAT	2
506	285819-53	RETAINER	2
510	285819-69	GROMMET	1
530	5140160-80	ROPE	1
531	285816-83	CAP ASSY.	1

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit www.dewaltservicenet.com for current parts information.

Parts List for PCI5000-AR Type 1

Item Number	Part Number	Description	Qty Required
549	285817-03	NUT	2
554	285819-78	TUBE	1
559	285820-71	HANDLE	1
601	285819-19	COVER	1
602	285819-20	BOLT	13
603	285819-79	CAP ASSY.	1
605	285819-22	O-RING	1
606	285819-24	GOVERNOR ASSY.	1
612	285819-27	COVER ASSY.	1
613	285819-29	GASKET	1
614	285814-18	DOWEL PIN	2
616	285816-51	BOLT	7
617	285814-22	BALL BEARING	1
620	285819-90	BOLT	4
621	285815-88	BOLT	7
622	285819-91	STAY	1
623	285819-92	SEAL	1
624	285819-93	PROTECTOR	1
625	285819-94	PROTECTOR	1
626	285819-95	MUFFLER	1
627	285819-96	PROTECTOR	1
628	285819-97	GASKET	1
629	000000-00	No Longer Available	1
630	285815-92	BOLT	4
631	285815-73	NUT	2
632	285816-46	GASKET	1

COPYRIGHT© 2005. All Rights Reserved.

Parts list, pricing, and availability subject to change. Please visit www.dewaltservicenet.com for current parts information.