



Parts List for PF200-AR Type 0

Item Number	Part Number	Description	Qty Required
1	184705-01	CLAMSELL SET	1
3	230047-00	SCREW	7
4	183492-00	CHUCK KEY	1
5	160734-01	CLUTCH	1
6	230036-00	FIBER WASHER	2
7	230038-00	SPRING WASHER	1
8	184687-00	BRUSH RING	1
9	184690-00	FIELD NUT	2
10	445860-00	SPRING,BRUSH	2
11	184571-02	BRUSH	2
12	184844-01	FIELD	1
13	230047-02	SCREW	2
14	184845-35	ARMATURE	1
15	161963-00	PIN	1
16	148814-00	BEARING	1
17	162034-03	LEVER	1
18	184696-00	BEARING BLOCK	1
19	184683-00	SLEEVE BEARING	1
20	162033-00	VIBRATOR	1
21	184732-00	BALL BEARING	1
22	184681-00	SPINDLE & GEAR	1
23	184679-00	SLEEVE BEARING	1
24	330033-15	CHUCK,10MM	1
25	770236-00	PROTECTOR,CORD	1
31	184717-05	SWITCH	1
35	184545-16	CORD	1
36	184702-29	NAME PLATE	1

Parts List for PF200-AR Type 0

Item Number	Part Number	Description	Qty Required
37	184702-32	ID LABEL	1