



Parts List for PS1440K Type 2

Item Number	Part Number	Description	Qty Required
1	149518-01	SCREW	1
2	419233-06	KEYLESS CHUCK	1
3	5102586-09	2 SPD SWITCH	1
4	607918-41	SCREWDRIVER BIT	1
5	5102567-01	MOTOR & GEARBOX	1
6	311978-05	ACTUATOR FWR/REV	1
7	148354-03	BIT CLIP	1
866	000000-00	No Longer Available	1
867	5102026-00	BATTERY CAP	1
871	5103069-09	CHARGER ASSY.	1
871	5103618-01	RADIO CHARGER	1