



Parts List for PS1800K Type 1

Item Number	Part Number	Description	Qty Required
1	5102585-01	CLAMSHELL	1
2	311978-05	ACTUATOR FWR/REV	1
3	148354-03	BIT CLIP	1
4	607918-41	SCREWDRIVER BIT	1
5	5102586-01	VSR SWITCH	1
6	5100850-11	TRANSMISSION	1
7	5102763-00	MOTOR & PINION	1
8	330013-03	SCREW	4
9	419233-06	KEYLESS CHUCK	1
10	149518-01	SCREW	1
12	5102589-01	NAMEPLATE	1
13	5102537-01	ID LABEL	1
14	046376-00	PIN	1
15	330019-00	SCREW	2
861	497641-05	LATCH	2
861	499124-13	KIT BOX	1
866	PS145	18V BATTERY	1
867	645221-00	BATTERY CAP	1
871	90500932	CHARGER	1
871	5102767-12	CHARGER	1