



Parts List for PS3350K Type 1

Item Number	Part Number	Description	Qty Required
1	149518-01	SCREW	1
2	498796-00	KEYLESS CHUCK	1
3	607918-41	SCREWDRIVER BIT	1
4	148354-03	BIT CLIP	1
861	499125-00	KIT BOX	1
866	PS120	9.6V BATTERY PACK	1
867	645221-00	BATTERY CAP	1
871	418352-00	PS150 9.6V CHARGER	1
875	497641-05	LATCH	2