



Parts List for PS3500K-2 Type 1

| Item Number | Part Number | Description | Qty Required |
|-------------|-------------|---------------------|--------------|
| 1 | 418482-02 | CLAMSHELL SET | 1 |
| 2 | 311978-00 | ACTUATOR | 1 |
| 3 | 148354-03 | BIT CLIP | 1 |
| 4 | 607918-41 | SCREWDRIVER BIT | 1 |
| 5 | 486784-00 | VSR SWITCH | 1 |
| 6 | 486256-09 | TRANSMISSION | 1 |
| 7 | 152983-00 | MOTOR,D.C. | 1 |
| 8 | 330013-04 | SCREW | 6 |
| 9 | 498796-00 | KEYLESS CHUCK | 1 |
| 10 | 149518-01 | SCREW | 1 |
| 11 | 311975-01 | TOP,INSERT | 1 |
| 12 | 418442-02 | NAMEPLATE | 1 |
| 13 | 418443-02 | LABEL,IDENT | 1 |
| 16 | PS130 | 12V BATTERY | 1 |
| 17 | 418352-01 | PS160 12V CHARGER | 1 |
| 861 | 000000-00 | No Longer Available | 1 |