



## Parts List for PS3700K Type 1

Item Number	Part Number	Description	Qty Required
1	000000-00	No Longer Available	1
2	311978-00	ACTUATOR	1
3	148354-03	BIT CLIP	1
4	607918-41	SCREWDRIVER BIT	1
5	497030-04	VSR DC SWITCH	1
6	000000-00	No Longer Available	1
7	486340-00	MOTOR & PINION	1
8	330013-03	SCREW	2
9	330075-25	KEYLESS CHUCK	1
10	149518-01	SCREW	1
11	311975-08	TOP INSERT	1
12	000000-00	No Longer Available	1
13	000000-00	No Longer Available	1
14	330013-06	SCREW,PLASTIC	1
15	330019-00	SCREW	3
16	PS145	18V BATTERY	1
17	90500930-01	PS185 18V CHARGER	1
861	499125-00	KIT BOX	1