



## Parts List for PSE1200-00 Type 1

Item Number	Part Number	Description	Qty Required
1	911450SV	SS/A-SHOE ASSEMBLY	1
2	697965	RET RING	1
3	906725	INSULATOR BOOT	1
4	897774	COLLAR	1
5	648924-00	SPRING	1
6	882255	SCREW	2
7	879458	PLATE	1
8	879463	SCREW	4
9	902998	SEAL	1
10	879408	SCREW	2
11	906701	FRONT HOUSING	1
12	882348	FELT SEAL	2
13	883095	BEARING	3
14	802302	RING	2
15	879429	SPACER	1
16	853246	RING	1
17	890819	WOBBLE PLATE	1
18	883098	TUBE-CARRIER	1
19	648594-00	CLAMP PIN	1
20	N074353	RECIP-SHAFT KIT	1
21	855284	BEARING	2
22	883097SV	DRIVE SHAFT	1
23	879401	GEAR	1
24	000000-00	No Longer Available	1
25	900826	SCREW	6
26	N133288	SWITCH KIT	1
26	A02928	SWITCH	1

## Parts List for PSE1200-00 Type 1

Item Number	Part Number	Description	Qty Required
27	906718	LEVER	1
28	908721	TORSION SPRING	1
29	651021-00	SHOE LEVER	1
30	884696	RETAINER KIT	1
31	879457	FELT SEAL	1
32	684931	WASHER	1
33	906043	PLATE	1
34	906952	SCREW	2
35	879421	SCREW	1
36	913227	FILTER	1
39	889501	TERMINAL BLOCK	1
40	874289	BRUSH & RETAINER ASY	2
41	882703	SCREW	4
42	801852	SEAL	1
43	882187	SCREW	3
44	878904SV	FAN	1
45	A05447	ARMATURE	1
46	694432	BEARING MOUNT	1
47	847418	SPRING	1
48	906705	INTERMEDIATE PLATE	1
49	330003-17	BEARING,BALL	1
50	908873	FELT SEAL	1
51	912769	SELECTOR	1
53	882704	SCREW	2
54	A05448	FIELD	1
56	A01332	HOUSING-MOTOR	1
57	865321	BRUSH INSULATOR	2

## Parts List for PSE1200-00 Type 1

Item Number	Part Number	Description	Qty Required
58	695077	MOUNTING BRKET TRIAC	1
59	690673	WIRE TIE	2
60	846249	NUT	1
61	906717	PLATE	1
62	908939	SCREW	4
63	891461	CORD & PLUG	1
64	901266	STRAIN RELIEVER	1
880	5140061-28	GREASE	1