



856

41

41A

44

45

43A

43B

38

39

38A

40

29

22

31

23

25

32

34

35

35

34

37

21

19

48

49

37

38

33

27

24

30

26

7

2

5

6

20A

4

14

15

8

9

10

11

12

13

16

14

15

17

18

3A-1

3A-2

3A

Parts List for PT502 Type 0

Item Number	Part Number	Description	Qty Required
1	5140067-67	HOUSING ASSY.	1
1	D25494	GRIP RUBBER PT502	1
2	5140067-68	SPRING	1
3	5140067-69	THROTTLE ASSY.	1
3	5140067-70	PIN	1
3	5140067-71	THROTTLE VALVE	1
4	5140067-72	VALVE SEAT	1
5	5140067-73	EXHAUST DEFLECTOR	1
6	5140067-74	INLET	1
7	5140067-75	MUFFLER ELEMENT	1
8	5140067-76	O-RING	1
9	5140067-77	GUIDE TUBE	1
10	5140067-78	BUSHING	1
11	5140067-79	O-RING	1
12	5140067-80	VALVE	1
13	5140067-81	O-RING	1
14	5140067-82	SPRING	2
15	5140067-83	STEEL BALL	2
16	5140067-84	KNOB	1
17	5140067-85	SCREW	2
18	5140067-86	RETAINER	1
19	5140067-87	TRIGGER PIN	1
20	5140067-88	O-RING	1
21	5140067-89	TRIGGER ASSY.	1
22	5140067-90	ROTOR	1
23	5140067-91	BALL BEARING	1
24	5140067-92	BALL BEARING	1

Parts List for PT502 Type 0

Item Number	Part Number	Description	Qty Required
25	5140067-93	RETAINING RING	1
26	5140067-94	CYLINDER	1
27	5140067-95	DOWEL PIN	1
29	5140067-96	ROTOR BLADE	6
30	5140067-97	FRONT PLATE	1
31	5140067-98	REAR PLATE	1
32	5140067-99	GASKET	1
33	5140068-00	CLAMP WASHER	2
34	5140068-01	FRAME	1
35	5140068-02	PIN	2
37	5140068-03	HAMMER	2
38	5140068-04	CASE	1
38	5140068-05	SEPARATOR	1
39	5140068-06	GASKET	1
40	5140068-07	BUSHING	1
41	5140068-08	SCREW	4
41	5140068-09	SPRING WASHER	4
43	5140068-10	ANVIL	1
43	5140068-11	ANVIL	1
44	5140068-12	RETAINER	1
45	5140068-13	O-RING	1
48	5140068-14	RETAINER	1
49	5140068-15	SCREW	1
50	5140068-16	HELI-COIL	1
856	D26759	KIT TUNE UP PT502	1
856	D25489	KIT TRIGGER REPAIR P	1