



Parts List for PTD501 Type 0

Item Number	Part Number	Description	Qty Required
1	5140051-74	SCREW	1
2	5140051-75	CHUCK	1
3	5140051-76	CLAMP NUT	1
4	5140051-77	SPACER	1
5	5140051-78	BEARING	1
6	5140051-79	GEAR	2
7	5140051-80	PIN	2
8	5140051-81	CAGE	1
9	5140051-82	GEAR	2
10	5140051-83	BALL BEARING	1
11	5140051-84	BEARING	1
12	5140051-85	CAGE	1
13	5140051-86	GEAR	2
14	5140051-87	PIN	2
15	5140051-88	BEARING	1
16	5140051-89	BEARING	1
17	5140051-90	FRONT PLATE	1
18	5140051-91	ROTOR BLADE	5
19	5140051-92	ROTOR	1
20	5140051-93	SPRING PIN	2
21	5140051-94	CYLINDER	1
22	5140051-95	REAR PLATE	1
23	5140051-96	GASKET	1
24	5140051-97	BEARING	1
25	5140051-98	HANDLE	1
26	5140051-99	TRIGGER	1
27	5140052-00	SPRING	1

Parts List for PTD501 Type 0

Item Number	Part Number	Description	Qty Required
28	5140052-01	O-RING	1
29	5140052-02	O-RING	1
30	5140052-03	VALVE BODY	1
32	5140052-04	BUSHING	1
32	5140052-05	SHAFT VALVE	1
33	5140052-06	O-RING	2
34	5140052-07	ADAPTOR	1
35	5140052-08	EXHAUST DEFLECTOR	1
36	5140052-09	SCREW	2
37	5140052-10	SPRING PIN	1
38	5140052-11	HAND GRIP	1
39	5140052-12	PLUG	1
41	5140052-13	HANDLE	1
42	5140052-14	HANDLE,LOCK	1
876	D25328	KIT SERVICE PTD501	1
876	D25318	KIT TRIGGER REPAIR P	1
876	D26762	KIT TUNE UP PTD501	1