

Parts List for PTX2 Type 1

Item Number	Part Number	Description	Qty Required
1	5140070-84	SCREW, PLUG	1
2	5140070-85	O-RING	1
3	5140070-86	O-RING	1
4	5140070-87	AIR REGULATOR	1
5	5140070-88	VALVE SPRING	1
6	5140070-89	O-RING	1
7	5140070-90	VALVE STEM	1
8	5140070-91	O-RING	1
9	5140070-92	MOTOR HOUSING	1
10	5140070-93	BUSHING	1
11	5140070-94	MUFFLER	1
12	5140070-95	INLET	1
13	5140070-96	LEVER	1
14	5140070-97	LEVER PIN	1
15	5140070-98	BEARING	1
16	5140070-99	BEARING PLATE	1
17	5140071-00	LOCATING PIN	1
18	5140071-01	STEEL PLATE	1
19	5140071-02	CYLINDER	1
20	5140071-03	ROTOR	1
21	5140071-04	ROTOR BLADE	4
22	5140071-05	COLLAR	1
23	5140071-06	STEEL PLATE	1
24	5140071-07	LOCATING PIN	1
25	5140071-08	BEARING PLATE	1
26	5140071-09	BALL	1
27	5140071-10	BEARING	1

Parts List for PTX2 Type 1

Item Number	Part Number	Description	Qty Required
28	5140071-11	LOCK RING	1
29	5140071-12	GEAR	1
30	5140071-13	CAP	1
31	5140071-14	HOUSING	1
32	5140071-15	GREASE CAP	1
33	5140071-16	BEARING	1
34	5140071-17	SPINDLE GEAR	1
35	5140071-18	BEARING	1
36	5140071-19	CLAMP NUT	1
37	5140071-20	SPINDLE	1
38	5140071-21	KEY	1
39	5140081-97	COLLET	1
39	5140071-22	COLLET	1
40	5140071-23	COLLET NUT	1
41	5140071-24	WRENCH	1
42	5140071-25	WRENCH	1
43	5140071-26	SHEATH	1