





## Parts List for PW1600-B2 Type 1

Item Number	Part Number	Description	Qty Required
1	JH120001	UPPER HANDLE	1
2	JH120002	HANDLE COVER	1
3	JH120003	HANDLE COVER	1
4	JH120004	HANDLE COVER	1
5	JH120005	CORD WRAP	1
6	JH120006	CONNECTOR TUBE	2
7	JH120007B1	HOUSING,RIGHT	1
8	JH120008	WHEEL COVER	2
9	JH110009	LOCKING NUT	2
10	JH120011	SCREW	6
11	JH110010	WASHER	2
12	JH120012	SCREW	1
13	JH120013	SCREW	33
14	JH120014	WHEEL HUB	2
16	JH110017	RUBBER WASHER	2
17	JH120016	WHEEL SHAFT	1
18	JH120015	TOP COVER	1
19	JH0103	SWITCH	1
20	JH110020	LOCK KNOB	1
21	JH110021	SPRING	1
22	JH110022	WASHER	2
23	JH110023	LOCK WASHER	1
24	JH110024	SWITCH BOX	1
25	JH110025B1	HOUSING,LEFT	1
26	JH110027	SLEEVE	1
28	JH110029AR	PLUG	1
29	JH0120B2	CORD & PLUG	1

## Parts List for PW1600-B2 Type 1

Item Number	Part Number	Description	Qty Required
30	JH110031B1	MOTOR	1
31	JH110028	CORD CLIP	1
32	JH110032B1	TERMINAL	4
33	JH110034	O-RING	1
34	JH110035	CAP	1
35	JH110033	TANK CONNECTION	1
36	JH110037	PVC WASHER	1
38	JH110036	TANK CONNECTION	1
39	JH110039	FILTER ASSY.	1
40	JH110040	CAP	1
41	JH110041	SPRING	1
42	JH110042	DETERGENT BOTTLE	1
45	JH110045	SUPPORT,MOTOR	2
46	JH0058	PLASTIC NUT	1
47	JH0059	FILTER	1
48	JH110048	WATER CONNECTOR	1
49	JH110049	QUICK CONNECT	1
50	JH120050B1	WARNING LABEL	1
51	JH120051	LABEL	1
52	JH120052	LABEL	1
53	JH120053B1	NAME PLATE	1
54	JH120054	SELF TAPPING SCREW	6
56	JH120056	SELF TAPPING SCREW	2
57	JH110038	TUBE	1
58	JH120058	TOOL HOLDER	1
59	JH120059	TOOL HOLDER	1
60	JH0121	HOSE GUN ASSY.	1

## Parts List for PW1600-B2 Type 1

Item Number	Part Number	Description	Qty Required
61	JH110061	CONNECTOR TUBE	1
63	JH110063	WATER OUTLET COVER	1
65	JH110065	WAND / LANCE	1
66	JH0123	TURBO WAND	1
67	JH110067	PRESSURE HOSE	1
68	JH0132	O-RING	2
69	JH120069	HARDWARE BAG	1
70	JH0125	CLEAN OUT PIN	1
73	JH120073B1	PUMP ASSY.	1
75	JH110018	O-RING	1
76	JH110026B1	LABEL	1
101	JHMP0001	MOTOR SHROUD	1
102	JHMP0002	FAN HOOP	1
103	JHMP0003	FAN	1
104	JHMP0004	LOCK WASHER	1
105	JHMP0005	SCREW	4
106	JHMP0006	MOTOR CAP	1
107	JHMP0007AR	STATOR	1
108	JHMP0008	TUBING	3
109	JHMP0009	NYLON LOCKER	1
110	JHMP0010	TERMINAL	4
111	JHMP0011	CAP	4
112	JHMP0012	BEARING	1
113	JHMP0013AR	ROTOR	1
114	JHMP0014	OIL SEAL	2
115	JHMP0015	SCREW	1
116	JHMP0016	SCREW	1

## Parts List for PW1600-B2 Type 1

Item Number	Part Number	Description	Qty Required
117	JHMP0017	FRONT CAP	1
118	JHMP0018	BEARING	1
119	JHMP0019	HEX BOLT	3
120	JHMP0020	O-RING	1
121	JHMP0021	WOBBLE PLATE	1
122	JHMP0022	THRUST BEARING	1
123	JHMP0023	SCREW	1
124	JHMP0024	PISTON ASSY	3
125	JHMP0025	SPRING PISTON	3
126	JHMP0026	PUMP BODY	1
127	JHMP0027	OIL SEAL	3
128	JHMP0028	RETAINER,SEAL	3
129	JHMP0029	RETAINER RING	3
130	JHMP0030	SEAL	3
131	JHMP0031	LOCK WASHER	3
132	JHMP0032	CHECK VALVE ASSY	3
133	JHMP0033	VALVE ASSEMBLY	1
134	JHMP0034	SEAL	1
135	JHMP0035	GROMMET	1
136	JHMP0036	SWITCH BOX	1
137	JHMP0037AR	SWITCH	1
138	JHMP0038AR	CAPACITOR	1
139	JHMP0039	SEAL	1
140	JHMP0040	SWITCH COVER	1
141	JHMP0041	COVER	1
142	JHMP0042	VALVE ASSY	1
143	JHMP0043	WATER OUTLET	1

## Parts List for PW1600-B2 Type 1

Item Number	Part Number	Description	Qty Required
144	JHMP0044	O-RING	1
145	JHMP0045	NOZZLE	1
146	JHMP0046	CHECK VALVE ASSY	1
147	JHMP0047	HEX SCREW	4
148	JHMP0048	COVER	1
149	JHMP0049	PIN	1
150	JHMP0050	O-RING	3
151	JHMP0051	SCREW	1
152	JHMP0052	O-RING	1
153	JHMP0053	PUMP BODY	1
154	JHMP0054	RING	1
155	JHMP0055	WATER INLET	1
156	JHMP0056	HEX HEAD SCREW	4
157	JHMP0057	HEX HEAD SCREW	4
158	JHMP0058	LEAD	1
159	JHMP0059AR	CORD	1
160	JHMP0060AR	TERMINAL	2
161	JHMP0061AR	COVER	2
162	JHMP0062	WASHER	3
163	JHMP0063	SPRING	1
164	JHMP0064	STEEL BALL	1
165	JHMP0065	O-RING	1