



Parts List for PW22-B2C Type 1

Item Number	Part Number	Description	Qty Required
1	5140137-33	ACCESSORY CARRIER	1
2	5140137-59	CASING	1
3	5140137-60	GUARD	1
4	5140137-23	HANDLE	1
5	5140137-28	KNOB	1
6	5140137-13	KNOB	1
7	5140137-57	SWITCH	1
8	5140137-47	BRACKET	1
9	5140137-52	SUCTION KIT	1
10	5140137-12	TSS BOX ASSY.	1
11	5140137-53	DELIVERY KIT	1
12	5140138-65	PUMP ASSEMBLY	1
13	5140137-46	SUPPORT	1
14	5140137-14	ACCESSORY CARRIER	1
15	5140137-31	CONVEYOR	1
16	5140137-51	CAPACITOR	1
17	5140137-45	LEVER	1
18	5140137-24	SUPPORT	1
19	5140137-27	SUPPORT	1
20	5140137-22	PLATE	1
21	5140137-39	HIGH PRESSURE HOSE	1
22	5140137-41	FORK	1
23	5140137-32	FITTING	1
24	5140137-38	FORK	1
25	5140137-40	PLUG	1
26	5140137-25	SUPPORT	1
27	5140137-29	SUPPORT	1

Parts List for PW22-B2C Type 1

Item Number	Part Number	Description	Qty Required
28	5140137-26	SUPPORT	1
29	5140137-44	DETERGENT HOSE	1
30	5140137-48	PLUG	1
31	5140137-49	DETERGENT HOSE	1
32	5140136-98	FILTER	1
33	5140137-15	TANK	1
34	5140137-61	WHEEL	2
35	5140137-16	GUARD	1
36	5140136-97	GROMMET	1
37	5140137-17	BASE	1
38	5140137-37	GUARD	1
39	5140138-66	CORDSET	1
40	5140137-18	LUBRICATOR	1
41	5140137-19	NOZZLE CLEANING TOOL	1
42	5140137-20	ACCESSORY CARRIER	2
43	5140137-21	DOOR	1
44	5140137-30	GUARD	1
46	5140137-43	EXTENSION	1
47	5140137-56	SCREW KIT	1
48	5140137-08	DETERGENT KIT	1
49	5140137-07	WATER SEAL KIT	1
50	5140137-09	PISTON SEAL KIT	1
51	5140137-55	TSS KIT	1
52	5140125-97	WATER COUPLING KIT	1
53	5140137-34	ACCESSORY CARRIER	1
54	5140126-60	QUICK COUPLING	1
101	5140138-15	GUN	1

Parts List for PW22-B2C Type 1

Item Number	Part Number	Description	Qty Required
102	5140138-19	LANCE HEAD	1
103	5140138-63	LANCE	1
104	5140138-64	LANCE AND ROTOPOWER	1
105	5140138-18	HIGH PRESSURE HOSE	1
106	5140137-10	GASKET KIT	1
107	5140138-42	TUBE CLIP	1